



CITROËN BX Series II

ORIGINAL PARTS

1 July 1986 >
O R G A 3 5 2 2 >

BX



Legend

how to read the fiche? 4
ORGA numbers 5

Engine

camshaft 49-54
connecting rods, rings 46-48
cooling fan 78-80
crankcase 22-30
crankshaft 40-45
cylinder head 9-13
cylinder head cover 16-17
cylinder head plugs and securing 14-15
gasket kit 6-8
injection device 63-64
mixture control unit 65-67
oil filler and breather 72-75
oil pump and filter 68-71
oil sump 35-39
timing belt shields 31-34
valve adjusting pieces 59-62
valves, tappets 55-58
water outflow 18-21
water pump 76-77

Gearbox

automatic gearbox, complete 81
differential 103
gearbox casing and fastening 84
gearbox cooling 87-89
gearbox lower components 90-91
gearchange control 99-101
gearchange lever bellow 102
kickdown cable 97-98
manual gearbox housing 83
manual gearbox, complete 82

primary shaft, pinions, sync 93-94
secondary shaft, gears, sync 92
spindles and forks 95-96
tacho control, axle housing 85-86

Engine Equipment

accelerator control 113-115
additional air circuit 127-129
air filter 119
air filter and carburettor union 124
air filter and ducts 120-122
air filter and injection body union 123
air intake, throttle valve housing 104-107
alternator 151
alternator belt fastening 152-153
alternator components 154-155
assy distributor 138-140
automatic clutch 148-150
clutch 147
distribution pipe, throttle casing 108-112
exhaust pipe 130-132
ignition distributor 133-137
ignition harness, spark plugs, coil 141-146
mixer, inlet air heating 125-126
monopoint injection body 116-118
starter 156-157
starter details 160-162
starter motor fastening 158-159

Hydraulics and Running Gear

anti-roll bars, connecting rods 205-206
arm, front 188
arm, rear 195-196
flow distributor valve 217
front pivots and hubs 189-190
height correctors 203-204
hp pump 163

hp pump bracket 164-165
lhm tank 170
manual height control 207-208
pas valve 215-216
piping brackets 181-183
plate bracket 184-185
pressure regulator bracket 168
pressure regulator, accumulator 166-167
rear axle, flexible mounts 197
return piping 177-180
safety valve 169
sheath collar 186-187
steering box and rack 213-214
steering box and rods 211-212
steering wheel, ignition lock 209-210
supply piping, brake (abs) 173-174
supply piping, steering and brake 175-176
supply piping, suspension 171-172
suspension cylinder components, front 200
suspension cylinder, front 198-199
suspension cylinder, rear 201-202
wheel caps 192-193
wheels, alloy 194
wheels, steel 191

Brakes and Transmission

abs computer, relays, brackets 231
abs hydraulic unit 229
abs sensors, brackets 230
brake calipers and disks, front 224-225
brake calipers and disks, rear 226-227
brake control valve 228
driveshafts 221-223
handbrake 232
pedal gear (brake) 220
pedal gear (brake, clutch) 218-219

Electrical Equipment

aerial, statics suppressor 299-300
 battery 279
 connectors, clip holder 256-260
 connectors, clips, tongues 262
 connectors, tongue holder 261
 doors open indicator 273
 electronic modules, dashboard 297
 electronic modules, under hood 298
 fog lights, front 281
 horn 293
 instrument panel 269-272
 instrument panel accessories 277
 instrument panel and console accessories 278
 lamp kit 266
 lighting, front 280
 lighting, interior 285
 lighting, rear 282-284
 lighting, sunroof 286
 mainboard 296
 relays, fuses 294-295
 speedo cable 267-268
 switches, instrument panel 275-276
 switches, lighting 287
 switches, window regulator 274
 window washer, front 291
 window washer, rear 292
 window wiper, front 288
 window wiper, rear 289-290
 wiring harness, antipollution device 238
 wiring harness, brake 240-241
 wiring harness, doors 249
 wiring harness, engine 235-237
 wiring harness, fascia panel console 242-247
 wiring harness, front face 233
 wiring harness, ignition 239
 wiring harness, interior lamps 248
 wiring harness, intermediate right lights 250-253
 wiring harness, main 234
 wiring harness, rear lights 254
 wiring harness, tailgate 255
 wiring securing 263-265

Engine Environment and Misc

air conditioning, blower 359
 air conditioning, circuit 357-358
 air conditioning, compressor 351-356
 air conditioning, inlet casing 360
 air inlets 370
 bumper, front 345-347
 bumper, radiator grille 361
 bumper, rear 348-350
 catalytic converter 328-330
 cooling radiator 340-344
 engine bracket 301-302
 engine bracket, securing 303-305
 evaporator, pressure relief valve 366
 exhaust heat shields 327
 exhaust silencer 325-326
 fuel filling pipes and ducts 316-318
 fuel piping 306-308
 fuel piping, securing 311-314
 fuel pump, filter 309-310
 fuel tank 315
 fuel tank piping, anti-pollution 320-324
 fuel tank, anti-pollution 319
 heater unit 362
 heater unit, radiator 363
 heating and ventilation control 364-365
 ventilation box and ducts 368-369
 ventilation ducts and nozzles 367
 water piping, securing 337-339
 water piping, thermostat 331-336

Appendix

cross reference, engine and gearbox 375-379
 cross reference, engine equipment 380-382
 cross reference, hydraulics and running gear 383
 paint colors 372
 symbols 373-374
 vehicle type 371

Legend *How to read the fiche?*

A fiche set consists of several fiche sheets, each depicting a large number (200 or more) of individual fiche pages. Each page has its own *drawing number*, referenced from the cross reference charts in the Appendix.

The left column shows the components with reference numbers while the right column gives model information and the actual descriptions and Citroën part numbers for all referenced, individual parts.

Market ▼ Page

Publication date 22/03/2060 GB L03 ↑ 15/05/2000

Set ID (MIC) 0269 03 **4410** 10 **STEERING WHEEL CAP COLUMN JACKET** ◀ Description

Page number if the component list spans several pages

PAGE ↑ Sheet ▲ Cross reference no. [See Appendix]

Reference numbers

TC 0 95591 ◀ Applicable models, subsystems or ORGA numbers [see next page]

NOTA: FOR VEHICLE WITH RADIO EQUIPMENT OR SPEED GOVERNOR NO PUT UP 05 AND 31 ◀ Remarks

1	96 007 824 ET	01	STEERING WHEEL	◀ Part name and specification
	NFP		ET DARK TURTLE-DOVE	
			TO O 04982	◀ ORGA numbers [see next page]
	96 007 824 TP	01	TR BITUMEN GREY	
	NFP		TO O 05284	
	96 007 824 LE	01	LE DARK SODALITE BLUE	
	96 007 824 XX	01	XX BLACK	
			TC O 05284	
	96 068 183 XX	01	AVEC COUSSIN	
	RP 96 068 133 ZL	01	ZL HURRICANE GREY	
			FROM O 05285	
	96 068 183 ZL	01	AVEC COUSSIN	
			COC3 LEATHER	
			ZL HURRICANE GREY	
			FROM O 05285	
2	95 640 016 ET	01	CUSHIONING PAD	
	NFP		NU	
			ET DARK TURTLE-DOVE	
			RMP 95637742ET TO O 04982	
	95 640 016 TR	01	TR BITUMEN GREY	
	NFP		RMP 95637742TR TO O 05284	
	95 637 742 LE	01	COMPLET	
	RP 95 640 016 I.E	01	LE DARK SODALITE BLUE	
			RMP 96007696TR	
	95 640 016 XX	01	XX BLACK	
			RMP 95637742XX TO O 05284	

▲ Citroën part numbers (new and old)

▲ Reference numbers ▲ Quantity

Other pages follow ▼



Legend ORGA Numbers

The organization number shows the day when your car was actually assembled on the production line. The dealers and parts stores use this number (sometimes also called RP or Replacement Parts number) to identify the various parts and components fitted to your car.

On your car, the ORGA number can be found stamped on the left hand front door A-pillar, above the courtesy light switch.

Calculating the production date is very easy using the following table. Locate the largest number in the table still less than or equal to your organization number.

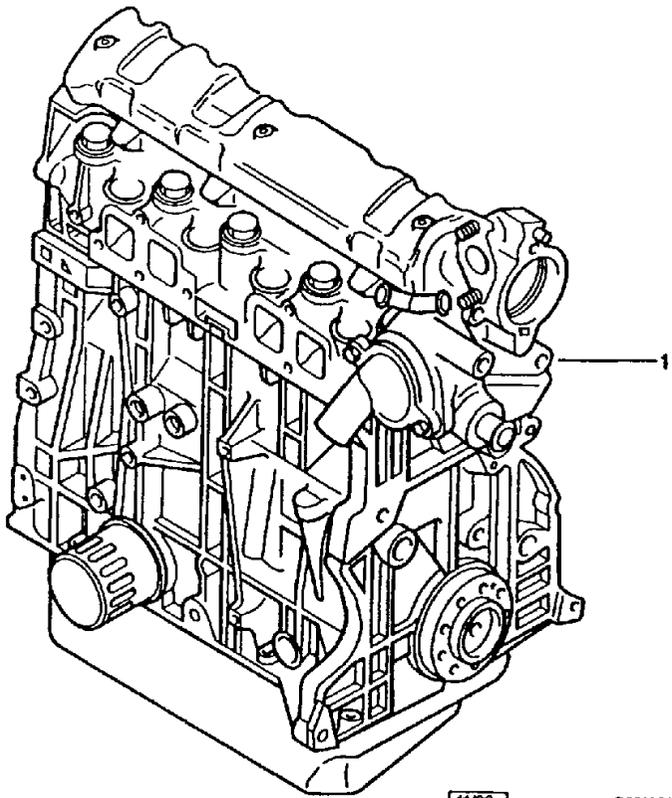
To see an example, let's assume the number is **4859**. Then the largest number

will be **4832** in the cell **February 1990**. Just subtract this number from your organization number to get the day of the month of the production of your car (in our example, $4859 - 4832 = 27$ yields **February 27, 1990**).

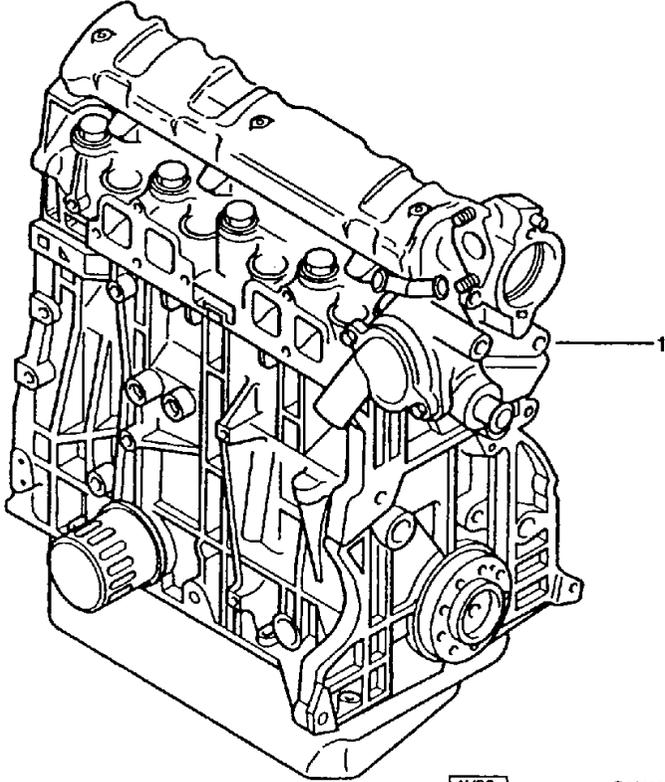
If you receive the non-existent date zero (this happens when your organization number is not greater than but equal to the number in the table), simply take the last day of the previous month. For instance, for the organization number **5013** the largest number in the table is **5013** in the cell **August 1990**, subtraction results in **zero**, hence the production date is **July 31, 1990**.

	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sep	Oct	Nov	Dec
1982	1879	1910	1938	1969	1999	2030	2060	2091	2122	2152	2183	2213
1983	2244	2275	2303	2334	2364	2395	2425	2456	2487	2517	2548	2578
1984	2609	2640	2669	2700	2730	2761	2791	2822	2853	2883	2914	2944
1985	2975	3006	3034	3065	3095	3126	3156	3187	3218	3248	3279	3309
1986	3340	3371	3399	3430	3460	3491	3521	3552	3583	3613	3644	3674
1987	3705	3736	3764	3795	3825	3856	3886	3917	3948	3978	4009	4039
1988	4070	4101	4130	4161	4191	4222	4252	4283	4314	4344	4375	4405
1989	4436	4467	4495	4526	4556	4587	4617	4648	4679	4709	4740	4770
1990	4801	4832	4860	4891	4921	4952	4982	5013	5044	5074	5105	5135
1991	5166	5197	5225	5256	5286	5317	5347	5378	5409	5439	5470	5500
1992	5531	5562	5591	5622	5652	5683	5713	5744	5775	5805	5836	5866
1993	5897	5928	5956	5987	6017	6048	6078	6109	6140	6170	6201	6231
1994	6262	6293	6321	6352	6382	6413	6443	6474	6505	6535	6566	6596
1995	6627	6658	6686	6717	6747	6778	6808	6839	6870	6900	6931	6961
1996	6992	7023	7052	7083	7113	7144	7174	7205	7236	7266	7297	7327
1997	7358	7389	7417	7448	7478	7509	7539	7570	7601	7631	7662	7692
1998	7723	7754	7782	7813	7843	7874	7904	7935	7966	7996	8027	8057
1999	8088	8119	8147	8178	8208	8239	8269	8300	8331	8361	8392	8422
2000	8453	8484	8512	8543	8573	8604	8634	8665	8696	8726	8757	8787
2001	8819	8850	8878	8909	8939	8970	9000	9031	9062	9092	9123	9153
2002	9184	9215	9243	9274	9304	9335	9365	9396	9427	9457	9488	9518

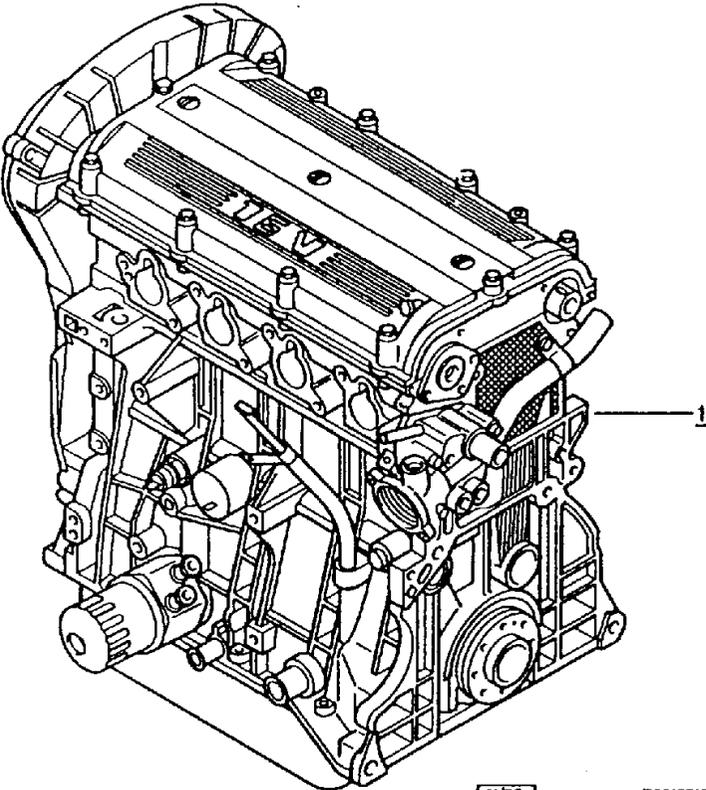
Engine Gasket kit

<p>30/01/98 GB C02 ↑ 30706798 1235 01 0010 20 PAGE 1</p>	<p>ENGINE - GASKET KIT</p>	<p>16 TZI</p>																		
 <p style="text-align: right;">D0010250</p> <p style="text-align: right;">E0G10200</p>		<p>THE ENGINE IS SUPPLIED WITHOUT: FLYWHEEL, CLUTCH, EXHAUST PIPE, IGNITION DISTRIBUTOR, STARTER, ALTERNATOR, PETROL PUMP, SINGLE POINT INJECTION BODY</p> <table border="1"> <tr> <td data-bbox="1272 510 1500 590"> <p>1 95 654 088 01</p> </td> <td data-bbox="1500 510 2105 590"> <p>NEW ENGINE REP:BDZ UP TO O 5256</p> </td> </tr> <tr> <td data-bbox="1272 590 1500 670"> <p>95 659 650 01 RP 95 662 976 01</p> </td> <td data-bbox="1500 590 2105 670"> <p>REP:BDY SINCE O 5257 UP TO O 5545</p> </td> </tr> <tr> <td data-bbox="1272 670 1500 766"> <p>95 662 976 01</p> </td> <td data-bbox="1500 670 2105 766"> <p>REP: BDY REPERE BDY SINCE O 5546</p> </td> </tr> <tr> <td colspan="2" data-bbox="1272 766 2105 798"> <p>ENGIN GASKT KIT</p> </td> </tr> <tr> <td data-bbox="1272 798 1500 861"> <p>2 95 614 597 01 RP 0197 H7 01</p> </td> <td data-bbox="1500 798 2105 861"> <p>A003 WITH ASBESTOS</p> </td> </tr> <tr> <td data-bbox="1272 861 1500 893"> <p>0197 H7 01</p> </td> <td data-bbox="1500 861 2105 893"> <p>A005 WITHOUT ASBESTOS</p> </td> </tr> <tr> <td colspan="2" data-bbox="1272 893 2105 925"> <p>VALV GASKET KIT</p> </td> </tr> <tr> <td data-bbox="1272 925 1500 989"> <p>3 95 614 598 01 RP 0197 H6 01</p> </td> <td data-bbox="1500 925 2105 989"> <p>A003 WITH ASBESTOS</p> </td> </tr> <tr> <td data-bbox="1272 989 1500 1021"> <p>0197 H6 01</p> </td> <td data-bbox="1500 989 2105 1021"> <p>A005 WITHOUT ASBESTOS</p> </td> </tr> </table>	<p>1 95 654 088 01</p>	<p>NEW ENGINE REP:BDZ UP TO O 5256</p>	<p>95 659 650 01 RP 95 662 976 01</p>	<p>REP:BDY SINCE O 5257 UP TO O 5545</p>	<p>95 662 976 01</p>	<p>REP: BDY REPERE BDY SINCE O 5546</p>	<p>ENGIN GASKT KIT</p>		<p>2 95 614 597 01 RP 0197 H7 01</p>	<p>A003 WITH ASBESTOS</p>	<p>0197 H7 01</p>	<p>A005 WITHOUT ASBESTOS</p>	<p>VALV GASKET KIT</p>		<p>3 95 614 598 01 RP 0197 H6 01</p>	<p>A003 WITH ASBESTOS</p>	<p>0197 H6 01</p>	<p>A005 WITHOUT ASBESTOS</p>
<p>1 95 654 088 01</p>	<p>NEW ENGINE REP:BDZ UP TO O 5256</p>																			
<p>95 659 650 01 RP 95 662 976 01</p>	<p>REP:BDY SINCE O 5257 UP TO O 5545</p>																			
<p>95 662 976 01</p>	<p>REP: BDY REPERE BDY SINCE O 5546</p>																			
<p>ENGIN GASKT KIT</p>																				
<p>2 95 614 597 01 RP 0197 H7 01</p>	<p>A003 WITH ASBESTOS</p>																			
<p>0197 H7 01</p>	<p>A005 WITHOUT ASBESTOS</p>																			
<p>VALV GASKET KIT</p>																				
<p>3 95 614 598 01 RP 0197 H6 01</p>	<p>A003 WITH ASBESTOS</p>																			
<p>0197 H6 01</p>	<p>A005 WITHOUT ASBESTOS</p>																			

Engine Gasket kit

30/01/98 GB C03 1235 01 0010 30 PAGE 1	30/06/98 ENGINE - GASKET KIT	19 TRI 19 TZI GTI	
 <p style="text-align: right;">1</p> <p style="text-align: center;">11/96 00010250</p>		THE ENGINE IS SUPPLIED WITHOUT: FLYWHEEL, CLUTCH, EXHAUST PIPE, IGNITION DISTRIBUTOR, STARTER, ALTERNATOR, PETROL PUMP / THE ENGINE IS SUPPLIED WITH A SHEET METAL OIL SUMP. FOR AIR CONDITIONED VEHICLE, TAKE BACK THE ALUMINIUM SUMP ON THE VEHICLE (SEE TECHNICAL NOTE 0 - NR 7 DATED JULY, 12, 1984)	
		1 95 619 527 RP 0135 Q2 95 650 883 RP 95 662 978 95 662 977 RP 0135 Q2 95 662 978	01 NEW ENGINE 01 RAPVOL 8,4 REP DFZ 01 -SALOON 19 TRI -SALOON 19 TZI UP TO O 5545 01 REP DKZ 01 -ESTATE 19 TRI -ESTATE 19 TZI UP TO O 5545 -GTI UP TO O 5545 01 REP:DFZ 01 -SALOON 19 TZI SINCE O 5546 01 REP: DKZ REPERE DKZ -ESTATE 19 TZI SINCE O 5546 -GTI SINCE O 5546 01 ENGIN GASKT KIT 01 A003 WITH ASBESTOS 0197 H7 01 A005 WITHOUT ASBESTOS 01 VALV GASKET KIT 01 A003 WITH ASBESTOS 0197 H6 01 A005 WITHOUT ASBESTOS
E0610300			

Engine Gasket kit

<p>30/01/98 GB C04 ↑ 1235 01 0010 40 PAGE 1</p>	<p>30/06/98 ENGINE - GASKET KIT</p>	<p>GTI 16V</p>																													
 <p style="text-align: center;">11/96 D0010310</p> <p style="text-align: right;">EGG10400</p>		<p>THE ENGINE IS SUPPLIED WITHOUT: FLYWHEEL, CLUTCH, EXHAUST PIPE, IGNITION DISTRIBUTOR, STARTER, ALTERNATOR</p> <table border="1" data-bbox="1265 478 2092 813"> <tr> <td data-bbox="1265 478 1288 502">1</td> <td data-bbox="1288 478 1489 502">95 646 306</td> <td data-bbox="1489 478 1512 502">01</td> <td data-bbox="1512 478 2092 534">NEW ENGINE REP DFW REPERE DFW</td> </tr> <tr> <td data-bbox="1265 574 1288 598">2</td> <td data-bbox="1288 574 1489 598">95 625 018</td> <td data-bbox="1489 574 1512 598">01</td> <td data-bbox="1512 574 2092 598">ENGIN GASKT KIT</td> </tr> <tr> <td></td> <td data-bbox="1288 598 1489 622">RP 0197 J3</td> <td data-bbox="1489 598 1512 622">01</td> <td data-bbox="1512 598 2092 622">A003 WITH ASBESTOS</td> </tr> <tr> <td></td> <td data-bbox="1288 646 1489 670">0197 J3</td> <td data-bbox="1489 646 1512 670">01</td> <td data-bbox="1512 646 2092 670">A005 WITHOUT ASBESTOS</td> </tr> <tr> <td data-bbox="1265 718 1288 742">3</td> <td data-bbox="1288 718 1489 742">95 625 019</td> <td data-bbox="1489 718 1512 742">01</td> <td data-bbox="1512 718 2092 742">VALV GASKET KIT</td> </tr> <tr> <td></td> <td data-bbox="1288 742 1489 766">RP 0197 J2</td> <td data-bbox="1489 742 1512 766">01</td> <td data-bbox="1512 742 2092 766">A003 WITH ASBESTOS</td> </tr> <tr> <td></td> <td data-bbox="1288 790 1489 813">0197 J2</td> <td data-bbox="1489 790 1512 813">01</td> <td data-bbox="1512 790 2092 813">A005 WITHOUT ASBESTOS</td> </tr> </table>		1	95 646 306	01	NEW ENGINE REP DFW REPERE DFW	2	95 625 018	01	ENGIN GASKT KIT		RP 0197 J3	01	A003 WITH ASBESTOS		0197 J3	01	A005 WITHOUT ASBESTOS	3	95 625 019	01	VALV GASKET KIT		RP 0197 J2	01	A003 WITH ASBESTOS		0197 J2	01	A005 WITHOUT ASBESTOS
1	95 646 306	01	NEW ENGINE REP DFW REPERE DFW																												
2	95 625 018	01	ENGIN GASKT KIT																												
	RP 0197 J3	01	A003 WITH ASBESTOS																												
	0197 J3	01	A005 WITHOUT ASBESTOS																												
3	95 625 019	01	VALV GASKET KIT																												
	RP 0197 J2	01	A003 WITH ASBESTOS																												
	0197 J2	01	A005 WITHOUT ASBESTOS																												

Engine Cylinder head

30/01/98 GB C05 1235 01 1120 20 PAGE 1	30/06/98 CYLINDER-HEAD	16 TZI	
<p>1230 [09/88] 01-1120-20</p>		1 95 643 847 RP 0200 F2	01 CYLINDER-HEAD 01
		2 91 538 611 RP 0209 E1	01 CYL HEAD GASKET 01
		91 538 612 RP 0209 L3	01 *16TRS 01
		0209 L3	01 A003 WITH ASBESTOS 01 COTE REPARATION
		0209 L3	01 CR 01 A005 WITHOUT ASBESTOS 01 SINCE O 3765 01 REPARATION
		3 75 415 836 RP 0232 23	01 WELCH-PLUG 01 DIAM 35
		4 75 413 621 RP 0232 24	03 DIAM 30 01
		5 91 511 858 RP 0205 16	01 SCREW SPACER EP 22 01
		6 91 000 754 RP 0250 20	10 STUD 01 7X1,00-52 01 UP TO O 5256
		96 054 867 RP 0355 37	10 8X125-36 01 SINCE O 5257
		7 79 03 027 282 RP 1923 16	08 8X125-41 01
		8 79 03 027 211 RP 0355 32	06 DIAM 8X1,25-49 01
9 96 042 101 RP 1168 04	01 CAM LUBE RAIL 01		
10 91 516 731 RP 1186 08	02 HOISTING HOOK 01		
11 91 517 257 RP 1186 08	01 FILTER ELEMENT 01		
12 96 007 553 RP 1166 21	05 RING-SEAL DIAM INT 5,10 01		
E1.20200	.../...		

Engine Cylinder head

<p>30/01/98 GB C06 ↑ 1235 01 1120 20 PAGE 2</p>	<p>30/06/98 CYLINDER-HEAD</p>	<p>16 TZI</p>	
<p>1230 [06/98] 01-1120-20</p>		<p>13 96 005 977 RP 0204 57</p> <p>14 79 03 101 154 RP 6922 C8</p> <p>15 96 005 979 RP 0205 20</p> <p>16 79 03 053 390</p> <p>17 79 03 057 005 RP 6962 13</p> <p>18 79 03 032 036 RP 6932 05</p>	<p>10 CYL-HEAD SCREW 11X1,50-175 01</p> <p>02 CAPSCREW 8X1,25-16 01</p> <p>10 SCREW WASHER EP 8 01</p> <p>10 PLAIN WASHER 7X14-1,5</p> <p>01 FLEXIBLE WASHER DIAM 8X14 01</p> <p>01 HEXAGONAL NUT DIAM 7X100 01</p>
<p>E1120200</p>			

Engine Cylinder head

30/01/98 GB C07 ↑ 1235 01 1120 30 PAGE 1	30/06/98 CYLINDER-HEAD	19 TRI 19 TZI GTI	
		1 95 641 125 RP 0200 G9	01 CYLINDER-HEAD 01 -SALOON 19 TRI 01 -SALOON 19 TZI
		95 643 847 RP 0200 F2	01 -ESTATE 19 TRI 01 -ESTATE 19 TZI -GTI
		CYL HEAD GASKET	
		2 91 538 611 RP 0209 E1	01 01
		91 538 612 RP 0209 L3 0209 L3	01 A003 WITH ASBESTOS 01 COTE REPAIRATION 01 CR 01 A005 WITHOUT ASBESTOS SINCE O 3765 REPAIRATION
		WELCH-PLUG	
		3 75 415 836 RP 0232 23	01 01 DIAM 35
		4 75 413 621 RP 0232 24	03 01 DIAM 30
		5 91 511 858 RP 0205 16	01 SCREW SPACER EP 22 01
		STUD	
6 91 000 754 RP 0250 20	10 01 7X1,00-52		
7 79 03 027 282 RP 1923 16	08 01 8X125-41		
8 79 03 027 211 RP 0355 32	06 01 DIAM 8X1,25-49		
9 96 042 101 RP 1168 04	01 CAM LUBE RAIL 01		
HOISTING HOOK			
10 91 516 731	02 UP TO O 4982		
96 067 758 RP 1880 45	02 SINCE O 4983 01		

E1.20300

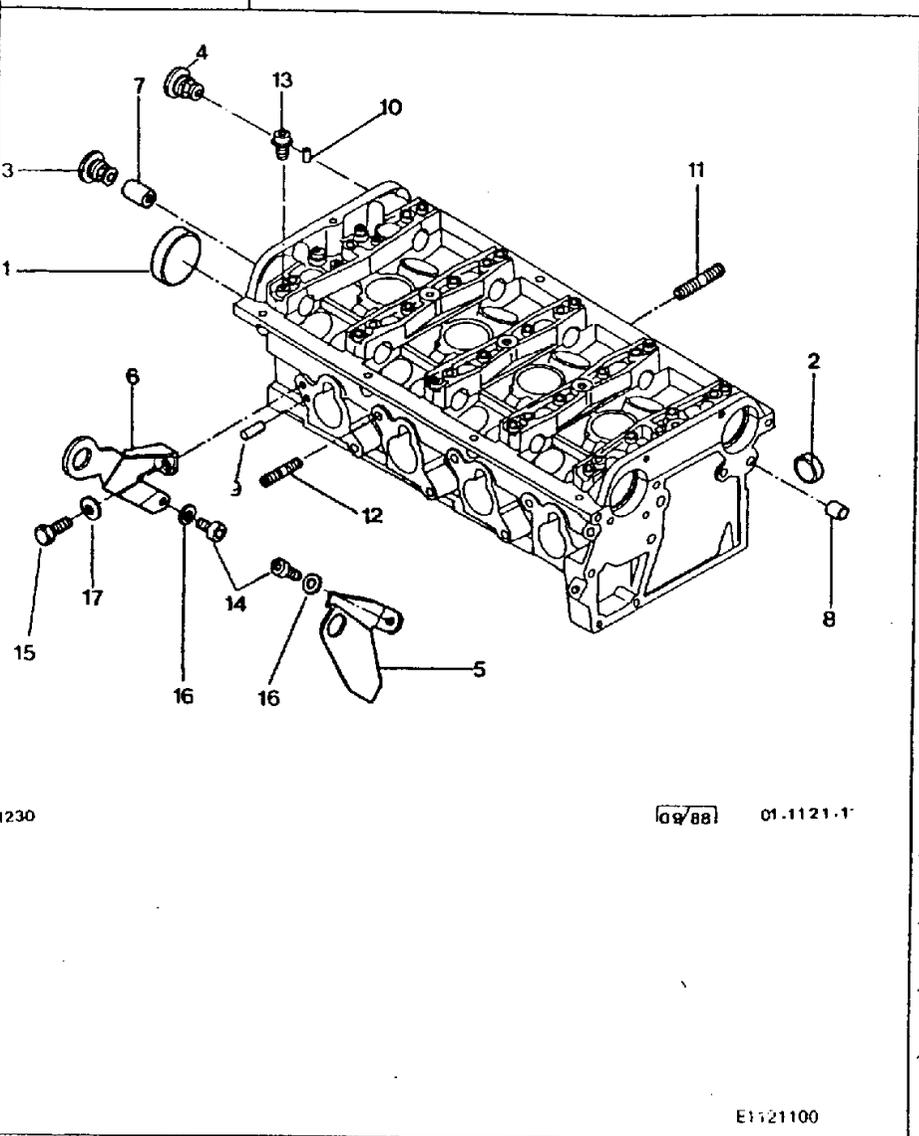
Engine Cylinder head

<p>30/01/98 GB C08 † 1235 01 1120 30 PAGE 2</p>	<p>30/06/98 CYLINDER-HEAD</p>	<p>19 TRI 19 TZI GTI</p>	
		<p>11 91 517 257 RP 1186 08</p> <p>12 96 007 553 RP 1166 21</p> <p>13 96 005 977 RP 0204 57</p> <p>14 79 03 101 154 RP 6922 C8</p> <p>15 96 005 979 RP 0205 20</p> <p>16 79 03 053 390</p> <p>17 79 03 057 005 RP 6962 13</p> <p>18 79 03 032 036 RP 6932 05</p>	<p>01 FILTER ELEMENT 01</p> <p>05 RING-SEAL DIAM INT 5,10 01</p> <p>10 CYL-HEAD SCREW 11X1,50-175 01</p> <p>02 CAPSCREW 8X1,25-16 01</p> <p>10 SCREW WASHER EP 8 01</p> <p>10 PLAIN WASHER 7X14-1,5</p> <p>01 FLEXIBLE WASHER DIAM 8X14 01</p> <p>01 HEXAGONAL NUT DIAM 7X100 01</p>
<p>E1120300</p>			

Engine Cylinder head

<p>30/01/98 GB C09 ↑ 1235 01 1120 40 PAGE 1</p>	<p>30/06/98 CYLINDER-HEAD</p>	<p>GTI 16V</p>	
<p>1230</p> <p style="text-align: right;">09/88</p> <p style="text-align: right;">01 1120 31</p>	<p>1 95 618 928 RP 0200 65</p> <p>2 91 538 612 RP 0209 L3</p> <p>94 560 051 80 RP 0209 N2</p> <p>3 96 005 977 RP 0204 57</p> <p>4 96 005 978 RP 0205 28</p> <p>5 91 540 028 RP 1168 05</p> <p>6 96 007 553 RP 1166 21</p> <p>7 79 03 067 051 RP 6965 20</p> <p>8 91 517 257 RP 1186 08</p>	<p>01 CYLINDER-HEAD 01</p> <p>CYL HEAD GASKET</p> <p>01 01</p> <p>01 COTE REPARATION +0,2 01</p> <p>10 CYL-HEAD SCREW 11X1,50-175 01</p> <p>10 SCREW SPACER DIAM 12,05X22-20 01</p> <p>01 CAM LUBE RAIL 01</p> <p>11 RING-SEAL DIAM INT 5,10 01</p> <p>02 PIN 7X14 01</p> <p>01 FILTER ELEMENT 01</p>	
<p>E1120400</p>			

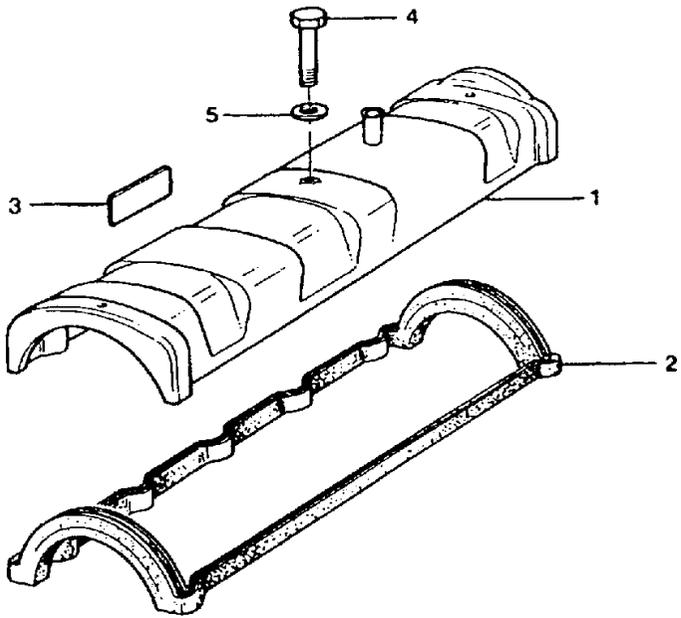
Engine *Cylinder head plugs and securing*

30/01/98 GB C10 ↑ 1235 01 1121 10 PAGE 1	30/05/98 CYLINDER-HEAD PLUGS AND SECURING	GTI 16V	
 <p style="text-align: right;">1230 08/88 01.1121.1</p> <p style="text-align: right;">E1121100</p>		1 79 03 075 007 RP 0153 05 2 79 03 075 018 RP 0232 15 3 96 029 207 RP 0232 25 4 96 029 208 RP 0232 29 5 91 540 792 6 96 020 450 RP 1880 41 7 91 540 644 RP 0235 04 8 91 595 279 RP 0232 34 9 79 03 067 051 RP 6965 20 10 79 03 067 116 RP 6965 19 11 96 002 516 RP 0355 54 12 79 03 027 028 RP 6929 52 13 91 595 295 RP 6913 P5 14 79 030 090 80 RP 6913 06 15 79 03 201 150 RP 6917 03	01 MANIFOLD PLUG DIAM 42X15 01 03 EXPANDING PLUG DIAM 20X4 01 03 CYL-HEAD PLUG 01 01 ADM DIAM 14X1,25 01 01 HOISTING HOOK 01 01 VALVE 01 03 CYLDR BLOCK PIN DIAM 9,8X8 01 02 PIN 01 7X14 10 4X9 01 09 STUD 01 8X125-28-20-10-16 02 8X125-58 01 24 SCREW 6X100-30 01 02 SOCKET SCREW 6X100-16 01 01 CAPSCREW DIAM 8X1,25 - 20 01

Engine *Cylinder head plugs and securing*

<p>30/01/98 GB C11 ↑ 1235 01 1121 10 PAGE 2</p>	<p>30/06/98 CYLINDER-HEAD PLUGS AND SECURING</p>	<p>GTI 16V</p>	
<p>1230</p> <p>109/88 01.11.21.1</p>		<p>16 79 03 057 013 02 RP 6962 04 01</p> <p>17 79 03 057 005 01 RP 6962 13 01</p>	<p>FLEXIBLE WASHER 6,4X12-0,5</p> <p>DIAM 8X14</p>
<p>E1121100</p>			

Engine Cylinder head cover

<p>30/01/98 GB C12 ↑ 1235 01 1122 20 PAGE 1</p>	<p>30/06/98 CYLINDER HEAD COVER</p>	<p>16 TZI 19 TRI 19 TZI GTI</p>	
 <p>1230</p> <p>01-1122-20</p> <p>E1122200</p>		<p>1 91 538 271 RP 0248 95</p> <p>2 91 508 054 RP 0249 48</p> <p>3 95 585 178 NFP</p> <p>4 79 03 027 312 RP 0250 17</p> <p>5 79 03 053 028 RP 6947 77</p>	<p>01 CYL-HEAD COVER 01</p> <p>01 COVER GASKET 01</p> <p>01 CYL HEAD LABEL</p> <p>01 SCREW COLUMN DIAM 6X100-37 01</p> <p>03 PLAIN WASHER 6X12-1,2 01</p>

Engine Cylinder head cover

30/01/98 GB C13 ↑ 1235 01 1122 30 PAGE 1	30706/98 CYLINDER HEAD COVER	GTI 16V	
<p>1230 [09/88] 01-1122-30</p>		1 95 622 325 2 91 540 236 RP 0249 74 96 159 009 RP 0249 74 3 91 540 509 RP 5979 78 4 91 538 906 RP 0258 35 5 91 540 934 RP 0213 06 6 91 540 503 7 91 539 063 RP 0250 24 8 91 539 064 RP 0250 25 9 91 539 066 RP 0250 26 10 91 539 067 RP 0250 27 11 79 03 025 003 RP 6916 03	01 CYL-HEAD COVER COVER GASKET UP TO O 5500 01 SINCE O 5501 01 HARNESS PROTECT 03 COVER GASKET 01 PIPE GASKET DIAM 30X40-8 01 DEFLECTOR 08 SCREW COLUMN DIAM 6X100 -47,7- 01 DIAM 6 X 100 - 32,7 01 DIAM 6 X 100 -27 01 2 DIAM 6X100-38,7 03 CAPSCREW 4X70-18 01
E1122300			

Engine Water outflow

30/01/98 GB C14 ↑ 1235 01 1123 10 PAGE 1	30/06/98 WATER OUT-FLOW	16 TZI 19 TRI 19 TZI GTI	
<p style="text-align: right;">E1123100</p>		1 95 643 926 RP 1336 62 95 641 150 96 080 981 RP 1336 C6 2 91 507 684 RP 96 181 359 3 93 502 228 RP 1339 78 4 96 995 797 RP 1339 64 5 93 501 396 RP 0147 12 6 96 089 138 RP 1338 33 95 579 683 RP 0242 43 7 95 640 493 RP 1920 C4 95 579 684 8 91 511 897	01 OUTLET TANK 01 -SALOON 19 TRI -SALOON 19 TZI 01 WATER HOUSING -ESTATE 19 TRI -ESTATE 19 TZI UP TO O 4982 -SALOON GTI UP TO O 4982 01 OUTLET TANK 01 -16 TZI -ESTATE 19 TZI SINCE O 4983 -GTI SINCE O 4983 01 HOUSING SEAL 01 01 DRN SCR GASKET 01 01 HOUSING SEAL 01 01 PLATE GASKET 01 01 TEMPERAT. PROBE DIAM 14X1,25-110 DEG 01 -16 TZI BLEU 01 TEMPERAT SWITCH 105°-14X1,25 01 -19 TRI -19 TZI -GTI BLEU 01 TEMPERAT. PROBE DIAM 12X150 01 -16 TZI VERT 01 TEMPERAT SWITCH DIAM 14-150 - 112DEG -19 TRI -19 TZI -GTI NOIR 01 WATER OUTLET UP TO O 4982

Engine Water outflow

30/01/98 GB C15 ↑ 1235 01 1123 10 PAGE 2	30/06/98 WATER OUT-FLOW	16 TZI 19 TRI 19 TZI GTI	
<p style="text-align: right;">E 1123100</p>		8 96 069 933 RP 1342 04 9 91 517 964 96 069 936 RP 1341 63 10 93 010 170 RP 0145 23 11 91 540 097 RP 1306 29 12 93 501 696 RP 1336 32 13 79 03 027 996 NFP 14 79 03 027 047 RP 4602 05 15 79 03 001 603 RP 6921 28 16 23 752 019 RP 6921 31 17 91 000 760 RP 1336 33 18 79 03 001 535 RP 6921 15 19 79 03 057 021 RP 6962 04 20 79 03 057 005 RP 6962 13 21 79 03 032 017 RP 6936 80	01 SOCKET TOOL 01 SINCE O 4983 01 WATER OUTLET DIAM 15X18-42 UP TO O 4982 01 SOCKET TOOL 01 SINCE O 4983 01 LOCKING PLATE 01 01 DRAIN SCREW 01 01 PLUG 14X1,25 01 04 STUD 04 8X125-34 04 8X125-19 01 03 CAPSCREW 03 7X100-40 01 01 7X100-55 01 01 SOCKET SCREW 7X100-55 01 02 CAPSCREW 7X100-75 01 04 SPRING WASHER DIAM 7,4X12 01 02 FLEXIBLE WASHER DIAM 8X14 01 01 HEXAGONAL NUT HE 8X1,25 01
E1123100		.../...	

Engine Water outflow

<p>30/01/98 GB D15 1235 01 1123 10 PAGE 3</p>	<p>30/06/98 WATER OUT-FLOW</p>	<p>16 TZI 19 TRI 19 TZI GTI</p>	
		<p>22 79 03 067 029 RP 6968 40</p>	<p>01 PIN 01</p>

Engine Water outflow

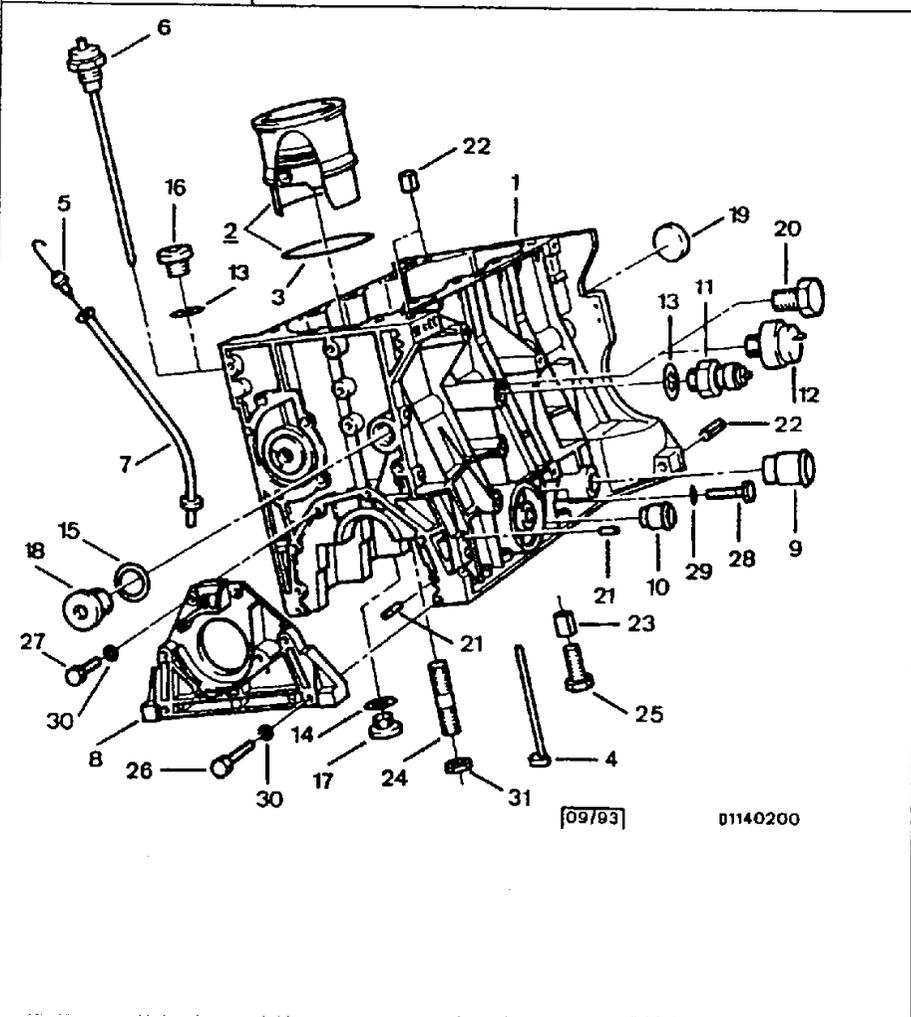
30/01/98 GB D14 1235 01 1123 20 PAGE 1	30/06/98 WATER OUT-FLOW	GTI 16V	
		1 91 539 750 RP 1336 91 2 93 501 958 RP 1306 29 3 91 514 549 RP 0242 46 4 93 502 228 RP 1339 78 5 22 470 009 RP 1562 51 6 95 579 684 7 00 42 790 300 RP 1337 72 8 96 088 592 9 95 638 556 10 79 03 201 020 RP 6915 84 11 79 03 009 130 RP 6913 A8 12 79 03 057 013 RP 6962 04 13 79 03 058 028 RP 6962 99	01 OUTLET TANK 01 01 DRAIN SCREW 6X100-18 01 01 TEMPERAT. PROBE DIAM 12X150- 01 01 DRN SCR GASKET 01 01 HOUSG PLUG SEAL DIAM 12X17 01 01 TEMPERAT SWITCH DIAM 14-150 - 112DEG 01 01 TEMPERATURE 14X1,25 01 01 SOCKET TOOL 01 01 SCREW COLUMN 6X100-63 7X100-15 01 01 CAPSCREW 6X1,00-12 01 04 SOCKET SCREW 6X100-60 01 05 FLEXIBLE WASHER 6,4X12-0,5 01 01 SPRING WASHER DIAM 6X14X1,4 01
E1123200			

Engine Crankcase

30/01/98 GB D13 1235 01 1140 20 PAGE 1	30/06/98 CRANKCASE	16 TZI	
		1 95 643 806 RP 0130 L1 2 95 654 057 RP 1172 79 3 91 507 124 RP 0112 78 4 78 01 015 000 RP 0127 05 5 91 520 152 RP 1172 79 6 95 572 129 RP 1131 52 7 91 535 630 RP 1171 71 8 91 510 743 RP 0145 25 9 91 504 095 RP 0129 06 10 91 509 685 RP 0129 07 96 127 435 RP 0129 10 11 91 521 113 RP 1131 14	01 CYLINDER BLOCK 01 UP TO O 5545 01 SINCE O 5546 01 4 WTR JACK + PIS 01 UP TO O 5256 01 SINCE O 5257 01 CYLD LINER SEAL DIAM 85,8X88,3X1,25 02 BEARING SEAL 01 01 ENGINE OIL GAUG LON 623 01 01 OIL LEVEL PROBE D'HUILE 01 01 OIL GAUGE GUIDE 01 01 HSG GASKET PLAT 01 UP TO O 5545 01 SINCE O 5546 01 01 SOCKET TOOL 01 DIAM 25,5X50 01 DIAM 14,5 01 UP TO O 5545 01 SINCE O 5546 01 01 OIL PRES SWITCH 01 DIAM 16X150

.../...

Engine Crankcase

30/01/98 GB D12 1235 01 1140 20 PAGE 2	30/06/98 CRANKCASE	16 TZI	
 <p style="text-align: right;">01140200</p>		12 97 518 408 RP 1131 69 96 130 791 RP 1131 69 13 79 03 062 003 RP 0164 30 14 79 03 062 001 RP 0313 26 15 79 03 062 002 RP 0164 56 16 93 502 063 17 79 32 584 061 RP 0163 54 18 91 000 374 RP 0243 06 19 79 03 075 067 RP 0163 69 96 002 928 RP 0163 74 20 79 03 075 099 RP 0163 59 21 79 03 067 023 RP 6968 37 97 599 211 RP 0127 27 22 91 000 632 RP 0131 16 23 79 10 017 318 RP 0131 07	OIL PRES SWITCH DIAM 10X1,00 UP TO O 5284 SENDING UNIT DIAM 10X100 SINCE O 5285 HOUSG PLUG SEAL DIAM 16,2X22X2 SWITCH GASKET DIAM 18X24E2 PLUG SEAL 22X30-2 CYL-BLOCK PLUG 16X150-12 18X1,50 DIAM 22X150 PLUG-CORE DIAM 24X6 1 POS DIAM 36X9 2 POS CYL-BLOCK PLUG 10X1,00-19 PIN DIAM 8X18 FLEXIBLE PIN DIAM 5,4X19 PIN DIAM 16X16 CENTRING BUSH DIAM 13,5 LON 14
		<p style="text-align: right;">E1:40200</p>	<p style="text-align: right;">.../...</p>

Engine Crankcase

<p>30/01/98 GB D11 1235 01 1140 20 PAGE 3</p>	<p>30/06/98 CRANKCASE</p>	<p>16 TZI</p>	
	<p>24 91 001 032 RP 0132 28</p> <p>25 79 10 026 432 RP 0820 09</p> <p>26 23 746 509 RP 6917 95</p> <p>27 79 03 101 805 RP 0820 09</p> <p>28 79 03 001 844 RP 6921 83</p> <p>29 79 03 053 514 RP 0133 12</p> <p>30 79 03 057 003 RP 6962 12</p> <p>31 91 001 034 RP 0132 27</p>	<p>02 01 08 04 02 02 02 06 02</p>	<p>BRG CAP STUD 11X1,50-95</p> <p>BEARG CAP SCREW CAPSCREW</p> <p>7X100-38</p> <p>DIAM 7X100 -18</p> <p>DIAM 8X1,25-35</p> <p>PLAIN WASHER 8X16-3</p> <p>FLEXIBLE WASHER 7,4X14,2X0,8</p> <p>HEXAGONAL NUT 11X150-10</p>
<p>E1140200</p>			

Engine Crankcase

30/01/98 GB D09 1235 01 1140 30 PAGE 2	30/06/98 CRANKCASE	19 TRI 19 TZI GTI	
		10 96 127 435 RP 0129 10	SOCKET TOOL SINCE O 5546 01 01 OIL PRES SWITCH DIAM 16X150 01 01 DIAM 10X1,00 UP TO O 5284 01 01 96 130 791 RP 1131 69 01 SENDING UNIT DIAM 10X100 01 SINCE O 5285 13 77 03 062 062 RP 0164 30 02 HOUSG PLUG SEAL 16,2X22-2 01 14 79 03 062 001 RP 0313 26 01 SWITCH GASKET DIAM 18X24E2 01 15 79 03 062 002 RP 0164 56 01 PLUG SEAL 22X30-2 01 16 93 502 063 01 CYL-BLOCK PLUG 01 16X150-12 17 79 32 584 061 RP 0163 54 01 18X1,50 01 18 91 000 374 RP 0243 06 02 DIAM 22X150 01 19 79 03 075 067 RP 0163 69 01 PLUG-CORE 01 DIAM 24X6 01 1ST POS 96 002 928 RP 0163 74 01 DIAM 36X9 01 2ND POS 20 79 03 075 099 RP 0163 59 01 CYL-BLOCK PLUG 10X1,00-19 01 21 79 03 067 023 RP 6968 37 06 PIN DIAM 8X18 01 79 03 067 009 RP 6968 35 02 CENTRING PIN DIAM 16X14 01
E1140300		.../...	

Engine Crankcase

<p>30/01/98 GB D08 1235 01 1140 30 PAGE 3</p>	<p>30/06/98 CRANKCASE</p>	<p>19 TRI 19 TZI GTI</p>	
	<p>22 91 000 632 RP 0131 16</p> <p>23 79 10 017 318 RP 0131 07</p> <p>24 91 001 032 RP 0132 28</p> <p>25 79 10 026 432</p> <p>26 23 746 509 RP 6917 95</p> <p>27 79 03 101 805 RP 0820 09</p> <p>28 91 595 257</p> <p>29 79 03 201 758 RP 6922 22</p> <p>30 79 03 053 514 RP 0133 12</p> <p>31 79 03 057 003 RP 6962 12</p> <p>32 79 03 057 005 RP 6962 13</p> <p>33 91 001 034 RP 0132 27</p>	<p>02 PIN DIAM 16X16 01</p> <p>08 CENTRING BUSH DIAM 13,5 LON 14 01</p> <p>02 BRG CAP STUD 11X1,50-95 01</p> <p>08 BEARG CAP SCREW CAPSCREW 04 7X100-38 01</p> <p>02 DIAM 7X100 -18 01</p> <p>02 BEARG CAP SCREW 8X1,25-35 01</p> <p>01 WASHER-SCREW 8X125-20 01</p> <p>02 PLAIN WASHER 8X16-3 01</p> <p>06 FLEXIBLE WASHER 7,4X14,2X0,8 01</p> <p>01 DIAM 8X14 01</p> <p>02 HEXAGONAL NUT 11X150-10 01</p>	
<p>[09/93] 01140210</p>		<p>E1140300</p>	

Engine Crankcase

30/01/98 GB D07 1235 01 1140 40 PAGE 1	30/06/98 CRANKCASE	GTI 16V	
		1 95 643 801 RP 0130 F5 2 95 646 307 3 91 507 124 RP 0112 78 4 78 01 015 000 RP 0127 05 5 91 541 013 RP 1172 99 6 96 005 606 RP 1171 60 7 95 572 129 RP 1131 52 8 91 539 562 RP 0514 57 96 014 452 RP 0514 81 + 0326 22 96 124 994 RP 0514 81 9 91 504 095 RP 0129 06 10 91 509 685 RP 0129 07 11 91 521 113 RP 1131 14 12 97 518 408 RP 1131 69 96 130 791 RP 1131 69	01 CYLINDER BLOCK 01 01 4 WTR JACK + PIS TAUX 9,7 04 CYLD LINER SEAL DIAM 85,8X88,3X1,25 01 02 BEARING SEAL 01 01 ENGINE OIL GAUG LON 491 01 01 OIL GAUGE GUIDE 01 01 OIL LEVEL PROBE D'UILE 01 01 HSG GASKET PLAT 01 UP TO O 5135 01 LOCKING PLATE 01 SINCE O 5136 UP TO O 5545 01 01 HSG GASKET PLAT 01 SINCE O 5546 SOCKET TOOL 01 DIAM 25,5X50 01 01 DIAM 14,5 01 01 OIL PRES SWITCH 01 DIAM 16X150 01 01 DIAM 10X1,00 01 UP TO O 5284 01 SENDING UNIT DIAM 10X100 01 SINCE O 5285
E1140400		.../...	

Engine Crankcase

30/01/98 GB D06 1235 01 1140 40 PAGE 2	30/06/98 CRANKCASE	GTI 16V	
		13 79 03 062 003 RP 0164 30 14 79 03 062 001 RP 0313 26 15 79 32 584 061 RP 0163 54 16 91 595 264 RP 0163 53 17 96 002 928 RP 0163 74 18 79 03 075 099 RP 0163 59 19 79 03 067 023 RP 6968 37 91 595 280 20 91 000 632 RP 0131 16 21 79 10 017 318 RP 0131 07 22 91 001 032 RP 0132 28 23 79 10 026 432 24 91 595 257 25 96 011 198 RP 0132 32 26 96 045 490 RP 0132 34	01 HOUSG PLUG SEAL DIAM 16,2X22X2 01 01 SWITCH GASKET DIAM 18X24E2 01 01 CYL-BLOCK PLUG 18X1,50 01 02 PLUG 22X1,50 01 01 PLUG-CORE DIAM 36X9 01 01 CYL-BLOCK PLUG 10X1,00-19 01 PIN 06 DIAM 8X18 01 01 8X28 02 DIAM 16X16 01 08 CENTRING BUSH DIAM 13,5 LON 14 01 02 BRG CAP STUD 11X1,50-95 01 BEARG CAP SCREW 08 01 8X1,25-35 SCREW COLUMN 01 01 01 01
E1140400		27 23 746 509 RP 6917 95	CAPSCREW 08 7X100-38 01

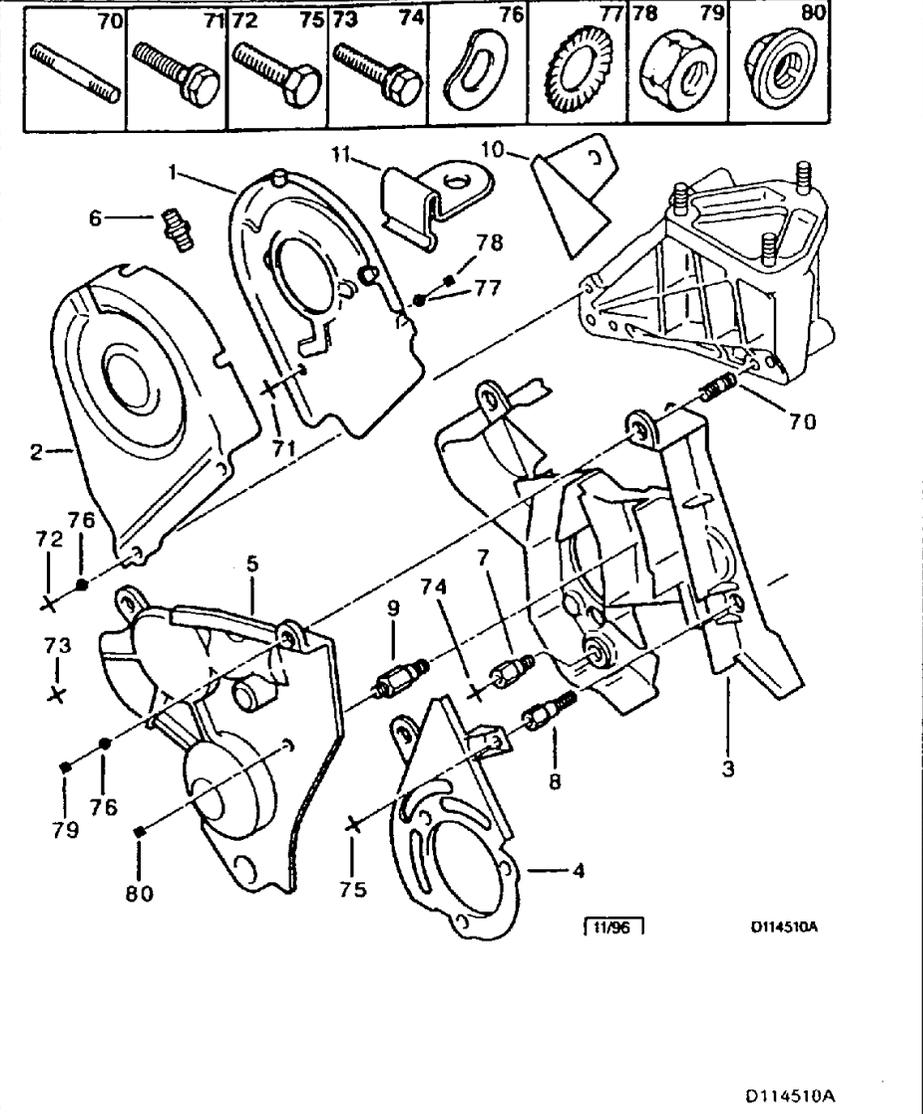
Engine Crankcase

<p>30/01/98 GB D05 1235 01 1140 40 PAGE 3</p>	<p>30/06/98 CRANKCASE</p>	<p>GTI 16V</p>	
<p style="text-align: right;">D1140 250</p>		<p>28 79 03 101 805 RP 0820 09</p> <p>29 79 03 057 003 RP 6962 12</p> <p>30 91 001 034 RP 0132 27</p>	<p>02 CAPSCREW DIAM 7X100 -18 01</p> <p>06 FLEXIBLE WASHER 7,4X14,2X0,8 01</p> <p>02 HEXAGONAL NUT 11X150-10 01</p>
<p>E1140400</p>			

Engine Timing belt shields

30/01/98 GB D04 1235 01 1145 10 PAGE 1	30/06/98 TIMING BELT SHIELDS	16 TZI 19 TRI 19 TZI GTI UP TO O 5545	
		1 91 517 417 RP 0320 F0 2 91 517 339 RP 0320 F0 3 91 540 946 RP 0320 87 4 91 540 948 RP 0320 89 5 91 540 947 RP 0320 88 6 91 512 793 7 91 512 734 8 96 035 536 RP 91 510 756 9 91 541 567 10 91 515 824 RP 0320 67 11 96 060 896 RP 0324 39	BELT PROTECTOR UP TO O 5256 UP TO O 5256 GEAR HOUSING SINCE O 5257 INF UP TO O 5378 INF SINCE O 5379 SUP UP TO O 5378 SUP SINCE O 5379 SUP UP TO O 5378 SUP SINCE O 5379 PROTECTR SPACER DIAM 5X0,80 DIAM 6X1,00 DIAM 8 LOCK SPACER LOCKING PLATE CLIP
D114510A D114510A		70 96 995 092 RP 79 03 027 279	01 STUD DIAM 6X1,00 01

Engine Timing belt shields

30/01/88 GB D03 1235 01 1145 10 PAGE 2	30/06/98 TIMING BELT SHIELDS	16 TZI 19 TRI 19 TZI GTI UP TO O 5545	
 <p style="text-align: right;">11/96 D114510A</p> <p style="text-align: center;">D114510A</p>		71 79 03 001 043 NFP 72 79 03 201 020 RP 6915 84 73 91 511 288 RP 0324 23 74 79 03 201 758 RP 6922 22 75 91 510 753 RP 0324 24 76 79 03 057 013 RP 6962 04 77 79 03 056 003 RP 6958 54 78 79 03 032 006 RP 6933 08 79 25 260 019 RP 79 03 232 016 80 91 595 336 RP 0251 03	01 WASHER-SCREW THRI 8 X 1,25 -20 02 CAPSCREW 6X1,00-12 01 01 SELF-TAP SCREWS 7X100-12 01 01 WASHER-SCREW 8X125-20 01 03 CAPSCREW 7X100-12 01 05 FLEXIBLE WASHER 6,4X12-0,5 01 02 SPRING WASHER 4,2X8-0,5 01 HEXAGONAL NUT 02 5X80-4 01 01 DIAM 6X1,00 01 02 NUT WITH BASE DIAM 7X100 01

Engine Timing belt shields

30/01/98 GB D02 1235 01 1145 11 PAGE 1	30/06/98 TIMING BELT SHIELDS	16 TZI 19 TRI 19 TZI GTI SINCE O 5546	
<p style="text-align: right;">[11/96] D:114510B</p>		1 96 059 593 01 RP 0320 F0 01 2 96 064 445 01 RP 0320 C4 01 3 96 064 444 01 RP 0320 C5 01 4 91 515 824 01 RP 0320 67 01 5 96 125 130 02 RP 0324 40 01 6 96 136 790 02 RP 0324 41 01 70 79 03 201 272 02 RP 6922 22 01 71 79 03 201 747 01 RP 6922 97 01 72 79 03 201 140 02 RP 6917 92 01 73 79 03 058 057 02 RP 6962 99 01	GEAR HOUSING INTM INF LOCKING PLATE HOUSING SCREW DIAM 6X100-23 DIAM 6X100-16 SELF-TAP SCREWS DIAM 8X125 LON 20 6X100-16 CAPSCREW 6X100-20 FLEXIBLE WASHER 6X12
D:14510B			

Engine Timing belt shields

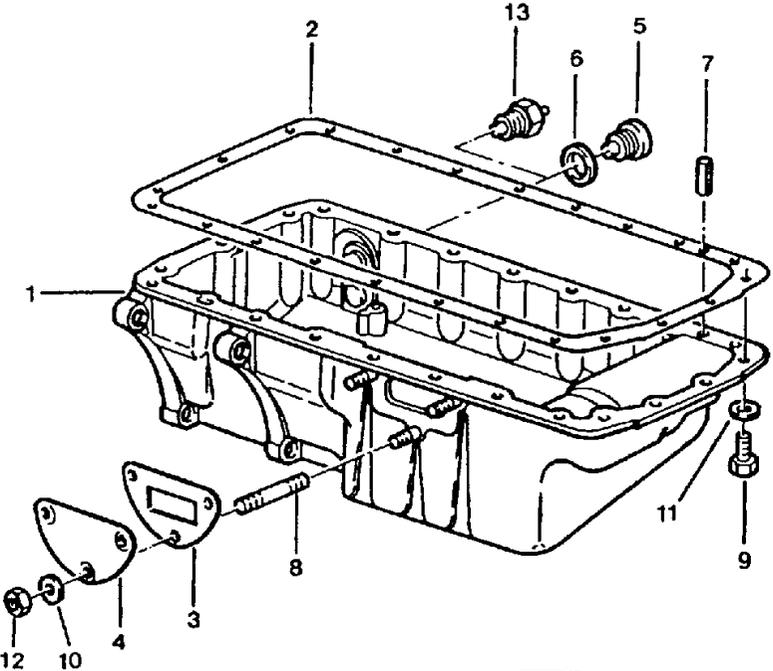
30/01/98 GB D01 1235 01 1145 20 PAGE 1	30/06/98 TIMING BELT SHIELDS	GTI 16V	
		1 91 539 711 RP 0320 90 2 91 539 899 RP 0320 92 3 91 539 406 RP 0320 91 4 91 541 778 RP 0324 32 5 96 002 074 RP 0324 31 6 97 599 108 RP 0324 27 8 91 541 776 RP 0324 33 9 91 541 777 RP 0324 34 70 79 03 201 265 RP 6921 53 + 6962 99	01 01 01 SUP 01 01 INF 01 01 FASTENER FORK 01 02 SPACER DIAM 6,2X18-6 01 06 SPECIAL SCREW 6X100-16 01 SCREW COLUMN 01 7X1,00-54 01 01 01 04 CAPSCREW DIAM 6X1,00-35 01 01

E1145200

Engine Oil sump

30/01/98 GB E01 ↑ 1235 01 1147 20 PAGE 1	30/06/98 OIL SUMP	SALOON 16 TZI 19 TRI 19 TZI UP TO O 6140	
		1 96 013 401 LISTE 9305 2 96 042 653 RP 0304 34 3 93 501 565 RP 0310 04 4 91 517 101 RP 0310 12 5 78 30 197 000 RP 2221 11 6 79 03 062 003 RP 0164 30 7 91 000 370 RP 0537 33 8 79 03 027 279 9 79 03 001 708 RP 6915 36 79 03 009 256 RP 6913 33 77 03 009 016 RP 6913 85 10 79 03 057 013 RP 6962 04 11 79 03 057 003 RP 6962 12 79 03 057 044 RP 6962 50 12 25 260 019 RP 79 03 232 016	01 ENGINE OIL SUMP 01 SUMP GASKET 01 A005 WITHOUT ASBESTOS 01 01 01 LOCKING PLATE 01 01 OIL DRAIN PLUG DIAM 16X1,50 01 01 HOUSG PLUG SEAL DIAM 16,2X22X2 01 01 PIN DIAM 8X15 01 01 STUD 6X100-50 20 CAPSCREW 7X100-20 01 01 SOCKET SCREW 01 7X100-20 02 7X100-55 01 03 FLEXIBLE WASHER 03 6,4X12-0,5 20 7,4X14,2X0,8 01 03 DIAM 7X11 01 01 HEXAGONAL NUT DIAM 6X1,00
E1147200		.../...	

Engine Oil sump

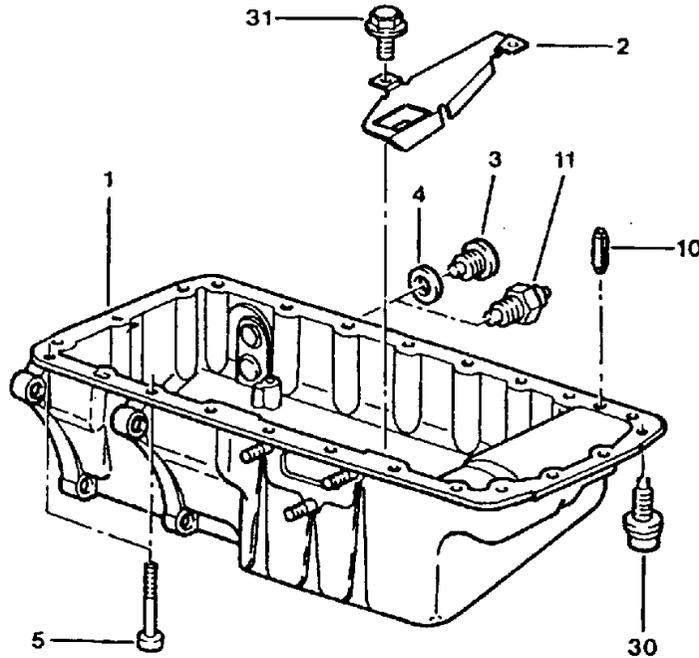
<p>30/01/98 GB E02 ↑ 1235 01 1147 20 PAGE 2</p>	<p>30/06/98 OIL SUMP</p>	<p>SALOON 16 TZI 19 TRI 19 TZI UP TO O 6140</p>	
 <p style="text-align: center;">03/94 E 1147200</p>		<p>13 95 635 573 RP 0242 50</p>	<p>01 SENDING UNIT DIAM 16X1,50-140 DEG 01</p>
<p style="text-align: right;">E1147200</p>			

Engine Oil sump

30/01/98 GB E03 ↑
1235 01 **1147** 20A
PAGE 1

30706798
OIL SUMP

PETROL XU5 XU9 AIR CONDITIONING EXCEPT XU9J4
SINCE O 6141



1	0301 F4	01	ENGINE OIL SUMP DIAM 20
2	93 510 261	01	GUIDE
3	96 146 865 RP 0311 21	01 01	DRAIN PLUG DIAM 14X125
4	96 147 128 RP 0313 27	01 01	HOUSG PLUG SEAL DIAM 14X21-2
5	93 010 240 RP 0307 10	02 01	SOCKET SCREW 7X100-50
10	96 148 071 RP 0307 15	01 01	PIN DIAM 4,1-15
11	0242 81	01	SENDING UNIT DIAM 14
30	6928 02	21	SCREW WITH BASE 7X100-21
31	6923 06	02	SELF-TAP SCREWS 5 X 80 - 12

03/94

E 114720A

E114720A

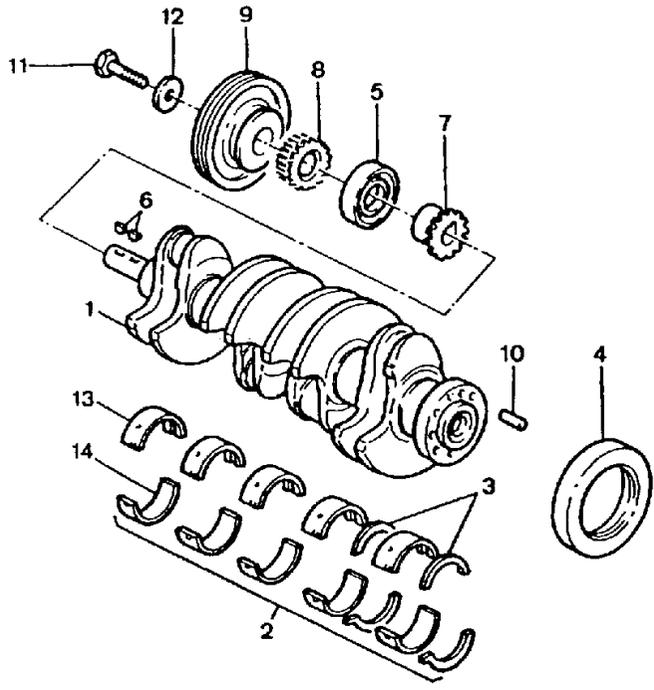
Engine Oil sump

<p>30/01/98 GB E04 † 1235 01 1147 30 PAGE 1</p>	<p>30/06/98 OIL SUMP</p>	<p>SALOON GTI 16V ESTATE 19 TRI 19 TZI UP TO O 6140</p>	
<p style="text-align: center;">03/94 E 1147300</p> <p style="text-align: right;">E1147300</p>		<p>1 96 021 820 LISTE 9401</p> <p>2 93 502 226 RP 0304 34</p> <p>3 91 540 298 RP 0323 14</p> <p>4 93 502 063</p> <p>5 79 03 062 003 RP 0164 30</p> <p>6 95 635 573 RP 0242 50</p> <p>7 79 03 001 920 RP 6922 85</p> <p>91 000 760 RP 1336 33</p> <p>8 79 030 090 80 RP 6913 06</p> <p>9 79 03 057 044 RP 6962 50</p> <p>10 96 158 120 RP 0307 20</p>	<p>01 ENGINE OIL SUMP ALU</p> <p>01 SUMP GASKET</p> <p>01 HOUSING SPACER</p> <p>01 CYL-BLOCK PLUG 16X150-12</p> <p>02 HOUSG PLUG SEAL DIAM 16,2X22X2</p> <p>01 SENDING UNIT DIAM 16X1,50-140 DEG</p> <p>19 SELF-TAP SCREWS 7X100-40</p> <p>04 SOCKET SCREW 7X100-55</p> <p>02 6X100-16</p> <p>04 FLEXIBLE WASHER DIAM 7X11</p> <p>01 PIN DIAM 8X7 - 4X8</p>

Engine Oil sump

30/01/98 GB E05 ↑ 1235 01 1147 30A PAGE 1	30/06/98 OIL SUMP	SALOON GTI 16V 19 TZI ESTATE 19 TZI SINCE O 6141	
		1 2 3 0311 18 RP 0311 21 4 5 6 7 8	01 ENGINE OIL SUMP 01 SPACER 01 DRAIN PLUG 14X125 01 02 HOUSG PLUG SEAL 14X21-2 A005 WITHOUT ASBESTOS 01 SENDING UNIT DIAM 14 19 SCREW WITH BASE 7X100-40 19 FLEXIBLE WASHER 7X11,7-0,2 01 PIN 4,1X15
03/94 E 114730A		E114730A	

Engine Crankshaft

<p>30/01/98 GB E06 ↑ 1235 01 1210 20 PAGE 1</p>	<p>30/06/98 CRANKSHAFT</p>	<p>16 TZI</p>	
 <p style="text-align: right;">E1210200</p>		<p>1 91 520 243 RP 0501 A0</p> <p>2 94 00 113 910 RP 0113 91</p> <p>94 560 033 80 RP 0113 92</p> <p>3 94 00 117 790 RP 0117 79</p> <p>94 56 000 541 RP 0118 A8</p> <p>4 93 510 910 RP 0127 28</p> <p>5 91 504 836 RP 0326 22</p> <p>6 79 03 070 005 RP 6976 06</p> <p>7 91 503 585 RP 0513 64</p> <p>8 91 510 590 RP 0513 37</p> <p>9 91 512 174</p> <p>10 91 000 370 RP 0537 33</p> <p>11 97 599 221 RP 0516 49</p> <p>12 79 10 019 504 RP 0512 10</p> <p>13 96 150 130 RP 0113 G6</p>	<p>01 CRANKSHAFT 01</p> <p>01 SET 10 1/2 BRNG 01 5L + 5R 01 UP TO O 5970</p> <p>01 COTE REPARATION 01 UP TO O 5970</p> <p>01 THRUST BEARING 01 DIAM 60</p> <p>01 COTE REPARATION 01</p> <p>01 BEARING SEAL DIAM 90X110-10 01</p> <p>01 CRANKSHAFT SEAL DIAM 42 X 62 X 8 01</p> <p>02 CRANKSHAFT KEY 6X7X15 01</p> <p>01 PUMP CONTR PINN 18 DENTS 01</p> <p>01 TIMING PINION 21 DTS 01</p> <p>01 CRKSHAFT PULLEY DIAM 127DIAM 59</p> <p>01 PIN DIAM 8X15 01</p> <p>01 PULLEY SCREW 14X150-70 01</p> <p>01 PULLEY WASHER 14,25X40-10 01</p> <p>05 HALF BEARING 01 CN SUP EP 1,856 01 JN YELLOW 01 SINCE O 5971 01 PAINURE</p> <p style="text-align: right;">.../...</p>

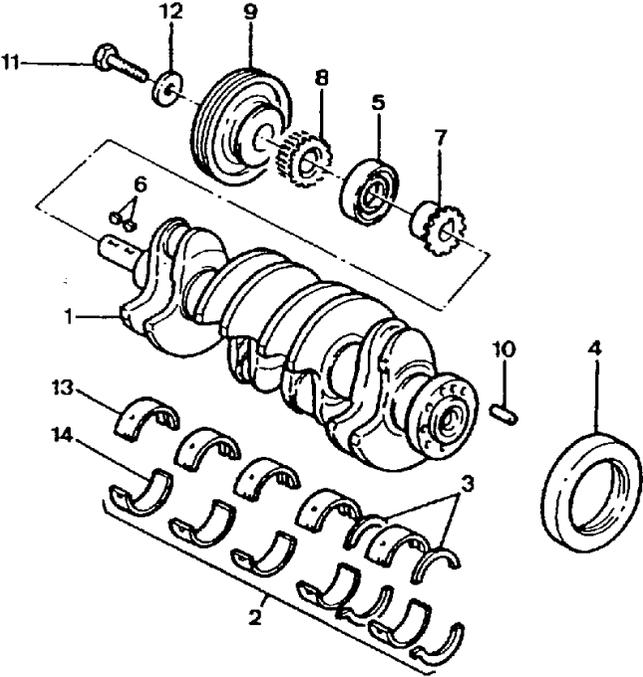
Engine Crankshaft

<p>30/01/98 GB E07 ↑ 1235 01 1210 20 PAGE 2</p>	<p>30706798 CRANKSHAFT</p>	<p>16 TZI</p>	
<p>[04/93] E1210200</p>		<p>14 96 150 129 RP 0113 G7</p> <p>96 150 128 RP 0113 G8</p> <p>96 150 127 RP 0113 G9</p> <p>96 150 122 RP 0113 H0</p>	<p>01 HALF BEARING 01 CN INF EP 1,836 01 BE BLUE 01 SINCE O 5971 01 LISSE</p> <p>01 CN INF EP 1,848 01 NR BLACK 01 SINCE O 5971 01 LISSE</p> <p>01 CN INF EP 1,859 01 VE GREEN 01 SINCE O 5971 01 LISSE</p> <p>01 CN INF EP 1,870 01 RG RED 01 SINCE O 5971 01 LISSE</p>
<p>E1210200</p>			

Engine Crankshaft

30/01/98 GB E08 ↑ 1235 01 1210 30 PAGE 1	30/06/98 CRANKSHAFT	19 TRI 19 TZI GTI	
		1 91 518 899 RP 0501 A2 2 94 00 113 910 RP 0113 91 94 560 033 80 RP 0113 92 3 94 00 117 790 RP 0117 79 94 56 000 541 RP 0118 A8 4 93 510 910 RP 0127 28 5 91 504 836 RP 0326 22 6 79 03 070 005 RP 6976 06 7 91 503 585 RP 0513 64 8 91 510 590 RP 0513 37 9 91 512 174 10 91 000 370 RP 0537 33 11 97 599 221 RP 0516 49 12 79 10 019 504 RP 0512 10 13 96 150 130 RP 0113 G6	01 CRANKSHAFT 01 01 SET 10 1/2 BRNG 01 5L + 5R 01 UP TO O 5970 01 COTE REPARATION 01 UP TO O 5970 01 THRUST BEARING 01 DIAM 60 01 COTE REPARATION 01 01 BEARING SEAL DIAM 90X110-10 01 01 CRANKSHAFT SEAL DIAM 42 X 62 X 8 01 02 CRANKSHAFT KEY 6X7X15 01 01 PUMP CONTR PINN 18 DENTS 01 01 TIMING PINION 21 DTS 01 01 CRKSHAFT PULLEY DIAM 127DIAM 59 01 01 PIN DIAM 8X15 01 01 PULLEY SCREW 14X150-70 01 01 PULLEY WASHER 14,25X40-10 01 05 HALF BEARING 01 CN SUP EP 1,856 01 JN YELLOW SINCE O 5971 RAINURE .../...



<p>30/01/98 GB E09 ↑ 1235 01 1210 30 PAGE 2</p>	<p>30/06/98 CRANKSHAFT</p>	<p>19 TRI 19 TZI GTI</p>	
 <p>[04/93] E1210300</p>		<p>14 96 150 129 RP 0113 G7</p> <p>96 150 128 RP 0113 G8</p> <p>96 150 127 RP 0113 G9</p> <p>96 150 122 RP 0113 H0</p>	<p>01 HALF BEARING 01 CN INF EP 1,836 01 BE BLUE 01 SINCE O 5971 01 LISSE</p> <p>01 CN INF EP 1,848 01 NR BLACK 01 SINCE O 5971 01 LISSE</p> <p>01 CN INF EP 1,859 01 VE GREEN 01 SINCE O 5971 01 LISSE</p> <p>01 CN INF EP 1,870 01 RG RED 01 SINCE O 5971 01 LISSE</p>
<p>E1210300</p>			

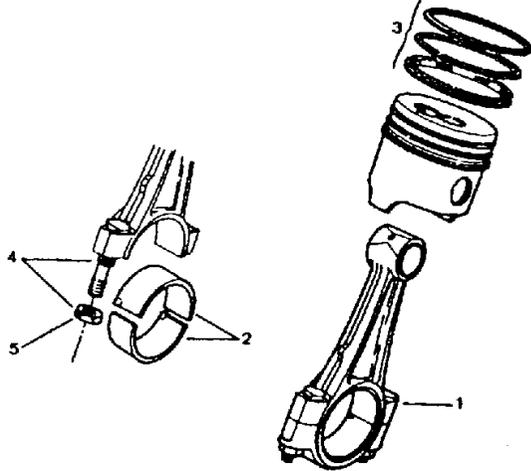
Engine Crankshaft

30/01/98 GB E10 ↑ 1235 01 1210 40 PAGE 1	30/06/98 CRANKSHAFT	GTI 16V	
<p style="text-align: center;">[04/93] E1210400</p> <p style="text-align: right;">E1210400</p>		1 91 538 721 RP 0501 E0 2 94 00 113 910 RP 0113 91 94 560 033 80 RP 0113 92 3 94 00 117 790 RP 0117 79 4 96 051 895 RP 0532 E1 5 93 510 910 RP 0127 28 6 91 504 836 RP 0326 22 7 79 03 070 005 RP 6976 06 8 91 540 843 RP 0513 47 9 91 541 347 RP 0513 46 10 91 541 348 RP 0515 E9 11 91 540 384 RP 0512 19 12 91 000 370 RP 0537 33 13 79 03 067 013 RP 6965 12 14 79 03 001 427 15 97 599 221 RP 0516 49	01 CRANKSHAFT 01 SET 10 1/2 BRNG 01 SL+5R 01 UP TO O 5970 01 COTE REPARATION 01 UP TO O 5970 01 THRUST BEARING DIAM 60 01 01 FLYWHEEL NEW 01 01 BEARING SEAL DIAM 90X110-10 01 01 CRANKSHAFT SEAL DIAM 42 X 62 X 8 01 02 CRANKSHAFT KEY 6X7X15 01 01 PUMP CONTR PINN 22 DTS 01 01 TIMING PINION 21 DENT 01 01 CRANK PULLEY 01 01 CRANKSFT SPACER 01 PIN 01 DIAM 8X15 01 03 DIAM 6-16 01 08 FLYWHEEL SCREW 9X100-22 01 01 PULLEY SCREW 14X150-70 01

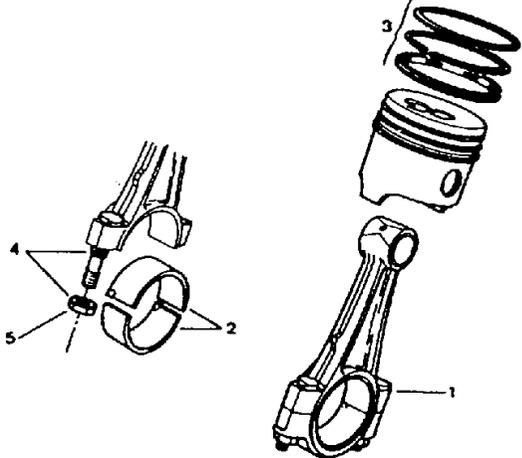
Engine Crankshaft

30/01/98 GB E11 ↑ 1235 01 1210 40 PAGE 2	30/06/98 CRANKSHAFT	GTI 16V	
		16 23 795 019 RP 6924 93 17 79 10 019 504 RP 0512 10 18 79 03 058 019 19 96 150 130 RP 0113 G6 20 96 150 129 RP 0113 G7 96 150 128 RP 0113 G8 96 150 127 RP 0113 G9 96 150 122 RP 0113 H0	04 CAPSCREW 8X1,25-20 01 01 PULLEY WASHER 14,25X40-10 01 01 SPRING WASHER 8X16-1,4 05 HALF BEARING 01 CN SUP EP 1,856 01 JN YELLOW SINCE O 5971 RAINURE 01 CN INF EP 1,836 01 BE BLUE SINCE O 5971 LISSE 01 CN INF EP 1,848 01 NR BLACK SINCE O 5971 SMOOTH 01 CN INF EP 1,859 01 VE GREEN SINCE O 5971 LISSE 01 CN INF EP 1,870 01 RG RED SINCE O 5971 LISSE
E1210400			

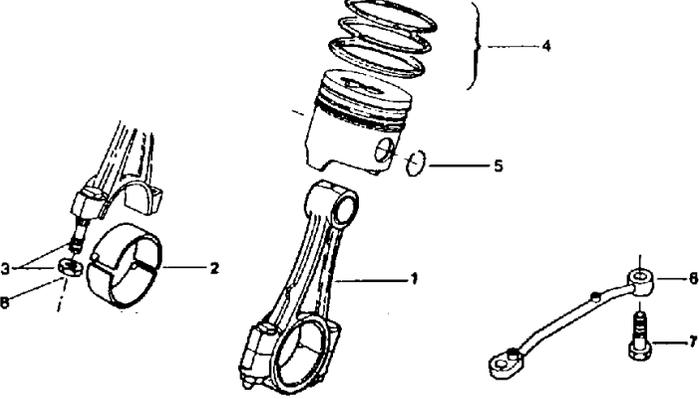
Engine Connecting rods, rings

30/01/98 GB E12 ↑ 1235 01 1215 10 PAGE 1	30/06/98 CONNECTING RODS - RINGS	16 TZI	
 <p style="text-align: center;">12 / 91 E1215100</p>		1 95 641 142 RP 0603 62 2 97 90 006 100 RP 0606 E3 94 56 001 426 RP 0606 E4 3 95 643 946 RP 0640 61 95 644 132 RP 0640 A5 4 95 641 147 RP 0607 37 5 79 03 032 109	01 SET 4 CONN ROD 01 01 SET 8 1/2 BRNG 01 CN 01 COTE REPARATION 01 04 SET 3 RING PIST 04 83(1,5-1,5-4) 01 UP TO O 5256 04 (1,75-1,75-4) 01 SINCE O 5257 08 CONNEC ROD BOLT DIAM 9X100 01 08 CONNECTING ROD 9X1,00-10

Engine Connecting rods, rings

30/01/98 GB E13 ↑ 1235 01 1215 20 PAGE 1	30/06/98 CONNECTING RODS - RINGS	19 TRI 19 TZI GTI	
 <p style="text-align: center;">12/91 91215210</p>		1 95 614 867 95 641 483 RP 95 614 867 95 614 867 2 97 90 009 500 RP 0606 H1 94 00 606 990 RP 0606 H1 94 56 001 561 RP 0606 F9 3 95 643 946 RP 0640 61 4 95 641 147 RP 0607 37 5 79 03 032 109	01 SET 4 CONN ROD -SALOON 19 TRI -SALOON 19 TZI 01 -ESTATE 19 TRI 01 -ESTATE 19 TZI UP TO O 4982 -GTI UP TO O 4982 01 -ESTATE 19 TZI SINCE O 4983 -GTI SINCE O 4983 01 SET 8 1/2 BRNG 01 CN DIAM 50 01 -SALOON 19 TRI -SALOON 19 TZI 01 DIAM 50 01 -ESTATE 19 TRI -ESTATE 19 TZI -GTI 01 REPARATION DIAM 49,7 01 04 SET 3 RING PIST 83(1,5-1,5-4) 01 08 CONNec ROD BOLT DIAM 9X100 01 08 CONNECTING ROD 9X1,00-10
E1215200			

Engine Connecting rods, rings

30/01/98 GB E14 ↑ 1235 01 1215 30 PAGE 1	30/06/98 CONNECTING RODS - RINGS	GTI 16V	
 <p>1230</p> <p>(09/86)</p> <p>01.1215 25</p> <p style="text-align: right;">E1215300</p>		1 95 624 943 2 97 90 009 500 RP 0606 H1 94 56 001 561 RP 0606 F9 3 95 641 147 RP 0607 37 4 95 624 942 5 96 020 342 RP 0630 22 96 146 748 RP 0630 22 6 91 541 547 RP 1168 07 91 541 546 RP 1168 06 7 96 020 742 8 79 03 032 109	01 SET 4 CONN ROD SET 8 1/2 BRNG 01 CN DIAM 50 01 01 REPARATION DIAM 49,7 01 08 CONNEC ROD BOLT DIAM 9X100 01 04 SET 3 RING PIST 83 (1,5-1,5-3) 08 PISTN SNAP-RING 01 DIAM 24 EP 1,5 01 UP TO O 5562 08 DIAM 22 01 SINCE O 5563 02 PISTON OIL JET 01 LEFT 02 RIGHT 01 08 OIL JET SCREW DIAM 6 X 100 - 25 08 CONNECTING ROD 9X1,00-10

Engine Camshaft

30/01/98 GB E15 ↑ 1235 01 1230 20 PAGE 1	30/06/98 CAMSHAFT	16 TZI	
		1 97 521 729 RP 0801 89 91 515 386 RP 0801 N2 96 160 146 RP 0801 N8 2 91 515 138 RP 0236 44 3 91 516 208 RP 0810 10 4 96 020 713 RP 0805 35 5 91 517 722 RP 0816 67 96 100 168 RP 0816 71 6 96 058 681 RP 0820 15 7 91 508 050 RP 0829 12 96 052 662 RP 0829 29 8 91 507 345 RP 0827 17 9 91 000 854 RP 0827 18 10 91 509 682 RP 0820 10	CAMSHAFT REP - B1A/A UP TO O 5256 SINCE O 5257 UP TO O 5652 SINCE O 5653 CAMSHAFT SEAL DIAM 36X50X8 CAMSHAFT BUFFER UP TO O 5652 CAMSHAF GEAR TIMING BELT 113 DENTS UP TO O 5545 114 DENTS SINCE O 5546 SCREW COLUMN SINCE O 5546 TENSION ROLLER UP TO O 5545 SINCE O 5546 ROLLER RETAINER UP TO O 5545 SPRING UP TO O 5545 TENSION FINGER DIAM 10X1,50 UP TO O 5545
		E1230200	11 91 595 319 RP 6922 49

Engine Camshaft

30/01/98 GB F15 ↓ 1235 01 1230 20 PAGE 2	30/06/98 CAMSHAFT	16 TZI	
		30 79 03 027 060 RP 6929 28 31 79 03 009 256 RP 6913 33 32 79 03 201 048 RP 6917 65 33 79 03 057 100 RP 6962 11 34 79 03 057 003 RP 6962 12 35 79 03 053 481 36 93 501 496 RP 0812 09 37 6932 15 RP 6932 57 38 79 03 032 036 RP 6932 05	01 STUD 7X100-37 01 UP TO O 5545 01 SOCKET SCREW 7X100-20 01 01 CAPSCREW 10X150-35 01 FLEXIBLE WASHER 01 10,4X21,3-0,8 01 UP TO O 5545 02 7,4X14,2X0,8 01 UP TO O 5545 PLAIN WASHER 01 7X13-1,5 01 DIAM 10X36-5 01 HEXAGONAL NUT 01 10X150-8 01 UP TO O 5545 01 DIAM 7X100 01 UP TO O 5545
E 1230200			

Engine Camshaft

30/01/98 GB F14 1235 01 1230 30 PAGE 1	30/06/98 CAMSHAFT	19 TRI 19 TZI GTI	
<p style="text-align: right;">E 1230300</p>		1 91 519 594 RP 0801 N1 96 160 145 RP 0801 N7 91 537 785 RP 0801 N5 96 060 935 RP 0801 P4 91 537 785 RP 0801 N5 96 060 935 RP 0801 P4 2 91 515 138 RP 0236 44 3 91 516 208 RP 0810 10 4 96 020 713 RP 0805 35 96 086 334 RP 0805 53 5 91 517 722 RP 0816 67 96 100 168 RP 0816 71 6 96 058 681 RP 0820 15	CAMSHAFT 01 -SALOON 19 TRI UP TO O 5652 01 -SALOON 19 TZI UP TO O 5652 01 -SALOON 19 TRI SINCE O 5653 01 -SALOON 19 TZI SINCE O 5653 01 -ESTATE 19 TZI UP TO O 4982 01 -ESTATE 19 TRI 01 08P MOTEUR RFX 01 -ESTATE 19 TZI SINCE O 4983 01 -GTI UP TO O 4982 01 01 08P MOTEUR RFX 01 -GTI SINCE O 4983 01 CAMSHAFT SEAL DIAM 36X50X8 01 01 CAMSHAFT BUFFER 01 UP TO O 5652 CAMSHAF GEAR 01 -SALOON 19 TRI 01 -SALOON 19 TZI 01 -ESTATE 19 TRI 01 -ESTATE 19 TZI UP TO O 4982 01 -GTI UP TO O 4982 01 REP VERT 01 -ESTATE 19 TZI SINCE O 4983 01 -GTI SINCE O 4983 TIMING BELT 01 113 DENTS 01 UP TO O 5545 01 114 DENTS 01 SINCE O 5546 01 SCREW COLUMN 01 SINCE O 5546
		E1230300	

Engine Camshaft

30/01/98 GB F13 1235 01 1230 30 PAGE 2	30/06/98 CAMSHAFT	19 TRI 19 TZI GTI	
<p style="text-align: right;">E 1230300</p> <p style="text-align: right;">E1230300</p>		7 91 508 050 RP 0829 12 96 052 662 RP 0829 29 8 91 507 345 RP 0827 17 9 91 000 854 RP 0827 18 10 91 509 682 RP 0820 10 11 91 595 319 RP 6922 49 30 79 03 027 060 RP 6929 28 31 79 03 009 256 RP 6913 33 32 79 03 201 048 RP 6917 65 33 79 03 057 100 RP 6962 11 34 79 03 057 003 RP 6962 12 35 79 03 053 481 36 93 501 496 RP 0812 09 37 6932 15 RP 6932 57 38 79 03 032 036 RP 6932 05	TENSION ROLLER UP TO O 5545 SINCE O 5546 ROLLER RETAINER UP TO O 5545 SPRING UP TO O 5545 TENSION FINGER DIAM 10X1,50 UP TO O 5545 SOCKET SCREW DIAM 8X125-23 SINCE O 5546 STUD 7X100-37 UP TO O 5545 SOCKET SCREW 7X100-20 CAPSCREW 10X150-35 FLEXIBLE WASHER 10,4X21,3-0,8 UP TO O 5545 7,4X14,2X0,8 UP TO O 5545 PLAIN WASHER 7X13-1,5 DIAM 10X36-5 HEXAGONAL NUT 10X150-8 UP TO O 5545 DIAM 7X100 UP TO O 5545

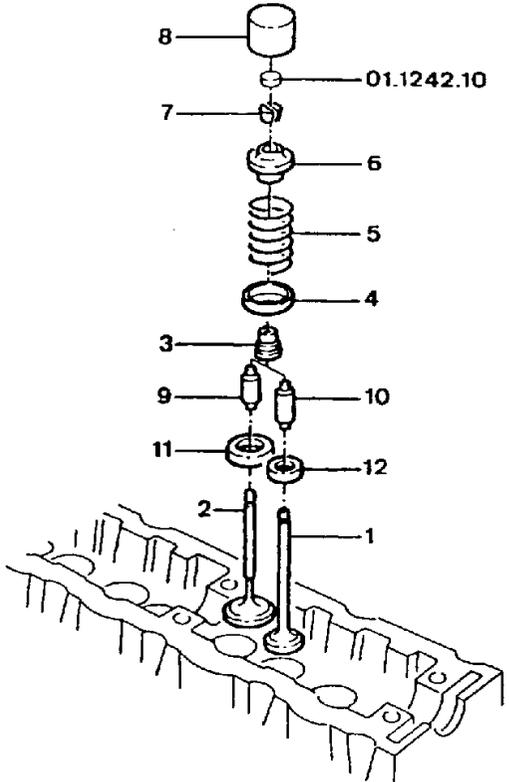
Engine Camshaft

<p>30/01/98 GB F12 1235 01 1230 40 PAGE 1</p>	<p>30/06/98 CAMSHAFT</p>	<p>GTI 16V</p>	
<p>1230</p> <p>01 1230.30</p>		<p>1 96 045 640 RP 0801 F1</p> <p>96 045 641 RP 0801 F2</p> <p>2 91 541 318 RP 0816 40</p> <p>3 96 026 883 RP 0805 48</p> <p>4 91 541 648 RP 0812 21</p> <p>5 91 538 722 RP 0829 20</p> <p>6 91 538 925 RP 0236 25</p> <p>7 91 538 926 RP 0236 44</p> <p>8 96 004 150 RP 5903 29</p> <p>9 96 015 473 RP 4009 24</p> <p>10 96 015 476 RP 4009 25</p> <p>11 91 595 277 RP 5935 25</p> <p>12 79 03 070 005 RP 6976 06</p> <p>13 79 03 070 002 RP 6976 09</p> <p>14 96 058 681 RP 0820 15</p>	<p>CAMSHAFT ADM</p> <p>ECH</p> <p>TIMING BELT 133 DENTS</p> <p>CAMSHAF GEAR</p> <p>PUMP CNTRL PLY DIAM 126</p> <p>TENSION ROLLER</p> <p>CAMSHAFT SEAL DIAM 32X45-8</p> <p>DIAM 36X50-8</p> <p>DISTRIB BRACKET</p> <p>BRACKET</p> <p>PULLEY HOUSING</p> <p>CAPSCREW 10X150-30</p> <p>CRANKSHAFT KEY 6X7X15</p> <p>WEDGE 5X6,5-15</p> <p>SCREW COLUMN</p>
<p>E1230400</p>		<p>.../...</p>	

Engine Camshaft

<p>30/01/98 GB F11 1235 01 1230 40 PAGE 2</p>	<p>30/06/98 CAMSHAFT</p>	<p>GTI 16V</p>	
<p>1230</p> <p>01 1230-30</p> <p>01 1230-30</p>		<p>15 91 595 319 RP 6922 49</p> <p>16 79 03 001 851 RP 6917 65</p> <p>17 97 599 108 RP 0324 27</p> <p>18 79 03 008 012 RP 6924 11</p> <p>19 93 501 496 RP 0812 09</p>	<p>02 SOCKET SCREW DIAM 8X125-23 01</p> <p>03 CAPSCREW DIAM 10X1,50-35 01</p> <p>02 SPECIAL SCREW 6X100-16 01</p> <p>02 CAPSCREW 4X70-10 01</p> <p>03 PLAIN WASHER DIAM 10X36-5 01</p>

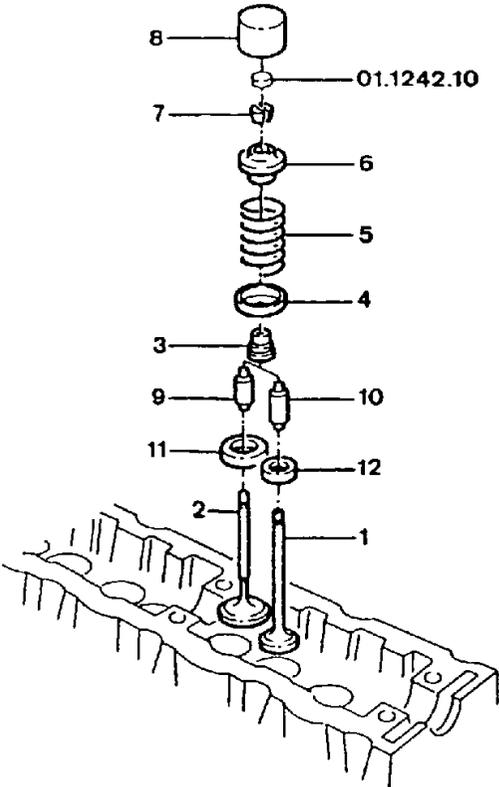
Engine Valves, tappets

30/01/98 GB F10 ↓ 1235 01 1241 10 PAGE 1	30/06/98 VALVES - TAPPET	16 TZI	
 <p style="text-align: right;">01.1242.10</p> <p style="text-align: right;">05/93</p> <p style="text-align: right;">D1241100</p>		1 91 535 017 RP 0948 56 2 91 535 019 RP 0949 57 3 97 504 707 RP 0956 22 4 91 535 896 RP 0953 08 5 91 517 760 6 91 504 811 RP 0951 14 7 96 035 074 RP 0950 05 8 91 513 983 RP 0942 17 9 94 56 001 305 RP 0220 63 94 56 001 306 RP 0220 64 10 94 56 001 308 RP 0221 17 94 56 001 309 RP 0221 18 11 94 56 001 419 RP 0226 A2 12 94 56 001 422 RP 0227 93	04 INTAKE VALVE DIAM 41,6 01 04 EXHAUST VALVE DIAM 34,5 01 08 VALVE STEM SEAL 01 08 VALV SPRG WASHR DIAM 24,5X34,6 - 0,5 01 08 VALVE SPRING NOIR 08 SPRING RETAINER 01 16 VALVE HALF-CONE 01 08 VALVE PISTON 01 VALVE GUIDE 04 ADM DIAM 13,29 01 04 ADM DIAM 13,59 01 04 ECH DIAM 13,29 01 04 ECH DIAM 13,59 01 04 INTK VALVE SEAT DIAM 42,57 01 04 EXH VALVE SEAT DIAM 36,57 01
E1241100			

Engine Valves, tappets

30/01/98 GB F09 1235 01 1241 20 PAGE 1	30/06/98 VALVES - TAPPET	19 TRI 19 TZI GTI	
<p style="text-align: right;">05/93 01241100</p> <p style="text-align: right;">E1241200</p>		1 91 518 971 RP 0948 54 91 535 017 RP 0948 56 2 91 518 972 RP 0949 54 91 535 019 RP 0949 57 3 97 504 707 RP 0956 22 4 91 535 896 RP 0953 08 5 91 517 760 6 95 607 615 RP 0951 18 7 96 035 074 RP 0950 05 8 91 513 983 RP 0942 17 9 94 56 001 305 RP 0220 63 94 56 001 306 RP 0220 64 10 94 56 001 308 RP 0221 17	INTAKE VALVE DIAM 39,5 -SALOON 19 TRI -SALOON 19 TZI DIAM 41,6 -ESTATE 19 TRI -ESTATE 19 TZI -GTI EXHAUST VALVE DIAM 33 -SALOON 19 TRI -SALOON 19 TZI DIAM 34,5 -ESTATE 19 TRI -ESTATE 19 TZI -SALOON GTI VALVE STEM SEAL VALV SPRG WASHR DIAM 24,5X34,6 - 0,5 VALVE SPRING NOIR SPRING RETAINER VALVE HALF-CONE VALVE PISTON VALVE GUIDE ADM DIAM 13,29 ADM DIAM 13,59 ECH DIAM 13,29

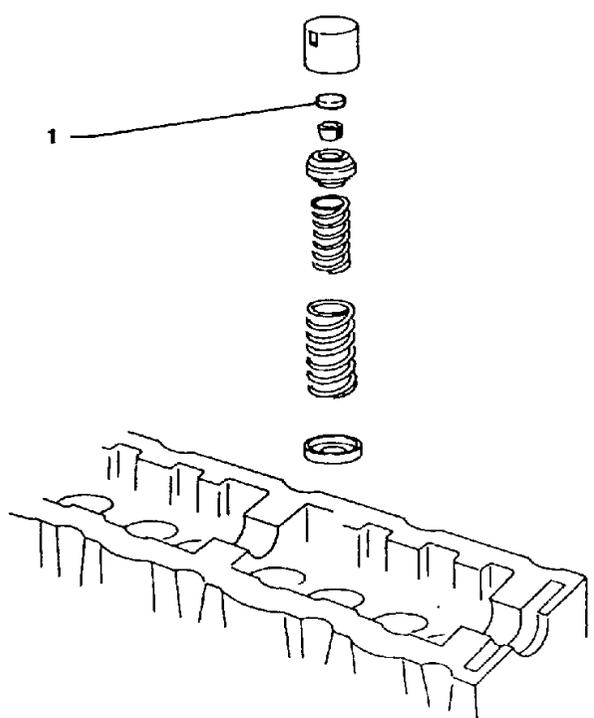
Engine Valves, tappets

30/01/98 GB F08 1235 01 1241 20 PAGE 2	30/06/98 VALVES - TAPPET	19 TRI 19 TZI GTI	
 <p style="text-align: right;">D1241100</p>		10 94 56 001 309 RP 0221 18 11 94 56 001 419 RP 0226 A2 12 94 56 001 422 RP 0227 93	04 VALVE GUIDE ECH DIAM 13,59 01 04 INTK VALVE SEAT DIAM 42,57 01 04 EXH VALVE SEAT DIAM 36,57 01
E1241200			

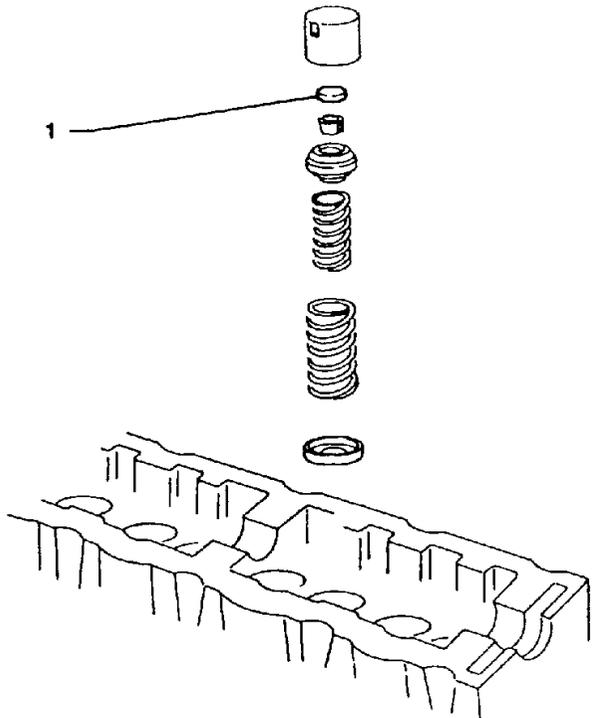
Engine Valves, tappets

30/01/98 GB F07 1235 01 1241 30 PAGE 1	30706798 VALVES - TAPPET	GTI 16V	
<p style="text-align: right;">D1241100</p> <p style="text-align: right;">E1241300</p>		1 91 540 748 RP 0948 61 2 91 540 782 RP 0949 62 3 97 531 278 RP 0956 19 4 91 541 229 RP 0953 12 5 96 012 394 LISTE 9403 6 96 022 323 7 91 541 228 RP 0950 13 8 91 541 478 RP 0942 30 9 94 56 001 305 RP 0220 63 94 56 001 306 RP 0220 64 10 94 56 001 308 RP 0221 17 94 56 001 309 RP 0221 18 11 94 56 001 419 RP 0226 A2 12 94 56 001 422 RP 0227 93	08 INTAKE VALVE DIAM 34,7-106,38 01 08 EXHAUST VALVE DIAM 29,7-105,77 01 16 VALVE STEM SEAL 01 16 VALV SPRG WASHR DIAM 20,2X29,25-0,5 01 16 VALVE SPRING DIAM EXT 28 01 01 SPRING RETAINER 32 VALVE HALF-CONE 01 16 VALVE PISTON 01 VALVE GUIDE 04 ADM DIAM 13,29 01 04 ADM DIAM 13,59 01 04 ECH DIAM 13,29 01 04 ECH DIAM 13,59 01 04 INTK VALVE SEAT DIAM 42,57 01 04 EXH VALVE SEAT DIAM 36,57 01

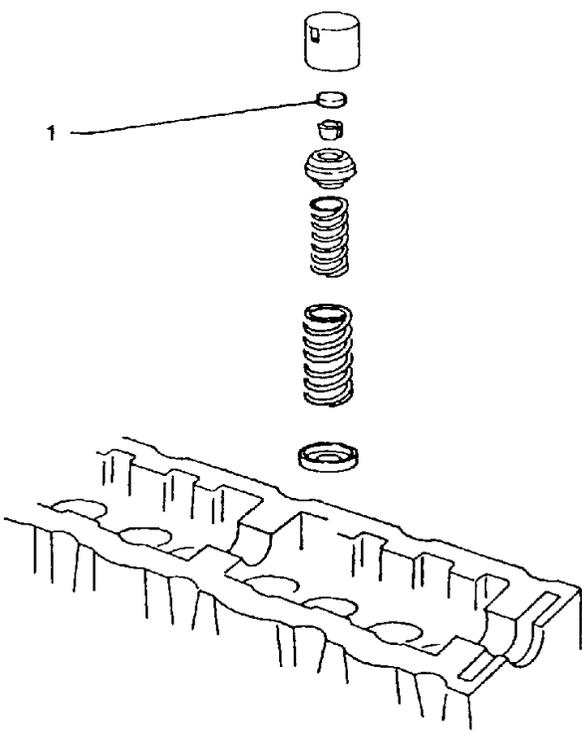
Engine Valve adjusting pieces

<p>30/01/98 GB F06 ↓ 1235 01 1242 10 PAGE 1</p>	<p>30/06/98 VALVE ADJUSTING PIECES</p>		
 <p>1230 [02/88] 01.1242.10</p>	<p>1 91 507 487 RP 0906 62</p> <p>91 507 488 RP 0906 63</p> <p>91 507 489 RP 0906 64</p> <p>91 507 490 RP 0906 65</p> <p>91 507 491 RP 0906 66</p> <p>91 507 492 RP 0906 67</p> <p>91 507 493 RP 0906 68</p> <p>91 507 494 RP 0906 69</p> <p>91 507 495 RP 0906 46</p> <p>91 507 496 RP 0906 70</p> <p>91 507 497 RP 0906 71</p> <p>91 507 498 RP 0906 47</p> <p>91 507 499 RP 0906 72</p> <p>91 507 500 RP 0906 73</p> <p>91 507 501 RP 0906 48</p>	<p>99 ADJUSTING BALL DIAM 13,5 E 2,225 01</p> <p>99 DIAM 13,5 E 2,250 01</p> <p>99 DIAM 13,5 E 2,275 01</p> <p>99 DIAM 13,5 E 2,300 01</p> <p>99 DIAM 13,5 E 2,325 01</p> <p>99 DIAM 13,5 E 2,350 01</p> <p>99 DIAM 13,5 E 2,375 01</p> <p>99 DIAM 13,5 E 2,400 01</p> <p>99 DIAM 13,5 E 2,425 01</p> <p>99 DIAM 13,5 E 2,450 01</p> <p>99 DIAM 13,5 E 2,475 01</p> <p>99 DIAM 13,5 E 2,500 01</p> <p>99 DIAM 13,5 E 2,525 01</p> <p>99 DIAM 13,5 E 2,550 01</p> <p>99 DIAM 13,5 E 2,575 01</p>	
	<p>91 507 502 RP 0906 74</p>	<p>99 DIAM 13,5 E 2,600 01</p> <p>.../...</p>	
	<p>E1242100</p>		

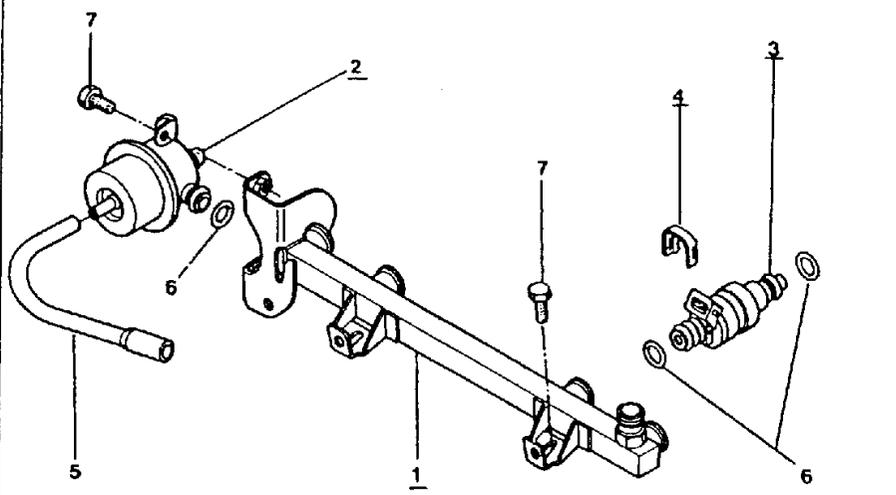
Engine Valve adjusting pieces

30/01/98 GB F05 1235 01 1242 10 PAGE 2	30/06/98 VALVE ADJUSTING PIECES		
 <p>1230</p> <p>[02/88] 01-1242-10</p> <p>E1242100</p>		1 91 507 503 RP 0906 75 91 507 504 RP 0906 49 91 507 505 RP 0906 76 91 507 506 RP 0906 77 91 507 507 RP 0906 50 91 507 508 RP 0906 78 91 507 509 RP 0906 79 91 507 510 RP 0906 51 91 507 511 RP 0906 80 91 507 512 RP 0906 81 91 507 513 RP 0906 52 91 507 514 RP 0906 82 91 507 515 RP 0906 83 91 507 516 RP 0906 53 91 507 517 RP 0906 84 91 507 518 RP 0906 85	ADJUSTING BALL 99 DIAM 13,5 E 2,625 01 99 DIAM 13,5 E 2,650 01 99 DIAM 13,5 E 2,675 01 99 DIAM 13,5 E 2,700 01 99 DIAM 13,5 E 2,725 01 99 DIAM 13,5 E 2,750 01 99 DIAM 13,5 E 2,775 01 99 DIAM 13,5 E 2,800 01 99 DIAM 13,5 E 2,825 01 99 DIAM 13,5 E 2,850 01 99 DIAM 13,5 E 2,875 01 99 DIAM 13,5 E 2,900 01 99 DIAM 13,5 E 2,925 01 99 DIAM 13,5 E 2,950 01 99 DIAM 13,5 E 2,975 01 99 DIAM 13,5 E 3,000 01 .../...

Engine Valve adjusting pieces

<p>30/01/98 GB F03 ↓ 1235 01 1242 10 PAGE 4</p>	<p>30/06/98 VALVE ADJUSTING PIECES</p>		
 <p>1230</p> <p>[02/88] 01-1242-10</p> <p>E1242100</p>	<p>1 91 536 007 RP 0907 17</p> <p>91 536 008 RP 0907 18</p> <p>91 509 927 RP 0906 60</p> <p>91 536 009 RP 0907 19</p> <p>91 509 928 RP 0906 61</p>	<p>ADJUSTING BALL DIAM 13,5 E 3,425</p> <p>DIAM 13,5 E 3,45</p> <p>DIAM 13,5 E 3,475</p> <p>DIAM 13,5 E 3,5</p> <p>DIAM 13,5 E 3,550</p>	

Engine Injection device

30/01/98 GB F02 1235 01 1440 10 PAGE 1	30/06/98 INJECTION DEVICE	19 TRI 19 TZI GTI	
		1 91 516 679 RP 1570 29 2 96 008 217 RP 1563 99 96 045 186 RP 1563 99 3 96 050 712 RP 1984 55 4 91 536 802 RP 1982 18 91 513 214 RP 1982 14 5 91 540 905 RP 1622 A1 94 05 953 068 RP 5953 06 6 95 614 684 RP 1981 25 7 79 03 101 392	01 INJEC FEED RAMP 01 01 PRESS REGULATOR 01 3 BARS 01 -SALOON 19 TRI 01 -SALOON 19 TZI 01 3BARS 01 -ESTATE 19 TRI 01 -ESTATE 19 TZI 01 -GTI 04 ENGINE INJECTOR 01 04 INJECTOR CLIP 04 UP TO O 4982 01 04 SINCE O 4983 01 01 VACUUM UNION LON 330 01 UP TO O 4982 01 VACM UNIT UNION 3,5X8-5000 01 SINCE O 4983 09 RING-SEAL DIAM 8X15-3,5 01 04 WASHER-SCREW 6X1,00-16
1230	09/88 01.1440.X	E1440100	

Engine Injection device

30/01/98 GB F01 1235 01 1440 20 PAGE 1	30/06/98 INJECTION DEVICE	GTI 16V	
		1 91 539 129 RP 1570 36 2 96 045 186 RP 1563 99 3 96 050 712 RP 1984 55 4 91 513 214 RP 1982 14 5 91 540 905 RP 1622 A1 6 95 614 684 RP 1981 25 7 79 03 101 392	01 INJEC FEED RAMP 01 01 PRESS REGULATOR 3BARS 01 01 ENGINE INJECTOR 01 04 INJECTOR CLIP 01 01 VACUUM UNION LON 330 01 09 RING-SEAL DIAM 8X15-3,5 01 04 WASHER-SCREW 6X1,00-16
1230	09/88 01-1440-11 E1440200		

Engine Mixture control unit

<p>30/01/98 GB G01 ↑ 1235 01 1441 10 PAGE 1</p>	<p>30/06/98 MIXTURE - CONTROL UNIT</p>	<p>16 TZI</p>	
<p>1230</p> <p>[01/90] 01.14 41.10 C</p>		<p>1 96 054 608 RP 1929 22</p> <p>96 111 595 RP 1929 J4</p> <p>2 96 084 261</p> <p>3 79 03 016 150 RP 6925 54</p> <p>4 79 03 201 013 RP 6921 39</p> <p>5 79 03 201 011 RP 6921 38</p> <p>6 26 158 199 RP 96 064 628</p> <p>7 79 03 081 073 RP 6992 G2</p>	<p>01 INJ CALCULATOR 01 UP TO O 5256</p> <p>01 G6-10 01 SINCE O 5257</p> <p>01 INJ BOX BRACKET</p> <p>02 TAPPING SCREW 4,2X13</p> <p>01 CAPSCREW 01 5X80-20</p> <p>01 5X80-12</p> <p>01 CAGED NUT 5X80-12,3-12-8,7</p> <p>02 RETAINING CLIP DIAM 4,2</p>
<p>E1441100</p>			

Engine Mixture control unit

30/01/98 GB G02 1235 01 1441 20 PAGE 1	30/06/98 MIXTURE - CONTROL UNIT		
<p>1230</p> <p>09/88 01.1441.15</p> <p>E1441200</p>		1 91 536 154 96 012 928 2 95 632 820 3 95 587 296 RP 1538 34 4 79 03 081 073 RP 6992 G2 5 79 03 016 150 RP 6925 54	01 INJ CALCULATOR BOSCH 0 280 000 345 -SALOON 19 TRI -SALOON 19 TZI 01 BOSCH 0 261 200 162 -ESTATE 19 TRI -ESTATE 19 TZI -GTI 01 INJ BOX BRACKET 01 FIXING STRAP 01 01 RETAINING CLIP DIAM 4,2 01 P005 POLYAMID 02 TAPPING SCREW 4,2X13 01

Engine Mixture control unit

30/01/98 GB G03 ↑ 1235 01 1441 30 PAGE 1	30/06/98 MIXTURE - CONTROL UNIT	GTI 16V	
<p>1230</p> <p>09/88 01.1441.11</p>		1 96 012 927 01 96 027 111 01 RP 1929 12 01 2 95 637 209 01 3 79 03 016 150 02 RP 6925 54 01 4 79 03 233 002 02 RP 6936 91 01 5 79 03 081 073 02 RP 6992 G2 01	01 INJ CALCULATOR UP TO O 5777 O 261 200 158 01 CALCULATOR SINCE O 5778 O 261 200 161 01 INJ BOX BRACKET 02 TAPPING SCREW 4,2X13 01 02 NUT WITH BASE 6X100 01 02 RETAINING CLIP DIAM 4,2 01 P005 POLYAMID
E1441300			

Engine Oil pump and filter

30/01/98 GB G04 1235 01 2221 20 PAGE 1	30/06/98 OIL PUMP - FILTER CARTRIDGE	16 TZI 19 TRI 19 TZI GTI	
		1 95 624 091 RP 1001 56 2 96 002 933 RP 1109 N3 95 638 747 RP 1109 J9 3 93 501 722 RP 1103 54 4 91 506 597 RP 1018 37 5 91 503 587 RP 1033 06 6 91 504 124 RP 1133 13 7 91 541 566 RP 1157 11 8 79 03 075 066 RP 0163 21 9 91 506 834 NFP 10 79 03 201 140 RP 6917 92 79 03 201 023 RP 6921 81 11 91 505 554 RP 1011 05 12 79 03 001 126 RP 6921 32 79 03 101 767 RP 1011 12	01 ENGINE OIL PUMP 01 01 OIL FILTER 01 01 MANN 01 01 OIL FILT INSERT 01 01 OIL SUCTION 01 01 OIL PUMP CHAIN 48 MAILLONS 01 01 DISCHARG PISTON DIAM 16 - 25 01 01 PISTON SPRING 5 BARS 01 01 PLUG DIAM 16X1,50 01 01 CENTRING BUSH DIAM 15-20 01 CAPSCREW 01 6X100-20 01 03 6X100-25 01 01 7X100-70 01 01 7X100-65 01 01 7X100-80 01
E2221200		.../...	

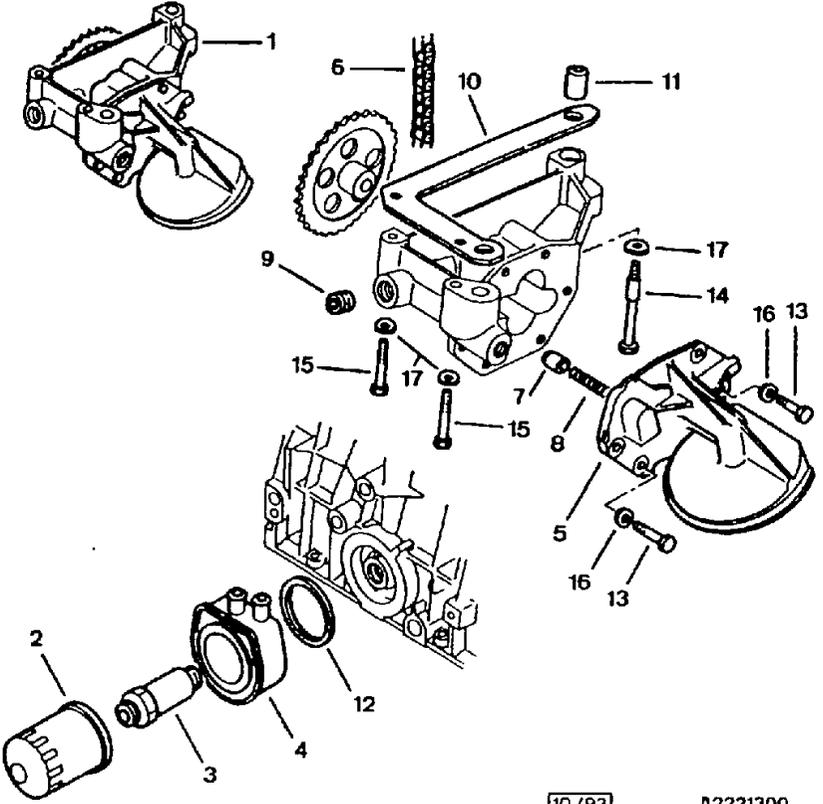
Engine Oil pump and filter

<p>30/01/98 GB G05 1235 01 2221 20 PAGE 2</p>	<p>30/06/98 OIL PUMP - FILTER CARTRIDGE</p>	<p>16 TZI 19 TRI 19 TZI GTI</p>	
		<p>13 79 03 057 013 RP 6962 04</p> <p>14 79 03 057 002 NFP</p>	<p>01 FLEXIBLE WASHER 6,4X12-0,5 01</p> <p>03 SPRING WASHER ELAS DIAM 10</p>
<p>E2221200</p>			

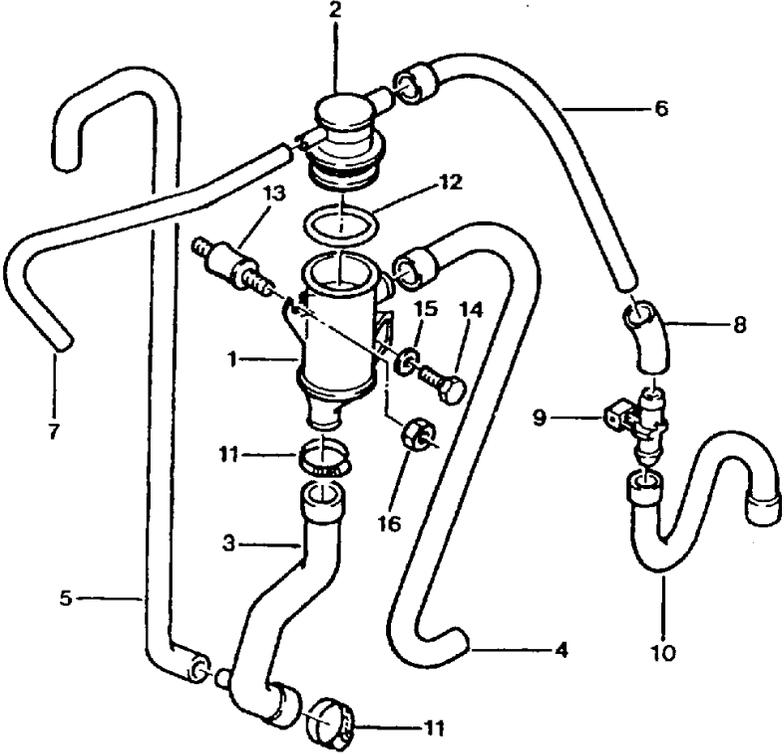
Engine Oil pump and filter

30/01/98 GB G06 ↑ 1235 01 2221 30 PAGE 1	30/06/98 OIL PUMP - FILTER CARTRIDGE	GTI 16V	
		1 95 624 091 RP 1001 56 2 96 002 933 RP 1109 N3 95 638 747 RP 1109 J9 3 93 501 323 RP 1103 E1 1103 E5 4 93 501 359 RP 1103 A9 96 154 874 RP 1103 C9 5 91 506 597 RP 1018 37 6 91 540 844 RP 1033 09 7 91 504 124 RP 1133 13 8 91 541 566 RP 1157 11 9 79 03 075 066 RP 0163 21 10 96 010 857 RP 1012 06 11 91 506 834 NFP 12 93 501 368 RP 1104 21	01 ENGINE OIL PUMP 01 01 OIL FILTER 01 01 MANN 01 01 OIL FILT INSERT 01 L = 81,25 01 UP TO O 5579 01 SINCE O 5580 01 DISTRIB CHAMBER 01 UP TO O 5579 01 EP = 47,6 01 SINCE O 5580 01 OIL SUCTION 01 01 OIL PUMP CHAIN 50 MAILLONS 01 01 DISCHARG PISTON DIAM 16 - 25 01 01 PISTON SPRING 5 BARS 01 01 PLUG DIAM 16X1,50 01 01 OIL PUMP SPACER EP 0,7 01 01 CENTRING BUSH DIAM 15-20 01 01 DIST CHMBR SEAL DIAM 67,7 01 MODINE
E2221300		.../...	

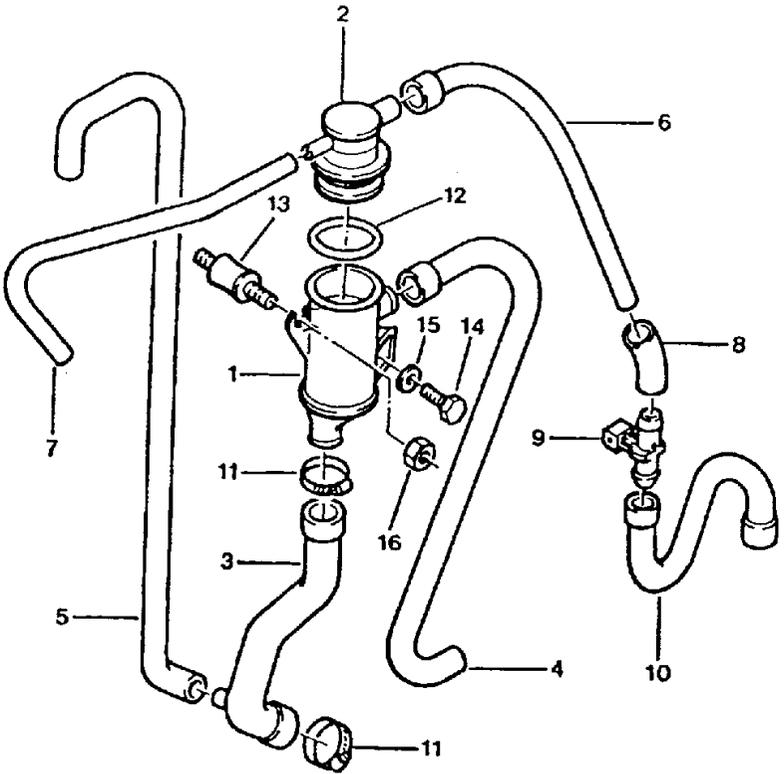
Engine Oil pump and filter

30/01/98 GB G07 ↑ 1235 01 2221 30 PAGE 2	30/06/98 OIL PUMP - FILTER CARTRIDGE	GTI 16V	
 <p style="text-align: center;">[10 /93] 02221300</p>		13 79 03 201 140 RP 6917 92 79 03 201 023 RP 6921 81 14 91 505 554 RP 1011 05 15 79 03 001 126 RP 6921 32 79 03 101 767 RP 1011 12 16 79 03 057 013 RP 6962 04 17 79 03 057 002 NFP	CAPSCREW 01 6X100-20 01 03 6X100-25 01 01 7X100-70 01 01 7X100-65 01 01 7X100-80 01 01 FLEXIBLE WASHER 6,4X12-0,5 01 03 SPRING WASHER ELAS DIAM 10
E2221300			

Engine Oil filler and breather

<p>30/01/98 GB G09 ↑ 1235 01 2255 15 PAGE 1</p>	<p>30/06/98 OIL FILLER - BREATHER</p>	<p>19 TRI 19 TZI GTI</p>	
 <p style="text-align: right;">03/94 E 2255150</p>		<p>1 91 508 955 RP 1178 24</p> <p>2 91 501 789 RP 0258 18</p> <p>3 91 538 416</p> <p>96 005 534 RP 1180 48</p> <p>4 91 538 412 RP 1180 58</p> <p>91 540 259 RP 1180 49</p> <p>5 91 538 413 RP 1180 C4</p> <p>6 96 006 555 RP 1192 F8 + 1192 A6 + 1192 A5</p> <p>91 538 414 RP 1180 35</p> <p>7 91 539 404 RP 1192 46</p> <p>8 96 097 701 RP 1192 A5</p> <p>9 96 100 346 RP 1192 F8</p>	<p>01 OIL BREATHER 01</p> <p>01 FILLER PLUG 01</p> <p>01 OIL VAPOR HOSE 2 DIAM 26X32 1DIAM15 -SALOON 19 TRI -SALOON 19 TZI</p> <p>01 BREATHER HOSE -ESTATE 19 TRI -ESTATE 19 TZI -GTI</p> <p>01 OIL VAPOR HOSE DIAM 19X25 ET 14X20 -SALOON 19 TRI -SALOON 19 TZI</p> <p>01 -ESTATE 19 TRI 01 -ESTATE 19 TZI 01 -GTI</p> <p>01 DIAM 14X20 ET 12X18 01</p> <p>01 -SALOON 19 TRI 01 -SALOON 19 TZI UP TO O 4832 01 01</p> <p>01 BREATHER HOSE 2 DIAM 19X25 -ESTATE 19 TRI -ESTATE 19 TZI -GTI</p> <p>01 OIL VAPOR HOSE DIAM 7X400 01</p> <p>01 -SALOON 19 TZI SINCE O 4833 01</p> <p>01 GAS REHEATER 15W 01 -SALOON 19 TZI SINCE O 4833</p>
<p>E2255150</p>		<p>.../...</p>	

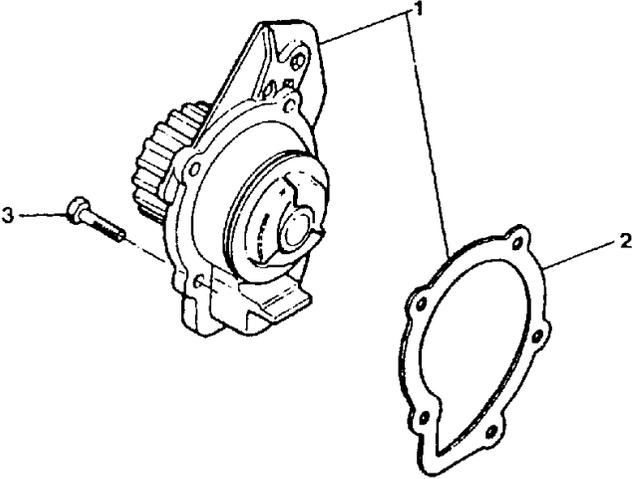
Engine Oil filler and breather

30/01/98 GB G10 1235 01 2255 15 PAGE 2	30/06/98 OIL FILLER - BREATHER	19 TRI 19 TZI GTI	
 <p style="text-align: center;">03/94 E 2255150</p> <p style="text-align: right;">E2255150</p>		10 96 097 702 RP 1192 A6 11 SRV 000 019 RP 6981 39 12 79 03 065 065 13 79 10 034 230 RP 1439 10 91 538 489 14 79 03 201 021 RP 6915 69 15 79 03 057 013 RP 6962 04 16 25 260 019 RP 79 03 232 016	01 OIL VAPOR HOSE 01 -SALOON 19 TZI SINCE O 4833 99 METALLIC CLAMP DIAM 25 A 47 LARG 9 01 01 PLUG SEAL DIAM 42X52X5 BRTHR BRACKET 01 -SALOON 19 TRI 01 -SALOON 19 TZI 01 -ESTATE 19 TRI 01 -ESTATE 19 TZI 01 -GTI 01 CAPSCREW 6X1,00-16 01 01 FLEXIBLE WASHER 6,4X12-0,5 01 01 HEXAGONAL NUT DIAM 6X1,00 01

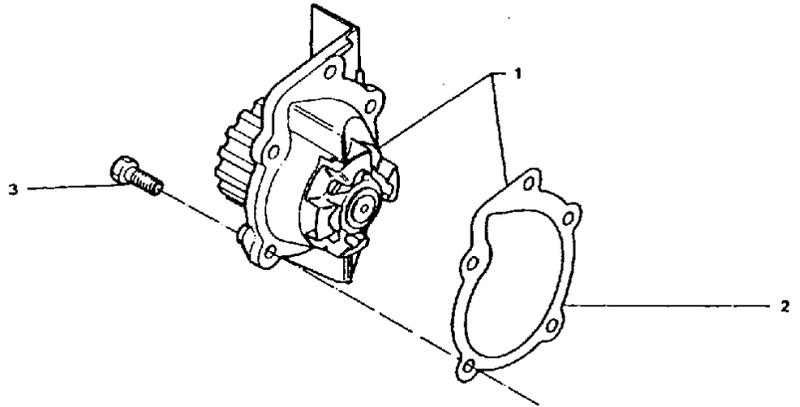
Engine Oil filler and breather

30/01/98 GB G11 ↑ 1235 01 2255 20 PAGE 1	30/06/98 OIL FILLER - BREATHER	GTI 16V	
		1 91 508 955 RP 1178 24 2 96 012 603 RP 0258 37 3 91 539 867 RP 1180 45 4 91 541 324 RP 1180 46 5 96 012 197 6 91 541 556 RP 1192 63 7 SRV 000 019 RP 6981 39 SRV 000 017 RP 6981 37 8 79 03 065 065 9 91 541 346 10 79 03 201 021 RP 6915 69 11 79 03 057 013 RP 6962 04	01 OIL BREATHER 01 01 FILLER PLUG 01 OIL VAPOR HOSE 01 01 01 01 01 01 99 METALLIC CLAMP DIAM 25 A 47 LARG 9 01 99 ADJUST CLAMP DIAM 16 A 27 LARG 9 01 01 PLUG SEAL DIAM 42X52X5 01 01 BRTHR BRACKET 01 01 CAPSCREW 6X1,00-16 01 01 FLEXIBLE WASHER 6,4X12-0,5 01
1230	[07/88] 1.225.1	52.55200	

Engine Water pump

30/01/98 GB G12 ↑ 1235 01 2310 20 PAGE 1	30/05/98 WATER PUMP	16 TZI 19 TRI 19 TZI GTI	
 <p>1230</p> <p>102/81 1-231-20</p> <p>E2110200</p>		1 95 656 566 RP 1201 63 95 656 567 RP 1201 61 2 96 042 956 RP 1206 A4 3 79 03 001 081 RP 6915 36 + 6962 12	01 WATER PUMP 01 UP TO O 5545 01 01 SINCE O 5546 01 01 WTR PUMP GASKET 01 05 WASHER-SCREW DIAM 7X1,00-20 01 01

Engine Water pump

<p>30/01/88 GB G13 ↑ 1235 01 2310 30 PAGE 1</p>	<p>30/06/98 WATER PUMP</p>	<p>GTI 16V</p>	
 <p>1230 [02/84] 1-231-30</p>		<p>1 95 656 567 01 RP 1201 61 01</p> <p>2 96 042 956 01 RP 1206 A4 01</p> <p>3 79 03 001 081 05 RP 6915 36 01 + 6962 12 01</p>	<p>WATER PUMP</p> <p>WTR PUMP GASKET</p> <p>WASHER-SCREW DIAM 7X1,00-20</p>
<p>E2310300</p>			

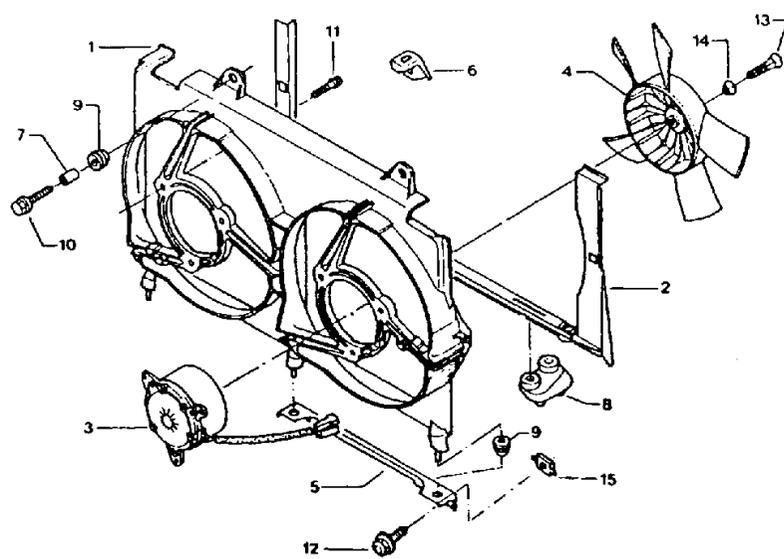
Engine Cooling fan

30/01/98 GB G14 1235 01 2410 20 PAGE 1	30/06/98 MOTOR-DRIVEN FAN	16 TZI 19 TRI 19 TZI GTI																																																																							
	<table border="1"> <tr> <td>1</td> <td>95 603 164</td> <td>01</td> <td>MOTOR-DRIVN FAN 300 W</td> </tr> <tr> <td>2</td> <td>95 585 433 RP 0382 53</td> <td>02 01</td> <td>SPACER FAN BRACKET</td> </tr> <tr> <td>3</td> <td>95 608 293</td> <td>01</td> <td>SUP</td> </tr> <tr> <td>4</td> <td>95 591 751</td> <td>01</td> <td>INF</td> </tr> <tr> <td>5</td> <td>95 592 530</td> <td>06</td> <td>RUBBER GROMMET DIAM 12 EXT 24</td> </tr> <tr> <td>6</td> <td>95 567 915</td> <td>02</td> <td>MOTOR DRIV FAN 6 PALES GATE</td> </tr> <tr> <td></td> <td>95 601 820</td> <td>02</td> <td>6 PALES A O P</td> </tr> <tr> <td>7</td> <td>95 593 786</td> <td>02</td> <td>FAN BRACKET GATE</td> </tr> <tr> <td></td> <td>95 601 821</td> <td>02</td> <td>A O P</td> </tr> <tr> <td>8</td> <td>ZF 04 351 552 RP 1250 97</td> <td>02 01</td> <td>STOP-RING</td> </tr> <tr> <td>9</td> <td>79 03 101 473 RP 6922 C7</td> <td>04 01</td> <td>WASHER-SCREW DIAM 6X1,00-30</td> </tr> <tr> <td>10</td> <td>79 03 201 140 RP 6917 92</td> <td>01 01</td> <td>CAPSCREW 6X100-20</td> </tr> <tr> <td>11</td> <td>79 03 001 894</td> <td>06</td> <td>WASHER-SCREW 6X1,00-14</td> </tr> <tr> <td>12</td> <td>ZF 05 934 435</td> <td>02</td> <td>PLAIN WASHER 10X24-1</td> </tr> <tr> <td>13</td> <td>79 03 056 008 RP 6958 56</td> <td>06 01</td> <td>SPRING WASHER 6,3X11</td> </tr> <tr> <td>14</td> <td>22 363 019 RP 6947 77</td> <td>03 01</td> <td>PISTON WASHER DIAM 6X14X1,5</td> </tr> <tr> <td>15</td> <td>25 260 019 RP 79 03 232 016</td> <td>01 01</td> <td>HEXAGONAL NUT DIAM 6X1,00</td> </tr> <tr> <td>16</td> <td>79 03 044 020 RP 6941 93</td> <td>04 01</td> <td>CAGED NUT 6X100-14-12,4-6</td> </tr> </table>	1	95 603 164	01	MOTOR-DRIVN FAN 300 W	2	95 585 433 RP 0382 53	02 01	SPACER FAN BRACKET	3	95 608 293	01	SUP	4	95 591 751	01	INF	5	95 592 530	06	RUBBER GROMMET DIAM 12 EXT 24	6	95 567 915	02	MOTOR DRIV FAN 6 PALES GATE		95 601 820	02	6 PALES A O P	7	95 593 786	02	FAN BRACKET GATE		95 601 821	02	A O P	8	ZF 04 351 552 RP 1250 97	02 01	STOP-RING	9	79 03 101 473 RP 6922 C7	04 01	WASHER-SCREW DIAM 6X1,00-30	10	79 03 201 140 RP 6917 92	01 01	CAPSCREW 6X100-20	11	79 03 001 894	06	WASHER-SCREW 6X1,00-14	12	ZF 05 934 435	02	PLAIN WASHER 10X24-1	13	79 03 056 008 RP 6958 56	06 01	SPRING WASHER 6,3X11	14	22 363 019 RP 6947 77	03 01	PISTON WASHER DIAM 6X14X1,5	15	25 260 019 RP 79 03 232 016	01 01	HEXAGONAL NUT DIAM 6X1,00	16	79 03 044 020 RP 6941 93	04 01	CAGED NUT 6X100-14-12,4-6
1	95 603 164	01	MOTOR-DRIVN FAN 300 W																																																																						
2	95 585 433 RP 0382 53	02 01	SPACER FAN BRACKET																																																																						
3	95 608 293	01	SUP																																																																						
4	95 591 751	01	INF																																																																						
5	95 592 530	06	RUBBER GROMMET DIAM 12 EXT 24																																																																						
6	95 567 915	02	MOTOR DRIV FAN 6 PALES GATE																																																																						
	95 601 820	02	6 PALES A O P																																																																						
7	95 593 786	02	FAN BRACKET GATE																																																																						
	95 601 821	02	A O P																																																																						
8	ZF 04 351 552 RP 1250 97	02 01	STOP-RING																																																																						
9	79 03 101 473 RP 6922 C7	04 01	WASHER-SCREW DIAM 6X1,00-30																																																																						
10	79 03 201 140 RP 6917 92	01 01	CAPSCREW 6X100-20																																																																						
11	79 03 001 894	06	WASHER-SCREW 6X1,00-14																																																																						
12	ZF 05 934 435	02	PLAIN WASHER 10X24-1																																																																						
13	79 03 056 008 RP 6958 56	06 01	SPRING WASHER 6,3X11																																																																						
14	22 363 019 RP 6947 77	03 01	PISTON WASHER DIAM 6X14X1,5																																																																						
15	25 260 019 RP 79 03 232 016	01 01	HEXAGONAL NUT DIAM 6X1,00																																																																						
16	79 03 044 020 RP 6941 93	04 01	CAGED NUT 6X100-14-12,4-6																																																																						

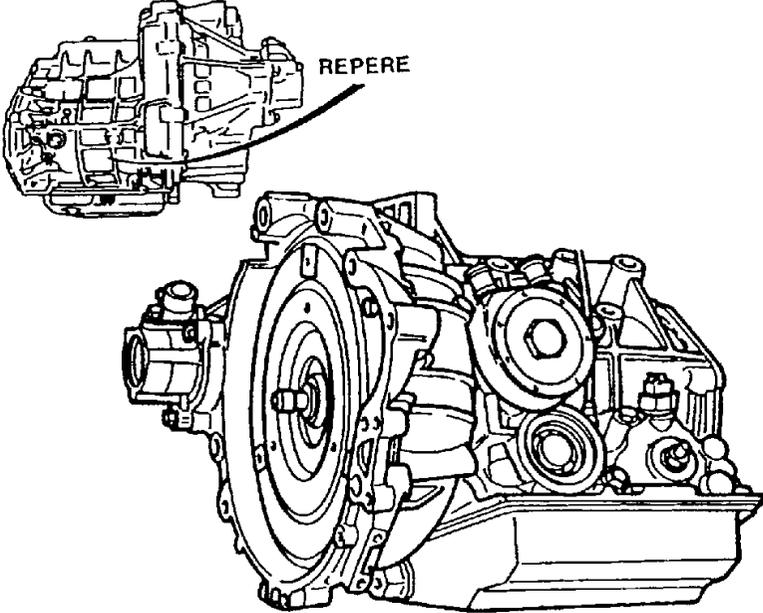
Engine Cooling fan

<p>30/01/98 GB G15 ↑ 1235 01 2410 20 PAGE 2</p>	<p>30/06/98 MOTOR-DRIVEN FAN</p>	<p>16 TZI 19 TRI 19 TZI GTI</p>	
<p>[10/93] D2410120</p>		<p>17 79 03 085 044 RP 6547 08</p>	<p>02 STRAP LON 200 LARG 4,6 01</p>
<p>E2410200</p>			

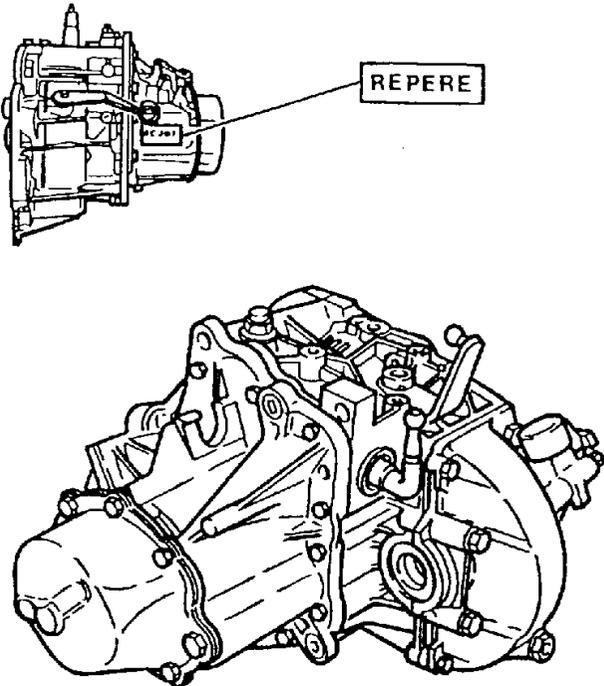
Engine Cooling fan

<p>30/01/98 GB H15 1235 01 2410 30 PAGE 1</p>	<p>30/06/98 MOTOR-DRIVEN FAN</p>	<p>GTI 16V</p>	
 <p>1230</p> <p>102/88</p> <p>1.242.20</p> <p>E2410300</p>	<p>1 95 636 664 2 95 636 643 3 95 593 547 4 95 593 548 5 95 591 751 6 95 608 293 7 95 585 433 8 95 635 732 9 95 592 530 10 79 03 201 265 11 79 03 020 002 12 79 03 001 894 13 79 03 005 026 14 79 03 056 054 15 79 03 044 020</p>	<p>01 01 02 02 01 01 02 02 05 02 01 03 03 01 01 01 05</p>	<p>FAN BRACKET RECYCL PANEL MOTOR DRIVN FAN MOTOR DRIV FAN FAN BRACKET INF SUP SPACER RADIATR BRACKET RUBBER GROMMET DIAM 12 EXT 24 CAPSCREW DIAM 6X1,00-35 6X100-12 WASHER-SCREW 6X1,00-14 CAPSCREW 4X80-8 SPRING WASHER 5,2X10-0,4 CAGED NUT 6X100-14-12,4-6</p>

Gearbox Automatic gearbox, complete

<p>30/01/98 GB C02 ↑ 1235 01 3300 10 PAGE 1</p>	<p>30/06/98 COMPLETE AUTOMATIC GEARBOX</p>	<p>BVA</p>	
<div style="display: flex; align-items: center;">  </div> <p style="text-align: center; margin-top: 20px;">[04/93] D330023C</p>		<p>1 96 079 333</p> <p style="text-align: center;">NFP</p> <p style="text-align: center;">96 134 237</p> <p style="text-align: center;">96 081 724</p> <p style="text-align: center;">96 030 983</p>	<p>NEW AUT GEARBOX CP17X65 REP 2GZ46 ZF/S -SALOON 16 TZI UP TO O 5306</p> <p>CP17X65 REP 2GZ60 ZF/S -SALOON 16 TZI SINCE O 5307</p> <p>CP20X63 REP 2GZ47 ZF/S -SALOON 19 TRI UP TO O 5714 -SALOON 19 TZI UP TO O 5714</p> <p>CP17X65 REP 2GZ25 ZF/S -ESTATE 19 TRI -ESTATE 19 TZI -GTI</p>
<p>D330023C</p>			

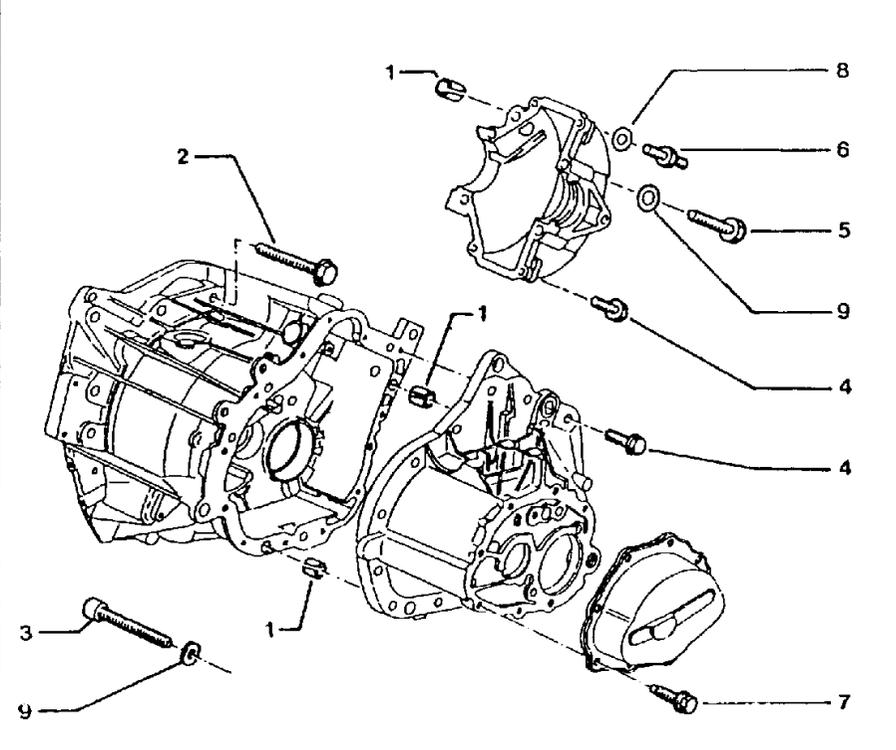
Gearbox Manual gearbox, complete

<p>30/01/98 GB C03 ↑ 1235 01 3300 30 PAGE 1</p>	<p>30/06/98 MANUAL GEARBOX</p>	<p>GTI 16V</p>	
 <p data-bbox="779 475 904 517">REPERE</p> <p data-bbox="846 1171 927 1197">05/93</p> <p data-bbox="1016 1177 1120 1197">D330040A</p> <p data-bbox="1077 1481 1173 1500">D330040A</p>		<p>1 94 557 379 80 01</p>	<p>NEW GEARBOX C14X62 REP 2CJ82 REPERE (CJ8B) CJ82</p>

Gearbox *Manual gearbox housing*

30/01/98 GB C04 ↑ 1235 01 3310 20 PAGE 1	30/06/98 MANUAL GEARBOX HOUSING	GTI 16V	
		1 97 90 157 500 RP 97 90 184 600 2 97 532 278 RP 2207 70 3 96 077 252 RP 2105 17 4 97 500 122 RP 2109 25 5 96 035 199 RP 2515 22 6 97 517 612 RP 2268 14 7 97 512 501 RP 2218 07 8 95 635 353 RP 2218 10 9 96 018 108 RP 2257 41 10 94 02 221 320 RP 2221 32 11 96 013 227 RP 2221 30 12 97 505 109 RP 2218 13 13 79 03 062 030 RP 6988 42 14 79 03 001 657 RP 6917 31 15 79 03 057 003 RP 6962 12	01 HOUSING ASSY 01 GEAR-BOX COVER 01 GUIDE BUSH 01 COVER GASKET 01 SHAFT SEAL DIAM 16X30X7X11 01 GR-BOX BREATHER 01 SHAFT PROTECTOR 01 PROTECTOR 01 CONTACT SWITCH 01 CASING PLUG DIAM 16X150 01 OIL LEVER PLUG DIAM 14X100 01 MAGNET 02 PLUG SEAL DIAM 14,3X21-1 03 CAPSCREW DIAM7X100-16 03 FLEXIBLE WASHER 7,4X14,2X0,8
E3310200			

Gearbox *Gearbox casing and fastening*

30/01/98 GB C05 ↑ 1235 01 3314 10 PAGE 1	30/06/98 GEARBOX CASING - FASTENING	GTI 16V	
 <p>1230 [06/89] 01 3314 10A</p> <p style="text-align: right;">E3314100</p>		1 79 03 067 033 RP 6968 42 2 79 03 201 781 RP 6923 09 3 79 03 009 002 RP 6913 78 4 79 03 201 872 RP 6922 70 5 79 03 201 054 RP 6921 35 6923 09 6 79 03 027 298 RP 2210 09 7 79 03 001 898 RP 6921 09 8 79 03 057 003 RP 6962 12 9 97 511 946 RP 2221 26	03 PIN DIAM 12 LON 15 01 06 SELF-TAP SCREWS HRDL 10X1,50-70 01 01 SOCKET SCREW 10X150-70 01 17 SELF-TAP SCREWS THRI 7X100-35 01 04 CAPSCREW DIAM 10X1,50-65 01 UP TO B 2780499 04 SELF-TAP SCREWS 10X150-70 SINCE B 2780500 02 SCREW COLUMN DIAM 7X100-15-35 01 08 SELF-TAP SCREWS 7X100-22 01 02 FLEXIBLE WASHER 7,4X14,2X0,8 01 05 STOP PLATE 17X17 01

Gearbox *Tacho control, axle housing*

30/01/98 GB C06 ↑ 1235 01 3324 10 PAGE 1	30/06/98 TACHOMETER CONTROL - AXLE HOUSING		
		1 97 500 373 RP 2641 50 2 97 500 211 RP 2228 12 94 02 228 108 RP 2228 12 97 500 365 RP 2228 03 97 512 714 RP 2228 04 3 97 504 735 RP 2649 04 97 518 193 RP 2649 11 4 97 504 694 RP 2643 02 97 518 191 RP 2643 04 5 96 080 792 RP 3121 26 7 79 03 065 130 RP 2212 07	01 CONTROL SUPPORT 01 01 EXTENSION 01 -BVA UP TO O 4725 01 01 EP = 8,65MM DIAM 6 01 -BVA SINCE O 4726 01 01 E = 8,65MM DIAM 7 01 -GTI 16V 01 01 E = 10MM DIAM 7 01 -GTI 16V 01 01 CONTROL PINION 01 19 DTS 01 -16 TZI 01 -GTI 16V 01 17 DTS 01 -SALOON 19 TRI 01 -SALOON 19 TZI 01 -ESTATE 19 TRI 01 -ESTATE 19 TZI 01 -GTI 01 TACHOMETR SCREW 01 22 DENTS 01 -16 TZI 01 -GTI 16V 01 19 DTS 01 -SALOON 19 TRI 01 -SALOON 19 TZI 01 -ESTATE 19 TRI 01 -ESTATE 19 TZI 01 -GTI 01 SEAL RIGHT DIAM 29,9X47-11,3 01 01 RING-SEAL 01 59 F 3 01
1230	[06/89] 01 3324 10	E3324100	.../...

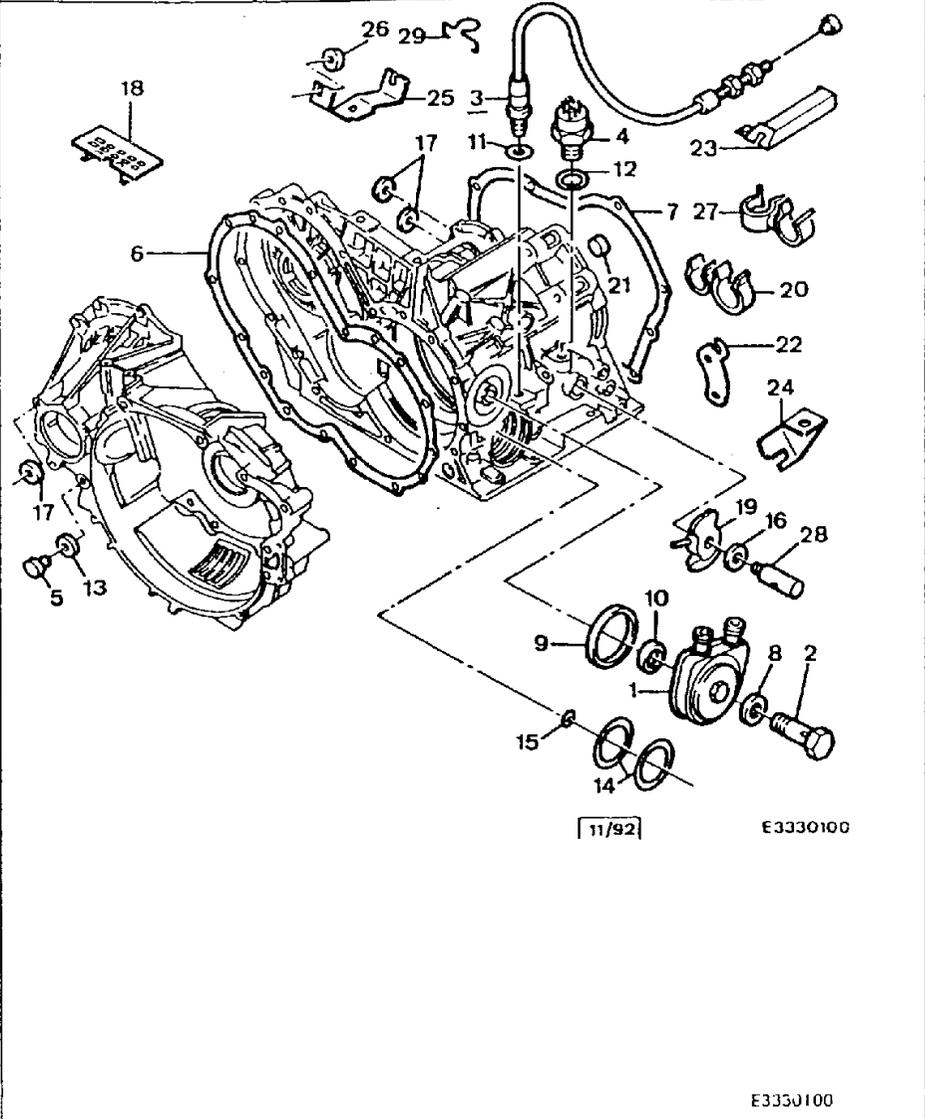
Gearbox *Tacho control, axle housing*

30/01/98 GB C07 ↑ 1235 01 3324 10 PAGE 2	30/06/98 TACHOMETER CONTROL - AXLE HOUSING		
	8 79 03 065 134 01 RP 2645 12 01 9 79 03 087 095 02 RP 2651 04 01 96 092 841 01 RP 2644 04 01 10 05 22 395 100 01 RP 2650 07 01 11 79 03 001 707 01 RP 6917 31 01 79 03 201 747 01 RP 6922 97 01 12 79 03 201 039 01 RP 6921 42 01 13 79 03 001 623 02 NFP 8X125-30 14 79 03 057 003 01 RP 6962 12 01 15 79 03 057 005 03 RP 6962 13 01	RING-SEAL 24 TORE 3 TACHOMETER SEAL DIAM 8X16X6,5 UP TO O 4740 DIAM 8X16X7/15,6-21 SINCE O 4741 STOP PIN CAPSCREW DIAM 7X1,00-16 -BVM SELF-TAP SCREWS 6X100-16 -BVA CAPSCREW 8X125-55 8X125-30 FLEXIBLE WASHER 7,4X14,2X0,8 DIAM 8X14	
1230 06/89 01 3324 10 E3324100			

Gearbox *Gearbox cooling*

30/01/98 GB C08 ↑ 1235 01 3330 10 PAGE 1	30/06/98 GEAR-BOX COOLING	BVA	
		1 POS: CHAUSSON - 2 POS: MODINE	
		1 95 496 925 RP 2275 31 + 2284 18 2 95 610 719 95 611 985 RP 2275 29 3 95 659 545 95 655 360 4 95 619 640 RP 2257 29 5 95 614 474 RP 2208 23 6 95 614 472 RP 2209 24 7 95 614 473 RP 2209 31 94 02 209 318 RP 2209 31 8 95 610 720 95 611 986 RP 2275 27	01 <i>DISTRIB CHAMBER</i> 01 01 01 HOLLOW SCREW 01 97X 01 01 CABLE 01 LON 943,7 -16 TZI 01 LON 800,7 -SALOON 19 TRI -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI 01 SWITCH 01 01 <i>CASING PLUG DIAM 10X100</i> 01 01 <i>HOUSING GASKET</i> 01 01 <i>UP TO O 5075</i> 01 01 <i>SINCE O 5076</i> 01 01 SEAL 01 CHAUSSON 01 2 POS 20,5X26X1,5 01
E3330100		9 95 610 721	01 DISTRIBT GASKET CHAUSSON

Gearbox *Gearbox cooling*

30/01/98 GB C09 1235 01 3330 10 PAGE 2	30/06/98 GEAR-BOX COOLING	BVA	
 <p style="text-align: right;">E3330100</p>		1 POS: CHAUSSON - 2 POS: MODINE	
		9 93 501 368 RP 1104 21	01 01

Gearbox *Gearbox cooling*

30/01/98 GB C10 ↑ 1235 01 3330 10 PAGE 3	30/06/98 GEAR-BOX COOLING	BVA	
<p style="text-align: center;">E3330100 11/92</p>		1 POS: CHAUSSON - 2 POS: MODINE	
		22 91 537 031 RP 1664 A0	01 STOP LUG 01 -SALOON 19 TRI 01 -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI
		23 96 008 837 RP 1664 A8	01 -SALOON 19 TRI 01 -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI
		24 96 100 415 RP 0350 14	01 -16 TZI 01
		25 95 635 681	01 CONTROL BRACKET -SALOON 19 TRI -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI
		26 95 636 441	01 SUPPORT SPACER DIAM 16X7,5X5 -SALOON 19 TRI -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI
		27 96 035 618 RP 6997 H8	01 SWIVEL CLIP 2T 6 L 32 01 -16 TZI
		28 94 02 571 108 RP 2571 10	01 SELECT SPINDLE
		29 95 609 755 RP 1654 58	01 RETAINING CLIP 01
E3330100			

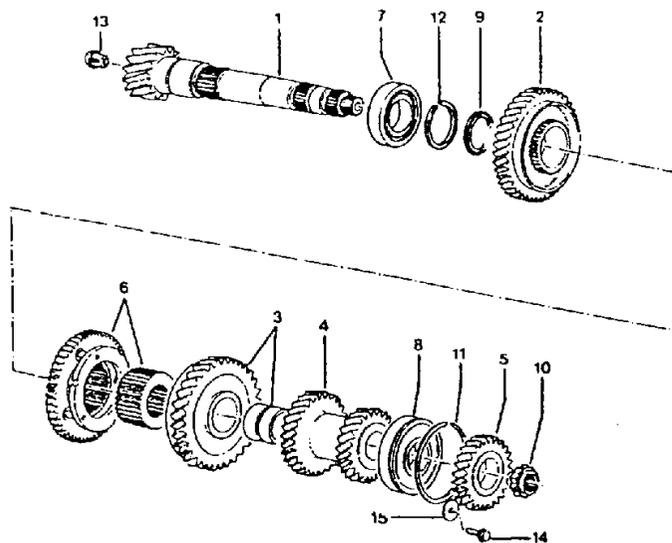
Gearbox *Gearbox lower components*

30/01/98 GB C11 ↑ 1235 01 3331 10 PAGE 1	30/06/98 GEARBOX - LOWER COPONENTS	BVA	
		1 95 659 546 94 02 570 758 RP 2570 75 94 02 570 370 RP 2570 37 94 02 570 570 RP 2570 57 2 95 614 484 RP 2263 14 3 95 614 480 RP 2213 13 4 95 020 518 RP 2266 15 96 065 786 RP 2266 22 5 96 045 254 RP 2270 40 96 045 041 6 95 614 474 RP 2208 23 7 95 614 485 RP 2264 12 8 95 614 486 RP 2264 13	01 BVA HYD UNIT 01 REP 097 -16 TZI GEARBOX 1036000137 01 REP 107 -16 TZI GEARBOX 1036000168 01 HYD CONTROL REP 054 -SALOON 19 TRI -SALOON 19 TZI GEARBOX 1036000144 01 BVA HYD UNIT REP 079 -ESTATE 19 TRI -ESTATE 19 TZI -GTI GEARBOX 1036000091 01 STRAINER 01 AGB OIL SUMP 01 OIL GAUGE UP TO O 4619 01 GR-BX DIPSTICK 01 SINCE O 4620 01 FILLING PIPE VOIR NOTA -16 TZI 01 FILLER PIPE VOIR NOTA -19 TRI -19 TZI -GTI 01 CASING PLUG DIAM 10X100 01 RING SEAL 01 FLAT SEAL
E3331100			.../...

Gearbox Gearbox lower components

<p>30/01/98 GB C12 ↑ 1235 01 3331 10 PAGE 2</p>	<p>30/06/98 GEARBOX - LOWER COPONENTS</p>	<p>BVA</p>	
		<p>9 95 614 481 RP 2214 11</p> <p>94 02 214 118 RP 2214 11</p> <p>10 95 614 471 RP 2106 06</p> <p>11 95 565 950 RP 2210 24</p> <p>12 94 02 579 488 RP 2579 48</p> <p>13 95 614 874 RP 2579 47</p>	<p>01 HOUSING GASKET 01 UP TO O 5075</p> <p>01 SINCE O 5076 01</p> <p>01 SEAL DIAM 10X13,5-1 01</p> <p>01 SCREW CHC 01</p> <p>08 AGB SCREW 01 DIAM 6X1,00-70</p> <p>01 6X100-80 01</p>
<p>E3331100</p>			

Gearbox *Secondary shaft, gears, sync*

30/01/98 GB C13 ↑ 1235 01 3344 70 PAGE 1	30/06/98 SECONDARY SHAFT - GEARS - SYNCHRONIZERS	GTI 16V	
 <p>1230</p> <p>106/09</p> <p>01 3344 70A</p> <p>E3344700</p>		1 94 02 316 710 RP 2316 A3 2 97 534 314 RP 2334 17 3 94 02 335 410 RP 2335 47 4 97 535 402 RP 2336 18 5 97 535 403 RP 2344 06 6 94 02 323 660 RP 2323 70 7 96 014 376 RP 2317 66 8 97 500 132 RP 2317 36 9 97 511 466 RP 2317 41 10 79 03 040 029 RP 2304 43 11 79 03 066 124 RP 2318 73 12 79 03 066 197 RP 2318 75 13 97 504 923 RP 2211 22 14 00 80 624 600 15 79 03 053 425 RP 6947 55	01 SHAFT C14X62 01 01 DRIVEN PINION 01 1ER-38 DT (13X38) 01 01 2E -(20X37) 01 01 3E-4E - 31X32 01 01 5E - 28 DENTS 01 01 SYNCHRONIZER 1E-2E 01 01 SHAFT BEARING 01 DIAM 36X72X17,5 01 01 DIAM 25X75X17 01 01 NEEDLE BEARING DIAM 35,8X52X2 01 02 SELF LOCKG NUT 20X150-10 01 01 STOP-RING 01 DIAM 76,5 01 01 DIAM INT 34 01 01 OIL FITTING 01 01 CAPSCREW DIAM 7X1,00-22 01 01 PLAIN WASHER DIAM 7,1X22X3 01

Gearbox Primary shaft, pinions, sync

<p>30/01/98 GB C14 ↑ 1235 01 3346 40 PAGE 1</p>	<p>30/06/98 PRIMARY SHAFT-PINIONS-SYNCHRONISERS</p>	<p>GTI 16V</p>	
<p>1230 [06/89] 01 3346 40A</p>		<p>1 96 032 825 RP 2311 94</p> <p>2 97 535 399 RP 2331 07</p> <p>3 94 02 332 040 RP 2332 08</p> <p>4 94 02 333 120 RP 2333 19</p> <p>5 96 032 965 RP 2381 30</p> <p>6 94 02 353 340 RP 2353 40</p> <p>7 94 02 353 310 RP 2388 04</p> <p>8 96 042 811 RP 2372 40</p> <p>9 97 500 325 RP 2382 23</p> <p>10 79 03 040 029 RP 2304 43</p> <p>11 79 03 067 104</p> <p>12 97 500 278 RP 2313 75</p> <p>13 79 03 053 439 LISTE 9506</p> <p>79 03 053 442 LISTE 9506</p> <p>79 03 053 443 LISTE 9506</p>	<p>01 PRIMARY SHAFT 12-20-13 01</p> <p>01 DRIVE GEAR 01 3E - 25 DENTS</p> <p>01 4E - 32 DENTS 01</p> <p>01 5E - 37 DENTS 01</p> <p>01 SLIDING GEAR M AR - 31 DTS 01</p> <p>01 SYNCHRONIZER 01 3E-4E</p> <p>01 5E 01</p> <p>02 BEARING DIAM 25X47X15 01 SNR</p> <p>01 RETURN SHAFT M AR -DIAM 18 01</p> <p>01 SELF LOCKG NUT 20X150-10 01</p> <p>01 PIN 4X20 01</p> <p>01 SPACER 01</p> <p>01 ADJUSTMENT SHIM 01 DIAM 39X46,8X0,7</p> <p>01 DIAM 39X46,8X1,0</p> <p>01 DIAM 39X46,8X1,1</p>
		<p>EE346400</p>	

Gearbox Primary shaft, pinions, sync

<p>30/01/98 GB C15 ↑ 1235 01 3346 40 PAGE 2</p>	<p>30/06/98 PRIMARY SHAFT-PINIONS-SYNCHRONISERS</p>	<p>GTI 16V</p>	
<p>1230 [06/89] 01 3346 40A</p> <p style="text-align: right;">E3346400</p>		<p>13 79 03 053 444 LISTE 9306 79 03 053 445 LISTE 9306 79 03 053 446 LISTE 9603 14 96 077 209 RP 2109 40 15 79 03 101 307 RP 6933 04 16 00 81 508 500 RP 2385 09</p>	<p>ADJUSTMENT SHIM DIAM 39X46,8X1,2 DIAM 39X46,8X1,3 DIAM 39X46,8X1,4 PRIM SHAFT SEAL DIAM 23X36X7 CAPSCREW DIAM 8X1,25-50 SHAFT SEAL DIAM 8X15X2</p>

Gearbox *Spindles and forks*

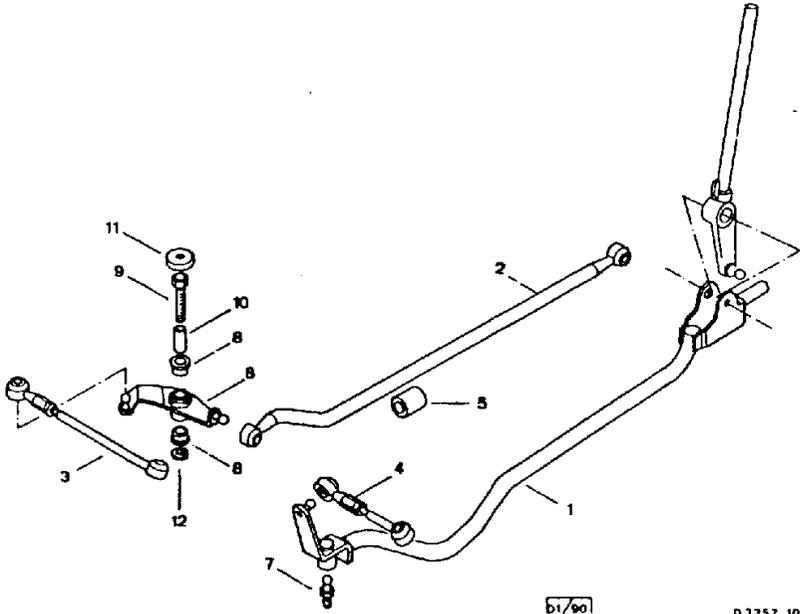
<p>30/01/98 GB D15 1235 01 3351 20 PAGE 1</p>	<p>30/06/98 SPINDLES AND FORKS</p>	<p>GTI 16V</p>	
		<p>1 95 653 036 2 94 02 519 450 RP 2519 56 3 96 003 302 RP 2546 34 4 94 02 558 110 RP 2558 11 5 96 030 532 RP 2553 45 96 117 376 RP 2553 45 6 96 030 535 RP 2554 52 7 96 030 539 RP 2552 08 8 96 003 339 RP 2528 16 9 96 012 834 RP 2552 06 10 97 517 580 RP 2540 33 11 96 039 985 RP 2539 34 12 96 058 053 RP 2539 35 13 97 532 122 RP 2527 34 14 97 500 328 RP 2549 14 15 79 03 090 022 RP 2538 07</p>	<p>01 SELECTION LEVER 01 SPINDLE + FINGER 01 01 FORK SHAFT 1E-2E-3E-4E-LON256,5 01 01 PIN + FORK 5E 01 01 GR-BOX FORK 1 + 2 01 1E-2E 01 UP TO O 5501 01 SINCE O 5502 01 01 GR-BOX FORK 3 + 4 01 01 ROCKING MEMBER 01 01 SPRING BRACKET 01 01 SHAFT 01 01 LOCKING FINGER LON 21 01 01 LOCKING SPRING 01 01 SPRING 01 01 LEVER SPRING H 12.2 01 01 FORK STOP PLATE 01</p>
<p>E3351200</p>		<p>15</p>	<p>01 LOCKING BALL DIAM 8 01</p>

Gearbox *Spindles and forks*

30/01/98 GB D14 ↓ 1235 01 3351 20 PAGE 2	30/06/98 SPINDLES AND FORKS	GTI 16V	
<p style="text-align: right;">E3351200</p>		16 96 035 199 RP 2515 22 17 79 03 066 095 18 96 035 244 RP 6979 86 19 79 03 065 008 RP 2541 20 20 79 03 067 063 RP 6968 23 21 97 520 820 RP 6968 71 22 97 599 251 RP 6969 05 23 79 03 067 074 RP 6969 45 24 79 03 067 037 RP 6968 45 25 79 03 067 038 RP 6968 44 26 97 599 241 RP 6913 98 27 00 80 624 600 28 79 03 053 425 RP 6947 55 29 97 532 121 RP 6947 84 30 79 03 062 014 31 96 020 369 RP 6934 28	01 SHAFT SEAL DIAM 16X30X7X11 01 01 STOP-RING 01 19,8X22-1 01 01 02 RING-SEAL DIAM INT 15 X 20X2,5 01 PIN 03 DIAM 3-15 ELAST 01 01 DIAM 4,5-22 01 01 DIAM 4,5 LON 30 01 01 DIAM 7X30 01 01 DIAM 4,5-LON 25 01 01 DIAM 7-25 01 01 SCREW CHC 7X1,00-22 01 01 CAPSCREW DIAM 7X1,00-22 PLAIN WASHER 02 DIAM 7,1X22X3 01 01 DIAM 28X16,5X1 01 01 GRBX SWITC SEAL DIAM 15,2X21X1 01 NUT WITH BASE DIAM 12X1,50 01
E3351200			

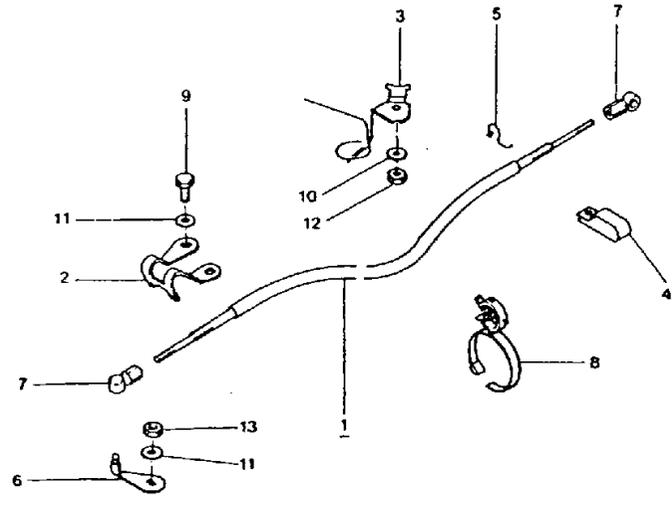


Gearbox Kickdown cable

30/01/98 GB D13 1235 01 3357 10 PAGE 1	30/06/98 KICK DOWN CABLE	GTI 16V	
 <p style="text-align: center;">D1/901 D3357 10A</p>		1 2 3 4 5 6 7 8 9 10 11 12	96 037 671 01 SELECTION BAR 96 071 597 01 GEARSHIFT BAR DIAM 13 LON 680,3 96 049 753 01 GEARSHIFT LINK L 241 DIAM 13 96 012 463 01 SELECTION LINK L 131 DIAM 10 96 995 075 01 CONTROL SHEATH C/C DIAM 17X27-30 96 012 462 01 LEVER 91 512 751 01 LEVER BALL DIAM 13 DIAM RP 2436 38 01 95 567 239 02 BEARING BUSH RP 2430 20 01 79 03 201 052 01 CAPSCREW 10X1,50-55 RP 6921 91 01 96 017 206 01 SPACER DIAM 14X10,2-30,7 RP 2419 23 01 95 609 905 01 CUP RP 2447 06 01 79 03 053 394 01 PLAIN WASHER DIAM 10X20 EP 2 RP 6946 77 01
E3357100			



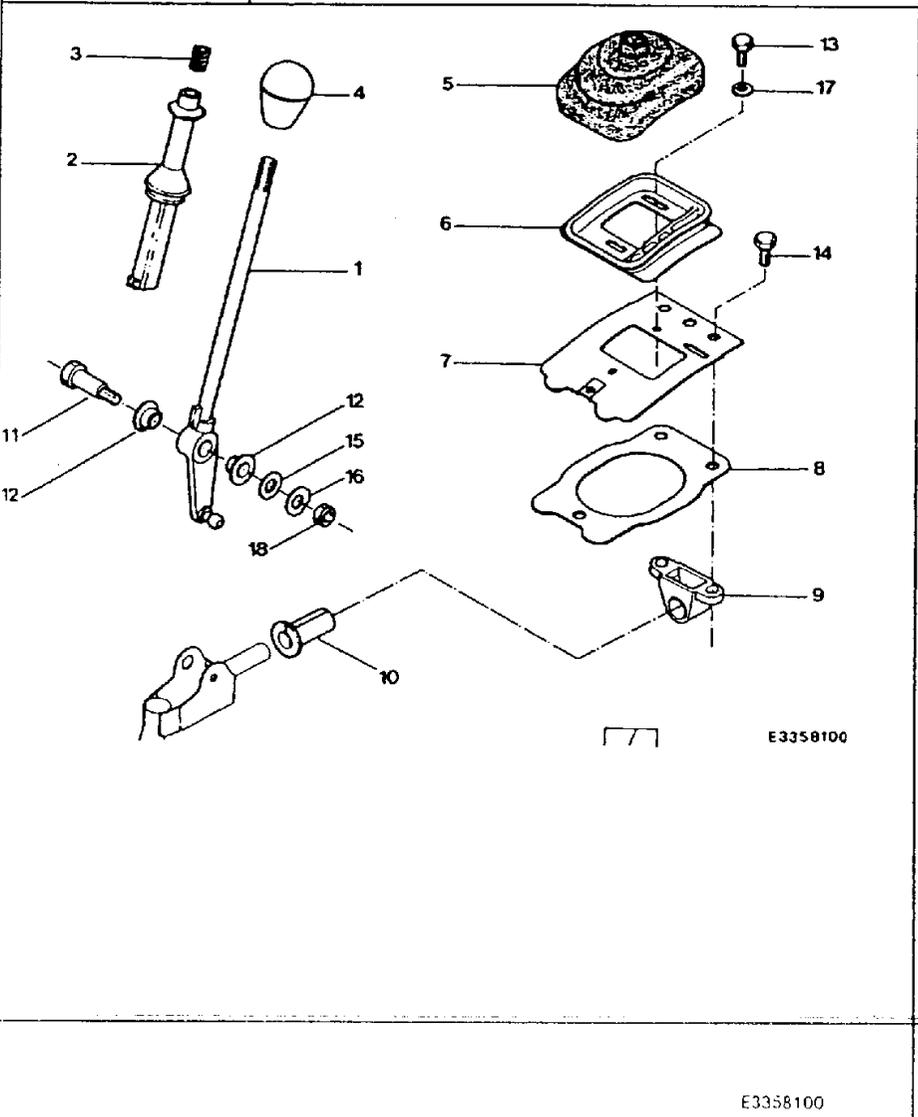
Gearbox Kickdown cable

30/01/98 GB D12 1235 01 3357 20 PAGE 1	30/06/98 KICK DOWN CABLE	BVA	
 <p style="text-align: center;">02/88 03357200</p> <p style="text-align: right;">E3357200</p>		1 95 639 045 RP 2444 E1 2 95 597 355 RP 2437 15 3 95 599 645 NFP 4 75 527 220 5 95 609 755 RP 1654 58 6 95 601 166 RP 2435 67 7 96 059 996 RP 2454 A4 8 95 611 526 9 79 03 201 150 RP 6917 03 10 79 03 058 028 RP 6962 99 11 79 03 053 043 RP 6947 78 12 25 260 019 RP 79 03 232 016 13 79 03 034 004 RP 6939 45	01 CONTROL CABLE 01 STOP LUG 01 CONTROL BRACKET LEFT 01 STOP LUG 01 RETAINING CLIP 01 CONTROL LEVER 02 CONTRL BALL END DIAM 5X0,80-39 01 CLIP 02 CAPSCREW DIAM 8X1,25 - 20 01 SPRING WASHER DIAM 6X14X1,4 03 PLAIN WASHER 8X16-1,5 01 HEXAGONAL NUT DIAM 6X1,00 01 SELF LOCKG NUT HE 8X1,00



Gearbox

Gearchange control

30/01/98 GB D11 1235 01 3358 10 PAGE 1	30/06/98 GEAR-CHANGE CONTROL-BINACLE SIDE	GTI 16V	
 <p style="text-align: right;">E3358100</p>		1 95 567 217 2 95 609 907 FXX RP 95 609 907 XX 3 95 567 221 RP 2400 74 4 95 631 202 5 95 609 906 6 95 609 910 7 95 592 505 8 95 609 908 9 95 610 799 10 95 579 254 11 79 10 023 759 RP 2455 20 12 79 10 005 487 RP 2450 27 13 79 03 101 393 NFP 14 79 03 101 403 NFP 15 79 03 053 508 RP 6946 28 16 79 03 057 019 RP 6962 45 17 79 03 053 028 RP 6947 77 18 79 03 034 004 RP 6939 45	01 CONTROL LEVER 01 REVERSE CONTROL 01 LEVER SPRING DIAM 13 01 LEVER HANDLE JONC NOIR 01 LEVER GAITER 01 REVERSE STOP MAR 01 LEVER BRACKET 01 LEVER GASKET 01 BAR BEARING 01 SHAFT SOCKET 01 LEVER SPINDLE DIAM 12 DIAM 8X1,00 02 SHAFT SOCKET DIAM 12X15 01 CAPSCREW THRI 6X1,00-16 03 WASHER-SCREW THRI 8X1,25-16 01 PLAIN WASHER 12,5X24-1,5 01 FLEXIBLE WASHER DIAM 12 03 PLAIN WASHER 6X12-1.2 01 SELF LOCKG NUT HE 8X1,00
E3358100			

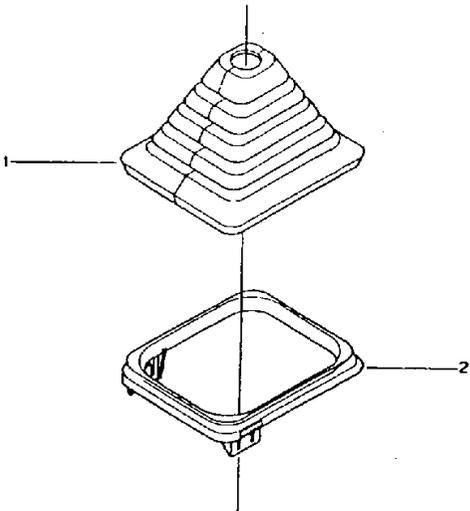
Gearbox *Gearchange control*

30/01/98 GB D10 1235 01 3358 20 PAGE 1	30/06/98 GEAR-CHANGE CONTROL-BINACLE SIDE	BVA	
<p style="text-align: center;">02/881 03358200</p> <p style="text-align: right;">E3358200</p>		1 95 604 595 RP 2403 57 2 95 601 148 RP 2400 09 3 95 601 160 4 79 03 067 107 5 95 601 159 RP 2455 30 6 95 562 332 RP 2403 58 7 95 544 138 RP 2409 08 8 95 601 164 9 95 630 788 10 95 610 656 96 124 795 11 95 601 151 RP 2450 40 12 95 606 688 RP 2450 41 13 95 609 084 RP 2445 16 14 95 610 657 15 79 03 017 014 16 79 03 201 010 RP 6921 77 17 79 03 016 076 NFP	01 LEVER HANDLE 01 CONTROL LEVER 01 LEVER LINK LON 178,5 02 CONTROL LVR PIN 4X24 01 LEVER SPINDLE 01 UNLOCKING HANDL 01 HANDLE SHAFT 01 LEVER PROTECTOR 01 CONTROL BRACKET RUBBER GAITER 01 -LEFT HAND DRIVE 01 -RIGHT HAND DRIVE 01 BEARING BUSH 02 PUSH PLUG 01 BALL-JOINT 01 COVERIN.BRACKET 04 MATERIAL SCREW 3,5-25 02 CAPSCREW 5X80-10 02 TAPPING SCREW DIAM: 3,5 - 25

Gearbox *Gearchange control*

<p>30/01/98 GB D09 1235 01 3358 20 PAGE 2</p>	<p>30/06/98 GEAR-CHANGE CONTROL-BINACLE SIDE</p>	<p>BVA</p>	
		<p>18 79 03 053 515 RP 6946 67</p> <p>19 79 03 046 009</p> <p>20 79 03 034 070 RP 6939 04</p> <p>21 79 03 033 009 RP 6934 27</p>	<p>02 PLAIN WASHER 10,4X19,8E1 01</p> <p>02 SPEED NUT 3,5X11,8-9</p> <p>01 SELF LOCKG NUT 6X100-7,6 01</p> <p>03 WASHER-NUT 6X1,00 01</p>
<p>E3358200</p>			

Gearbox *Gearchange lever bellow*

30/01/98 GB D08 1235 01 3360 10 PAGE 1	30/06/98 SEALING BELLOW F.GEAR-CHANGE LEVER	GTI 16V	
 <p data-bbox="824 976 1102 995">(02/86) 03300100</p> <p data-bbox="1075 1481 1160 1500">E3360100</p>		1 96 017 606 2 95 562 698	01 LEVER GAITER 01 COVERIN.BRACKET

Gearbox Differential

30/01/98 GB D07 1235 01 3430 40 PAGE 1	30/06/98 DIFFERENTIAL	<p style="text-align: center;">E: 8.65</p> <p style="text-align: center;">[05/93] D3430010</p>	1 97 500 648 RP 3103 44 97 500 651 RP 3101 81 97 500 652 RP 3101 80 2 96 024 241 RP 3106 07 3 96 019 896 RP 3108 28 4 97 533 997 RP 3110 22 5 97 518 121 RP 3111 13 6 3115 A8 7 96 024 627 RP 3118 53 8 97 511 920 RP 3125 18 9 96 017 828 RP 3119 40 10 96 080 793 RP 3121 27 11 96 080 792 RP 3121 26 12 79 03 053 430 LISTE 9604	RING GEAR 01 62 DENTS 01 -GTI 16V 01 65 DTS(C16X65) 01 -16 TZI -GTI -ESTATE 01 63DENT 01 -SALOON 19 TRI -SALOON 19 TZI 01 GEAR SET 16/10 DTS-DIAM 77(A) 01 -BVA 01 GEARS SPINDLE DIAM 15,9 - LON 93,5 01 02 PLANET CUP 16X36-0,45 01 02 CENTRING BUSH DIAM 32X6-0,7 01 02 FRICTION CUP 31X57-0,45 01 01 DIFF HOUSING DIAM 77 01 02 DIFFER BEARING DIAM 38X63-17 01 08 RING GEAR SCREW 01 SEAL 01 DIAM 40X58X10 01 GAUCHE 01 RIGHT DIAM 29,9X47-11,3 01 WASHER 01 DIAM 55X62,8-1,4
E3430400		左 右	.../...	

Engine Equipment *Air intake, throttle valve housing*

30/01/98 GB C02 ↑ 1235 02 1410 10 PAGE 1	30/06/98 AIR INTAKE THROTTLE VALV HOUSG	16 TZI UP TO O 5284	
		1 96 049 353 NFP 2 96 092 693 RP 1920 J7 3 96 080 658 4 96 007 707 RP 1957 39 5 96 035 354 RP 0348 91 6 79 10 011 595 RP 0369 37 7 91 514 613 RP 0369 36 8 96 003 907 RP 0369 29 9 79 03 075 018 RP 0232 15 10 78 10 177 000 RP 0311 12 11 91 595 090 RP 0355 32 12 96 005 700 13 79 03 201 149 RP 6922 C8 14 79 03 201 140 RP 6917 92 15 79 03 057 005 RP 6962 13 16 79 03 058 030 RP 6962 66	01 INTAKE MANIFOLD 01 PRESSURE SENSOR 01 01 SENSOR BRACKET 01 UNION 01 01 MANIFOL GASKET 01 CURTY 01 SOCKET TOOL DIAM INT 5 01 MANIFD FITTING 01 01 01 01 02 EXPANDING PLUG DIAM 20X4 01 01 PLUG 01 06 STUD DIAM 8X1,25-48 01 02 SCREW COLUMN LON 155 CAPSCREW 01 DIAM 8X125 LON 16 01 03 6X100-20 01 06 FLEXIBLE WASHER DIAM 8X14 01 01 SPRING WASHER 8X18-1,4 01
E1410100		.../...	

Engine Equipment *Air intake, throttle valve housing*

<p>30/01/98 GB C03 ↑ 1235 02 1410 10 PAGE 2</p>	<p>30/08/98 AIR INTAKE THROTTLE VALV HOUSG</p>	<p>16 TZI UP TO O 5284</p>	
		<p>17 79 03 232 017 RP 6932 38</p> <p>18 79 03 233 014 RP 6934 27</p> <p>19 79 03 044 050</p>	<p>06 HEXAGONAL NUT 8X1,25-6,5 01</p> <p>03 WASHER-NUT DIAM 6X100 01</p> <p>01 CAGED NUT 8X125</p>
<p>E1410100</p>			

Engine Equipment *Air intake, throttle valve housing*

30/01/98 GB C04 ↑ 1235 02 1410 11 PAGE 1	30/06/98 AIR INTAKE THROTTLE VALV HOUSG	16 TZI SINCE O 5285	
		1 96 099 833 RP 0342 93 2 96 099 923 RP 1920 J7 3 95 640 497 RP 1920 C5 4 96 080 658 5 96 007 707 RP 1957 39 6 96 035 354 RP 0348 91 7 79 10 011 595 RP 0369 37 8 91 514 613 RP 0369 36 9 96 003 907 RP 0369 29 10 79 03 075 018 RP 0232 15 11 79 03 079 004 RP 6995 45 12 96 054 867 RP 0355 37 13 96 088 268 RP 1920 J1 14 79 03 201 757 RP 6922 C8 RP 6922 C8 15 79 03 201 140 RP 6917 92 16 79 03 057 005 RP 6962 13	01 INTAKE MANIFOLD 01 PRESSURE SENSOR 01 TEMPERAT PROBE 01 SENSOR BRACKET 01 UNION 01 MANIFOL GASKET 01 CURTY 01 SOCKET TOOL DIAM INT 5 01 MANIFD FITTING 01 01 01 01 EXPANDING PLUG DIAM 20X4 01 CLIP 1T 9 06 STUD 8X125-36 01 SCREW COLUMN 01 SELF-TAP SCREWS TH 8 X 1,25 01 03 CAPSCREW 6X100-20 01 06 FLEXIBLE WASHER DIAM 8X14 01
E1410110		.../...	

Engine Equipment *Distribution pipe, throttle casing*

30/01/98 GB C06 ↑ 1235 02 1416 20 PAGE 1	30/08/98 DISTRIBUTION PIPE-THROTTLE CASING	19 TRI 19 TZI GTI	
<p style="text-align: right;">E1416200</p>		1 91 539 847 RP 96 061 366 96 061 366 0361 79 2 79 03 075 007 RP 0153 05 3 79 10 011 595 RP 0369 37 4 96 035 354 RP 0348 91 5 79 03 065 122 RP 0365 08 6 91 516 814 RP 0363 08 7 96 043 570 RP 1635 87 96 018 889 RP 1635 87 96 146 090 RP 1635 87 1635 77 RP 1635 86 8 96 015 940 RP 1628 G4 9 96 995 449 RP 95 655 310	AIR DISTRIBUTOR UP TO O 4740 SINCE O 4741 UP TO O 5987 SINCE O 5988 MANIFOLD PLUG DIAM 42X15 SOCKET TOOL DIAM INT 5 MANIFOLD GASKET CURTY O-RING SEAL DIAM 72 REINFORCEMENT AIR INTAKE CASE -SALOON 19 TRI -SALOON 19 TZI VALVE HOUSING SOLEX -ESTATE 19 TRI -ESTATE 19 TZI UP TO O 5425 -GTI UP TO O 5428 AIR INTAKE CASE SOLEX -ESTATE 19 TZI SINCE O 5426 -GTI SINCE O 5426 SOLEX - -BVA CONTACT SWITCH RUBBER HOSE DIAM INT 7-1150

Engine Equipment *Distribution pipe, throttle casing*

30/01/98 GB C07 ↑ 1235 02 1416 20 PAGE 2	30/06/98 DISTRIBUTION PIPE-THROTTLE CASING	19 TRI 19 TZI GTI	
		10 96 003 087 RP 1628 F0 11 74 01 266 026 RP 1665 15 95 661 856 RP 1665 33 12 91 516 981 13 91 516 978 RP 1667 13 14 91 516 979 15 91 595 090 RP 0355 32 16 79 03 053 039 RP 95 624 273 17 79 10 027 593 RP 1624 60 18 78 10 177 000 RP 0311 12 70 26 162 899 RP 6930 22 71 79 03 101 756 RP 6921 72 72 79 03 201 002 RP 6922 07 73 79 03 057 005 RP 6962 13 74 79 03 057 003 RP 6962 12	01 ELECTRO VALVE 01 ELECTRO-VALVE 01 DIAM 10 01 UP TO O 5425 01 DIAM 12 01 SINCE O 5426 01 IDLE SCREW 01 SCREW TAB-LOCK 01 01 STOP SCREW CAP 05 STUD DIAM 8X1,25-48 01 01 PLAIN WASHER 01 PLUG 01 01 01 01 03 STUD DIAM 7X1,00-23 01 CAPSCREW 01 7X100-25 01 02 4X70-10 01 FLEXIBLE WASHER 05 DIAM 8X14 01 04 7,4X14,2X0,8 01
E1416200		.../...	



Engine Equipment *Distribution pipe, throttle casing*

30/01/98 GB C08 ↑ 1235 02 1416 20 PAGE 3	30/06/98 DISTRIBUTION PIPE-THROTTLE CASING	19 TRI 19 TZI GTI	
		75 79 03 232 017 05 RP 6932 38 01	HEXAGONAL NUT 8X1,25-6,5
		76 79 03 032 036 03 RP 6932 05 01	DIAM 7X100
E1416200			

Engine Equipment *Distribution pipe, throttle casing*

30/01/98 GB C09 ↑ 1235 02 1416 40 PAGE 1	30/06/98 DISTRIBUTION PIPE-THROTTLE CASING	GTI 16V	
		1 96 002 712 RP 0342 67	01 AIR DISTRIBUTOR 01
		2 91 541 600	01 REINFORCEMENT 01
		3 96 035 470 RP 1635 41	01 AIR INTAKE CASE 01 WEBER-
		4 96 015 940 RP 1628 G4	01 CONTACT SWITCH 01 <i>BOSCH c280 120 327.</i>
		5 91 539 050 RP 0348 G4	01 MANIFOL GASKET 02 A003 WITH ASBESTOS 01
		0348 G4	02 A005 WITHOUT ASBESTOS
		6 96 028 466 RP 1635 65	01 SEAL PIECE 01
		7 95 640 976 RP 1621 68	01 ELECTRO-VALVE DIAM 8 01
		8 96 003 087 RP 1628 F0	01 ELECTRO VALVE 01
		9 96 995 727 RP 1505 F3	01 DEPRESSION HOSE DIAM INT 7 01
		10 79 03 067 051 RP 6965 20	02 PIN 7X14 01
		11 79 03 027 028 RP 6929 52	02 STUD 8X125-58 01
		12 95 650 879 RP 1412 A1	01 PROTECTOR PLUG 01
		13 79 03 085 043 RP 6980 30	01 STRAP DIAM 100 01
		14 79 03 009 081 RP 6913 H6	SOCKET SCREW 06 8X125-30 01
15 79 03 009 014 RP 6913 44	04 DIAM 8 X 1,25-35 01		
E1416400	.../...		

Engine Equipment *Distribution pipe, throttle casing*

<p>30/01/98 GB C10 ↑ 1235 02 1416 40 PAGE 2</p>	<p>30/06/98 DISTRIBUTION PIPE-THROTTLE CASING</p>	<p>GTI 16V</p>																								
	<table border="1"> <tr> <td>16</td> <td>79 03 201 002 RP 6922 07</td> <td>02 01</td> <td>CAPSCREW 4X70-10</td> </tr> <tr> <td>17</td> <td>79 03 009 001 RP 4228 22</td> <td>02 01</td> <td>SOCKET SCREW TH 8X1,25-20</td> </tr> <tr> <td>18</td> <td>79 03 058 030 RP 6962 66</td> <td>08 01</td> <td>SPRING WASHER 8X18-1,4</td> </tr> <tr> <td>19</td> <td>79 03 053 087 RP 6947 22</td> <td>06 01</td> <td>PLAIN WASHER DIAM 8X16X2</td> </tr> <tr> <td>20</td> <td>79 03 056 003 RP 6958 54</td> <td>02 01</td> <td>SPRING WASHER 4,2X8-0,5</td> </tr> <tr> <td>21</td> <td>79 03 232 017 RP 6932 38</td> <td>02 01</td> <td>HEXAGONAL NUT 8X1,25-6,5</td> </tr> </table>	16	79 03 201 002 RP 6922 07	02 01	CAPSCREW 4X70-10	17	79 03 009 001 RP 4228 22	02 01	SOCKET SCREW TH 8X1,25-20	18	79 03 058 030 RP 6962 66	08 01	SPRING WASHER 8X18-1,4	19	79 03 053 087 RP 6947 22	06 01	PLAIN WASHER DIAM 8X16X2	20	79 03 056 003 RP 6958 54	02 01	SPRING WASHER 4,2X8-0,5	21	79 03 232 017 RP 6932 38	02 01	HEXAGONAL NUT 8X1,25-6,5	
16	79 03 201 002 RP 6922 07	02 01	CAPSCREW 4X70-10																							
17	79 03 009 001 RP 4228 22	02 01	SOCKET SCREW TH 8X1,25-20																							
18	79 03 058 030 RP 6962 66	08 01	SPRING WASHER 8X18-1,4																							
19	79 03 053 087 RP 6947 22	06 01	PLAIN WASHER DIAM 8X16X2																							
20	79 03 056 003 RP 6958 54	02 01	SPRING WASHER 4,2X8-0,5																							
21	79 03 232 017 RP 6932 38	02 01	HEXAGONAL NUT 8X1,25-6,5																							
<p>E1416400</p>																										

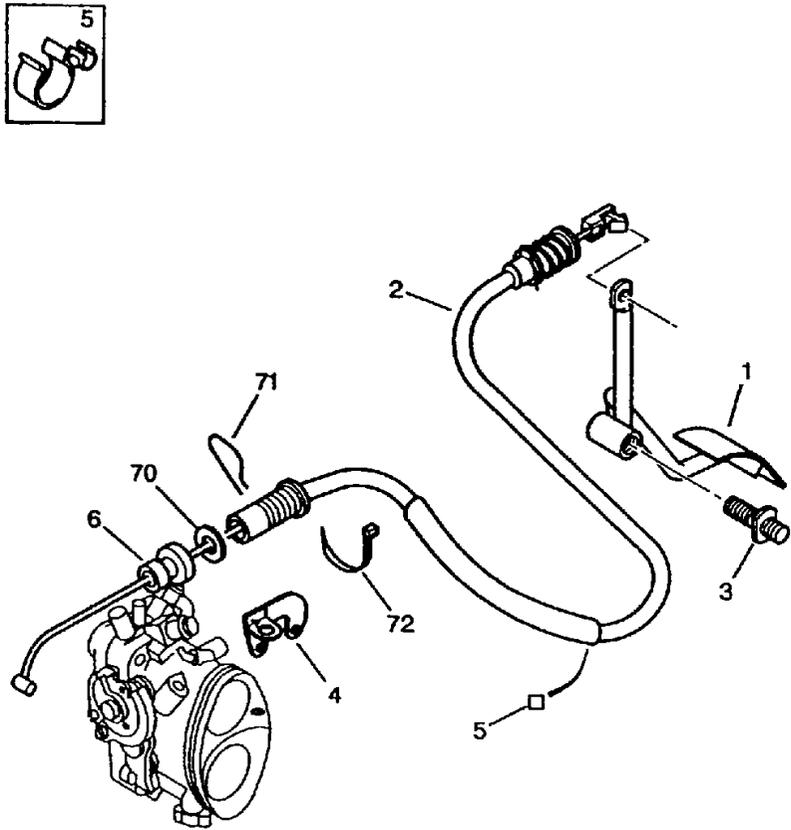
Engine Equipment Accelerator control

30/01/98 GB C11 ↑ 1235 02 1419 20 PAGE 1	30/06/98 ACCELERATOR CONTROL	16 TZI																																																																																		
		1 2 3 4 5 6 70 71 72 73 74 75	<table border="1"> <tr> <td>95 596 207</td> <td>01</td> <td>ACCELERAT PEDAL</td> </tr> <tr> <td></td> <td></td> <td>-LEFT HAND DRIVE</td> </tr> <tr> <td>95 593 854</td> <td>01</td> <td>-RIGHT HAND DRIVE</td> </tr> <tr> <td>5 472 019</td> <td>01</td> <td>PEDAL SPINDLE DIAM-9X1,25 LON 9,32</td> </tr> <tr> <td></td> <td></td> <td>CONTROL CABLE</td> </tr> <tr> <td>96 082 150</td> <td>01</td> <td>LON 865</td> </tr> <tr> <td>RP 95 656 496</td> <td>01</td> <td>-LEFT HAND DRIVE</td> </tr> <tr> <td>96 081 767</td> <td>01</td> <td>LON 920</td> </tr> <tr> <td>RP 1629 E9</td> <td>01</td> <td>-RIGHT HAND DRIVE</td> </tr> <tr> <td></td> <td></td> <td>GROMMET</td> </tr> <tr> <td>79 03 073 103</td> <td>01</td> <td></td> </tr> <tr> <td>RP 1639 21</td> <td>01</td> <td></td> </tr> <tr> <td>91 512 913</td> <td>01</td> <td>-LEFT HAND DRIVE</td> </tr> <tr> <td>RP 1639 24</td> <td>01</td> <td></td> </tr> <tr> <td>96 084 912</td> <td>01</td> <td>RETAINR BRACKET</td> </tr> <tr> <td></td> <td></td> <td>UP TO O 5284</td> </tr> <tr> <td>79 03 066 995</td> <td>01</td> <td>ACLTR CABLE PIN</td> </tr> <tr> <td>79 03 201 271</td> <td>01</td> <td>CAPSCREW 8X1,25-16</td> </tr> <tr> <td>RP 6922 C8</td> <td>01</td> <td>UP TO O 5284</td> </tr> <tr> <td>79 03 053 510</td> <td>01</td> <td>PLAIN WASHER 14,5X27,5-1,5</td> </tr> <tr> <td>RP 6947 27</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 058 087</td> <td>01</td> <td>WASHER DIAM 9X20</td> </tr> <tr> <td>RP 96 108 079</td> <td>01</td> <td></td> </tr> <tr> <td>25 223 019</td> <td>01</td> <td>NUT HE9X1,25</td> </tr> <tr> <td></td> <td></td> <td>NFP</td> </tr> <tr> <td>96 068 986</td> <td>01</td> <td>SWIVEL CLIP 2 DIAM</td> </tr> <tr> <td>RP 1568 66</td> <td>01</td> <td>SINCE O 5285</td> </tr> </table>	95 596 207	01	ACCELERAT PEDAL			-LEFT HAND DRIVE	95 593 854	01	-RIGHT HAND DRIVE	5 472 019	01	PEDAL SPINDLE DIAM-9X1,25 LON 9,32			CONTROL CABLE	96 082 150	01	LON 865	RP 95 656 496	01	-LEFT HAND DRIVE	96 081 767	01	LON 920	RP 1629 E9	01	-RIGHT HAND DRIVE			GROMMET	79 03 073 103	01		RP 1639 21	01		91 512 913	01	-LEFT HAND DRIVE	RP 1639 24	01		96 084 912	01	RETAINR BRACKET			UP TO O 5284	79 03 066 995	01	ACLTR CABLE PIN	79 03 201 271	01	CAPSCREW 8X1,25-16	RP 6922 C8	01	UP TO O 5284	79 03 053 510	01	PLAIN WASHER 14,5X27,5-1,5	RP 6947 27	01		79 03 058 087	01	WASHER DIAM 9X20	RP 96 108 079	01		25 223 019	01	NUT HE9X1,25			NFP	96 068 986	01	SWIVEL CLIP 2 DIAM	RP 1568 66	01	SINCE O 5285
95 596 207	01	ACCELERAT PEDAL																																																																																		
		-LEFT HAND DRIVE																																																																																		
95 593 854	01	-RIGHT HAND DRIVE																																																																																		
5 472 019	01	PEDAL SPINDLE DIAM-9X1,25 LON 9,32																																																																																		
		CONTROL CABLE																																																																																		
96 082 150	01	LON 865																																																																																		
RP 95 656 496	01	-LEFT HAND DRIVE																																																																																		
96 081 767	01	LON 920																																																																																		
RP 1629 E9	01	-RIGHT HAND DRIVE																																																																																		
		GROMMET																																																																																		
79 03 073 103	01																																																																																			
RP 1639 21	01																																																																																			
91 512 913	01	-LEFT HAND DRIVE																																																																																		
RP 1639 24	01																																																																																			
96 084 912	01	RETAINR BRACKET																																																																																		
		UP TO O 5284																																																																																		
79 03 066 995	01	ACLTR CABLE PIN																																																																																		
79 03 201 271	01	CAPSCREW 8X1,25-16																																																																																		
RP 6922 C8	01	UP TO O 5284																																																																																		
79 03 053 510	01	PLAIN WASHER 14,5X27,5-1,5																																																																																		
RP 6947 27	01																																																																																			
79 03 058 087	01	WASHER DIAM 9X20																																																																																		
RP 96 108 079	01																																																																																			
25 223 019	01	NUT HE9X1,25																																																																																		
		NFP																																																																																		
96 068 986	01	SWIVEL CLIP 2 DIAM																																																																																		
RP 1568 66	01	SINCE O 5285																																																																																		
D141918P																																																																																				

Engine Equipment Accelerator control

30/01/98 GB C12 1235 02 1419 30 PAGE 1	30/06/98 ACCELERATOR CONTROL	19 TRI 19 TZI GTI	
<p style="text-align: center;">[11/98] D1419190</p> <p style="text-align: right;">D:419190</p>		1 95 596 207 95 593 854 2 96 076 852 RP 95 656 496 95 638 876 RP 1629 E8 3 5 472 019 4 96 008 837 RP 1664 A8 5 91 540 972 RP 1650 40 6 91 518 351 RP 1654 57 7 79 03 073 103 RP 1639 21 8 91 512 913 RP 1639 24 70 79 03 079 007 71 79 03 066 234 RP 6967 58 72 79 03 057 005 RP 6962 13 73 79 03 053 510 RP 6947 27 74 77 03 032 095 NFP	01 ACCELERAT PEDAL -LEFT HAND DRIVE 01 -RIGHT HAND DRIVE CONTROL CABLE 01 LON 1483 01 -LEFT HAND DRIVE 01 LON 1060 01 -RIGHT HAND DRIVE 01 PEDAL SPINDLE DIAM-9X1,25 LON 9,32 01 STOP LUG 01 ACCEL CTRL DRUM 01 ACCELERT SPRING 01 GROMMET 01 01 SINCE O 4677 01 02 CLIP 1T 14 01 ACLTR CABLE PIN 01 01 FLEXIBLE WASHER DIAM 8X14 01 01 PLAIN WASHER 14,5X27,5-1,5 01 01 NUT

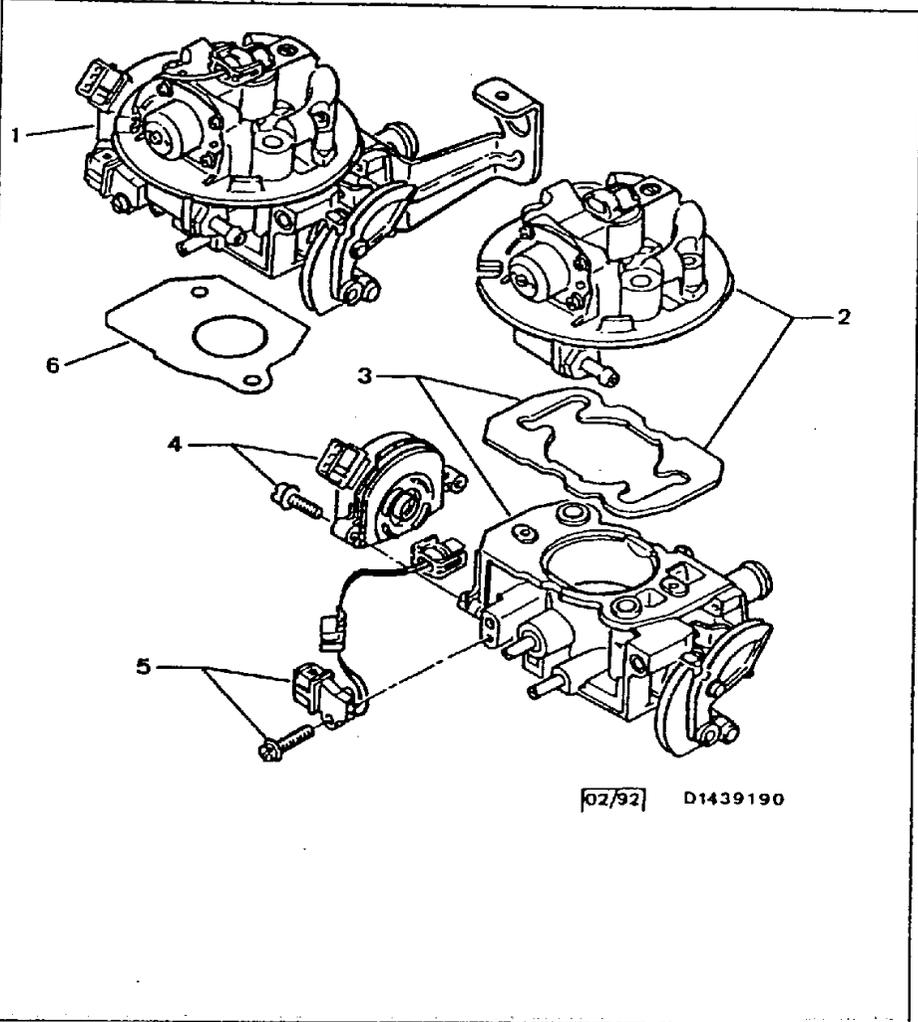
Engine Equipment Accelerator control

30/01/98 GB C13 ↑ 1235 02 1419 40 PAGE 1	30/06/98 ACCELERATOR CONTROL	GTI 16V	
 <p style="text-align: center;">[1/96] D1419170</p>	1 95 596 207 01 95 593 854 01 2 96 004 440 01 RP 1629 E8 01 96 076 821 01 RP 95 656 496 01 96 010 113 01 RP 95 656 496 01 3 5 472 019 01 4 96 032 945 01 RP 1664 A4 01 5 79 03 079 097 01 RP 4814 48 01 6 79 03 073 103 01 RP 1639 21 01 70 79 03 053 510 01 RP 6947 27 01 71 79 03 066 995 01 72 79 03 085 045 01 RP 6980 28 01	ACCELERAT PEDAL -LEFT HAND DRIVE -RIGHT HAND DRIVE CONTROL CABLE LON 965 -LEFT HAND DRIVE UP TO O 4676 LON 1025 -LEFT HAND DRIVE SINCE O 4677 LON 1180 -RIGHT HAND DRIVE PEDAL SPINDLE DIAM-9X1,25 LON 9,32 RETAINR BRACKET LINE BRACKET GROMMET PLAIN WASHER 14,5X27,5-1,5 ACLTR CABLE PIN STRAP LON 245	
D1419170			

Engine Equipment *Monopoint injection body*

<p>30/01/98 GB C14 ↑ 1235 02 1439 20 PAGE 1</p>	<p>30/08/98 SINGLE POINT INJECTION BODY</p>	<p>SOLEX 16001 PSA 487 16 TZI UP TO O 5225</p>																									
<p style="text-align: right;">07/90 01429 100</p>		<table border="1"> <tr> <td>1</td> <td>96 026 983</td> <td>01</td> <td>SOLEX</td> </tr> <tr> <td>2</td> <td>95 643 991 RP 1920 A5</td> <td>01 01</td> <td>ENS SUP SOLEX</td> </tr> <tr> <td>3</td> <td>95 644 026 RP 1920 E5</td> <td>01 01</td> <td>ENS INF</td> </tr> <tr> <td>4</td> <td>96 053 199 RP 1920 E7</td> <td>01 01</td> <td>POTENTIOMETER</td> </tr> <tr> <td>5</td> <td>95 644 027 RP 1920 E6</td> <td>01 01</td> <td>HARNESS</td> </tr> <tr> <td>6</td> <td>96 064 614 RP 1920 E8</td> <td>01 01</td> <td>SPACER DIAM 42,6</td> </tr> </table>	1	96 026 983	01	SOLEX	2	95 643 991 RP 1920 A5	01 01	ENS SUP SOLEX	3	95 644 026 RP 1920 E5	01 01	ENS INF	4	96 053 199 RP 1920 E7	01 01	POTENTIOMETER	5	95 644 027 RP 1920 E6	01 01	HARNESS	6	96 064 614 RP 1920 E8	01 01	SPACER DIAM 42,6	<p>INJECTION BODY</p>
1	96 026 983	01	SOLEX																								
2	95 643 991 RP 1920 A5	01 01	ENS SUP SOLEX																								
3	95 644 026 RP 1920 E5	01 01	ENS INF																								
4	96 053 199 RP 1920 E7	01 01	POTENTIOMETER																								
5	95 644 027 RP 1920 E6	01 01	HARNESS																								
6	96 064 614 RP 1920 E8	01 01	SPACER DIAM 42,6																								
<p>E1439200</p>																											

Engine Equipment *Monopoint injection body*

30/01/98 GB C15 ↑ 1235 02 1439 25 PAGE 1	30/08/98 SINGLE POINT INJECTION BODY	SOLEX 16068 PSA 564 16 TZI SINCE O 5226 UP TO O 5306	
 <p style="text-align: center;">02/92 D1439190</p>		1 98 127 996 RP 1920 J0 2 95 643 991 RP 1920 A5 3 95 644 483 RP 1920 L9 4 95 658 554 RP 1920 OF 5 95 644 027 RP 1920 E6 6 96 062 192 RP 1920 J2	01 01 01 ENS SUP 01 01 ENS INF 01 01 POTENTIOMETER 01 01 HARNESS 01 01 MANIFOL GASKET 01
<p style="text-align: right;">E1439250</p>			

Engine Equipment *Monopoint injection body*

<p>30/01/88 GB D15 ↓ 1235 02 1439 30 PAGE 1</p>	<p>30/06/98 SINGLE POINT INJECTION BODY</p>	<p>SOLEX 16135001 PSA 579 16 TZI SINCE O 5307</p>																								
		<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="3" style="text-align: center;">INJECTION BODY</td> </tr> <tr> <td style="width: 5%;">1</td> <td style="width: 70%;">96 128 703 RP 1920 J9</td> <td style="width: 25%;">01 01</td> </tr> <tr> <td>2</td> <td>95 643 991 RP 1920 A5</td> <td>01 ENS SUP 01</td> </tr> <tr> <td>3</td> <td>95 644 481 RP 1920 L7</td> <td>01 ENS INF 01</td> </tr> <tr> <td>4</td> <td>95 658 554 RP 1920 0F</td> <td>01 POTENTIOMETER 01</td> </tr> <tr> <td>5</td> <td>95 644 027 RP 1920 E6</td> <td>01 HARNESS 01</td> </tr> <tr> <td>6</td> <td>95 644 484 RP 1920 N1</td> <td>01 REGULATOR MOT 01</td> </tr> <tr> <td>7</td> <td>96 062 192 RP 1920 J2</td> <td>01 MANIFOL GASKET 01</td> </tr> </table>	INJECTION BODY			1	96 128 703 RP 1920 J9	01 01	2	95 643 991 RP 1920 A5	01 ENS SUP 01	3	95 644 481 RP 1920 L7	01 ENS INF 01	4	95 658 554 RP 1920 0F	01 POTENTIOMETER 01	5	95 644 027 RP 1920 E6	01 HARNESS 01	6	95 644 484 RP 1920 N1	01 REGULATOR MOT 01	7	96 062 192 RP 1920 J2	01 MANIFOL GASKET 01
INJECTION BODY																										
1	96 128 703 RP 1920 J9	01 01																								
2	95 643 991 RP 1920 A5	01 ENS SUP 01																								
3	95 644 481 RP 1920 L7	01 ENS INF 01																								
4	95 658 554 RP 1920 0F	01 POTENTIOMETER 01																								
5	95 644 027 RP 1920 E6	01 HARNESS 01																								
6	95 644 484 RP 1920 N1	01 REGULATOR MOT 01																								
7	96 062 192 RP 1920 J2	01 MANIFOL GASKET 01																								
<p>02/92 D143919A</p>																										
<p>E1439300</p>																										

Engine Equipment *Air filter*

<p>30/01/98 GB D14 ↓ 1235 02 1710 10 PAGE 1</p>	<p>30/06/98 AIR FILTER</p>	<p>16 TZI</p>	
<p>1230 101/90 02 1710 110</p>		<p>1 96 011 847 RP 1427 98</p> <p>2 95 618 786 RP 1444 A4</p> <p>3 96 059 366</p> <p>4 96 041 737 RP 1210 04</p> <p>5 75 491 922</p> <p>6 79 03 073 147 RP 1327 05</p> <p>7 79 03 201 139 RP 6915 69</p> <p>8 79 03 044 020 RP 6941 93</p> <p>92 528 222 RP 6941 71</p>	<p>01 AIR FILTER 01</p> <p>01 FILTER ELEMENT 01</p> <p>01 FILTER BRACKET</p> <p>01 FUEL TANK PLUG 01</p> <p>02 CLIP H55</p> <p>03 RING 01</p> <p>03 CAPSCREW 6X100-16 01</p> <p>CAGED NUT 03 6X100-14-12,4-6 01 UP TO O 5284</p> <p>03 6X1,00 01 SINCE O 5285</p>
<p>E17:0100</p>			

Engine Equipment *Air filter and ducts*

30/01/98 GB D13 1235 02 1711 20 PAGE 1	30/06/98 AIR FILTER AND DUCTS	19 TRI 19 TZI GTI	
<p>1230</p> <p>log/mal</p> <p>02. 1711. 11E</p> <p>E1711200</p>		1 91 536 682 RP 1427 97 2 95 618 786 RP 1444 A4 3 96 059 366 4 91 538 877 RP 1920 70 91 541 738 RP 1920 93 5 96 015 959 6 95 638 397 7 91 538 083 RP 1925 31 1925 31 8 91 517 208 9 79 03 073 147 RP 1327 05 10 SRV 000 024 RP 6981 44 11 79 03 083 208 RP SRV 000 022 12 79 03 083 271 13 79 03 201 139 RP 6915 69 14 95 623 758 RP 79 03 058 063 15 79 03 044 020 RP 6941 93	01 AIR FILTER 01 01 FILTER ELEMENT 01 01 FILTER BRACKET AIR METRG DEVIC 01 -SALOON 19 TRI 01 -SALOON 19 TZI 01 -ESTATE 19 TRI 01 -ESTATE 19 TZI -GTI 01 AIR INTAKE PIPE 01 ADDIT AIR HOSE AVEC CANISTER AIR METRG GASKET 01 A003 WITH ASBESTOS 01 A005 WITHOUT ASBESTOS 01 METER PLUG DIAM EXT 12,7 H 5 03 RING 01 01 ADJUST COLLAR DIAM 70 A 90 LARG 9 01 01 ADJUST CLAMP DIAM 50-70 01 01 METALLIC CLAMP LON 690 LARG 8 03 CAPSCREW 6X100-16 01 03 WASHER DIAM 6X18 01 03 CAGED NUT 6X100-14-12,4-6 01

Engine Equipment *Air filter and ducts*

30/01/98 GB D12 1235 02 1711 40 PAGE 1	30/06/98 AIR FILTER AND DUCTS	GTI 16V	
		1 91 536 682 RP 1427 97 2 95 618 786 RP 1444 A4 3 96 059 366 4 91 541 738 RP 1920 93 5 95 636 700 96 065 088 6 95 636 923 7 91 538 083 RP 1925 31 1925 31 8 91 536 807 9 91 517 208 10 91 536 808 11 79 03 073 147 RP 1327 05 12 SRV 000 024 RP 6981 44 13 79 03 083 208 RP SRV 000 022 14 79 03 083 271 15 79 03 201 139 RP 6915 69 16 95 623 758 RP 79-03-058-063	01 AIR FILTER 01 01 FILTER ELEMENT 01 01 FILTER BRACKET 01 AIR METRG DEVIC 01 01 FILTER AIR HOSE UP TO O 4620 01 SINCE O 4621 01 01 01 AIR METR GASKET A003 WITH ASBESTOS 01 01 A005 WITHOUT ASBESTOS 01 01 SPACER 01 METER PLUG DIAM EXT 12,7 H 5 01 01 FIXING SPINDLE 03 RING 01 01 ADJUST COLLAR DIAM 70 A 90 LARG 9 01 01 ADJUST CLAMP DIAM 50-70 01 01 METALLIC CLAMP LON 690 LARG 8 03 CAPSCREW 6X100-16 01 03 WASHER DIAM 6X18 01
E17.1400		.../...	

Engine Equipment *Air filter and ducts*

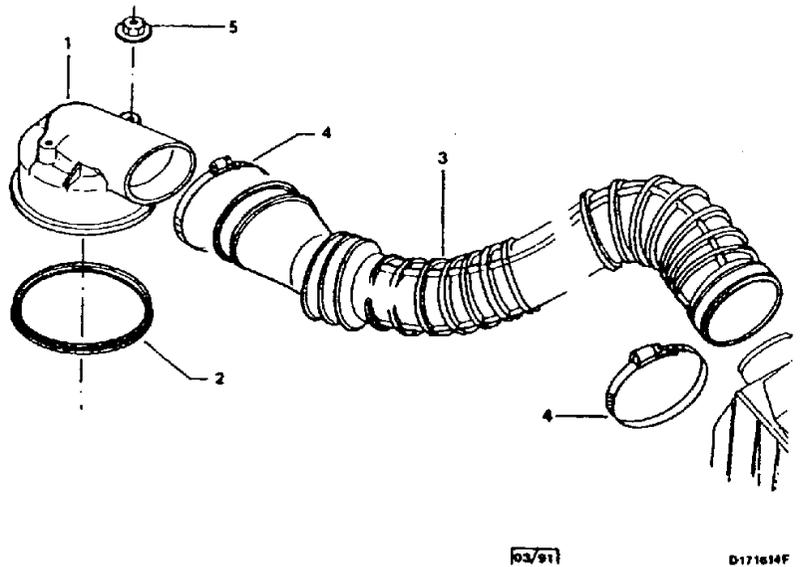
<p>30/01/98 GB D11 1235 02 1711 40 PAGE 2</p>	<p>30/06/98 AIR FILTER AND DUCTS</p>	<p>GTI 16V</p>	
		<p>17 79 03 044 020 RP 6941 93</p>	<p>03 CAGED NUT 6X100-14-12,4-6 01</p>
<p>E1711400</p>			



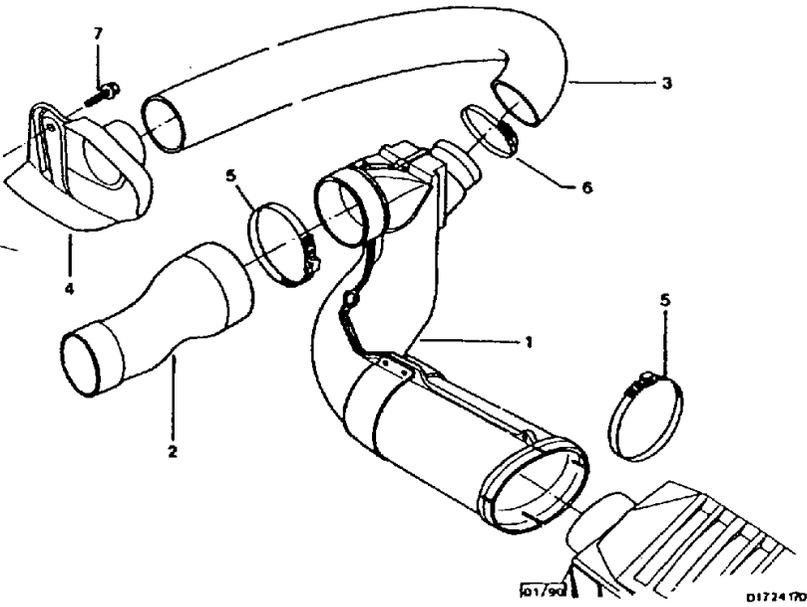
Engine Equipment *Air filter and injection body union*

30/01/98 GB D10 1235 02 1716 10 PAGE 1	30/06/98 AIR FILTER-INJECTION BODY UNION	16 TZI UP TO O 5284	
		1 91 005 031 RP 1424 N4 2 91 005 281 RP 1424 P4 3 96 006 110 4 SRV 000 023 RP 6981 43 5 SRV 000 027 RP 6981 46 6 25 260 019 RP 79 03 232 016 7 79 03 058 028 RP 6962 99	01 CARB AIR HOSE 01 01 HOSE SEAL DIAM 110,8 01 01 FILTER AIR HOSE 01 01 ADJUST CLAMP DIAM 60 A 80 LARG 9 01 01 ADJUST COLLAR DIAM 60 A 125 LARG 9 01 02 HEXAGONAL NUT DIAM 6X1,00 01 02 SPRING WASHER DIAM 6X14X1,4 01
E1716100			

Engine Equipment *Air filter and carburettor union*

<p>30/01/98 GB D09 ↓ 1235 02 1716 11 PAGE 1</p>	<p>30708798 AIR FILTER-CARBURATTOR UNION</p>	<p>16 TZI SINCE O 5285</p>	
 <p style="text-align: center;">03/91 D171614F</p>		<p>1 96 088 270 RP 1424 T5</p> <p>2 96 023 978 RP 1424 N5</p> <p>3 96 006 110</p> <p>4 96 085 941 RP 6980 32</p> <p>5 95 623 754 RP 79 03 037 001</p>	<p>01 CARB AIR HOSE 01</p> <p>01 HOSE SEAL 01</p> <p>01 FILTER AIR HOSE</p> <p>02 STRAP LONG 426 01</p> <p>02 NUT WITH BASE DIAM 6X1,00 01</p>
<p>E1716110</p>			

Engine Equipment *Mixer, inlet air heating*

30/01/98 GB D08 1235 02 1724 10 PAGE 1	30/06/98 MIXER-INLET AIR HEATING	16 TZI UP TO O 5284	
 <p style="text-align: center;">01/90 01724 10</p>		1 96 006 109 2 96 005 934 RP 96 139 508 3 96 044 923 4 91 518 593 RP 1425 L5 5 SRV 000 023 RP 6981 43 6 SRV 000 021 RP 6981 41 7 79 03 001 885 RP 6915 83	01 INTAK AIR MIXER 01 AIR INTAKE PIPE 01 01 HOT AIR PIPE 55,3X60,6-600 01 AIR JACKET 01 02 ADJUST CLAMP DIAM 60 A 80 LARG 9 01 01 ADJUST COLLAR DIAM 20 A 60 LARG 9 01 02 SELF-TAP SCREWS DIAM 7X100-12 01
E1724100			

Engine Equipment Mixer, inlet air heating

30/01/98 GB D07 1235 02 1724 11 PAGE 1	30/06/98 MIXER-INLET AIR HEATING	16 TZI SINCE O 5285	
		1 96 006 109 01 2 96 139 508 01 3 96 134 097 01 4 91 538 275 01 RP 1425 L5 01 5 SRV 000 023 01 RP 6981 43 01 6 96 085 941 01 RP 6980 32 01 7 SRV 000 021 01 RP 6981 41 01 8 79 03 001 885 02 RP 6915 83 01	01 INTAK AIR MIXER 01 AIR INTAKE PIPE 01 HOT AIR PIPE 55X62-500 01 AIR JACKET 01 ADJUST CLAMP DIAM 60 A 80 LARG 9 01 STRAP LONG 426 01 ADJUST COLLAR DIAM 20 A 60 LARG 9 02 SELF-TAP SCREWS DIAM 7X100-12
E:724110			



Engine Equipment *Additional air circuit*

<p>30/01/98 GB D06 1235 02 1726 10 PAGE 1</p>	<p>30/06/98 ADDITIONAL AIR CIRCUIT</p>	<p>16 TZI UP TO O 5306</p>	
	<p>1 96 048 039 RP 0345 65</p> <p>2 96 068 715 RP 1627 46</p> <p>3 96 076 441</p> <p>4 96 073 227 RP 0345 55</p> <p>5 96 038 953 RP 1439 10</p> <p>6 96 073 224 RP 1628 T4</p> <p>7 96 073 225 RP 1628 T5</p> <p>8 79 03 079 045 RP 6987 Q6</p> <p>9 SRV 000 018 RP 6981 38</p> <p>10 95 623 754 RP 79 03 037 001</p> <p>11 79 03 056 064 RP 6961 04</p>	<p>01 01 01 01 03 01 01 01 02 02 04 04</p>	<p>COMPENSATOR</p> <p>ADDIT AIR HOSE</p> <p>IDLE COMP.SUPPT</p> <p>ELASTIC BRACKET 2 DIAM 6X1,00-13</p> <p>RETAINING LUG</p> <p>CLIP</p> <p>METALLIC CLAMP DIAM 20 A 35 LARG 9</p> <p>NUT WITH BASE DIAM 6X1,00</p> <p>SPRING WASHER DIAM 6X18</p>
<p>E1726100</p>			

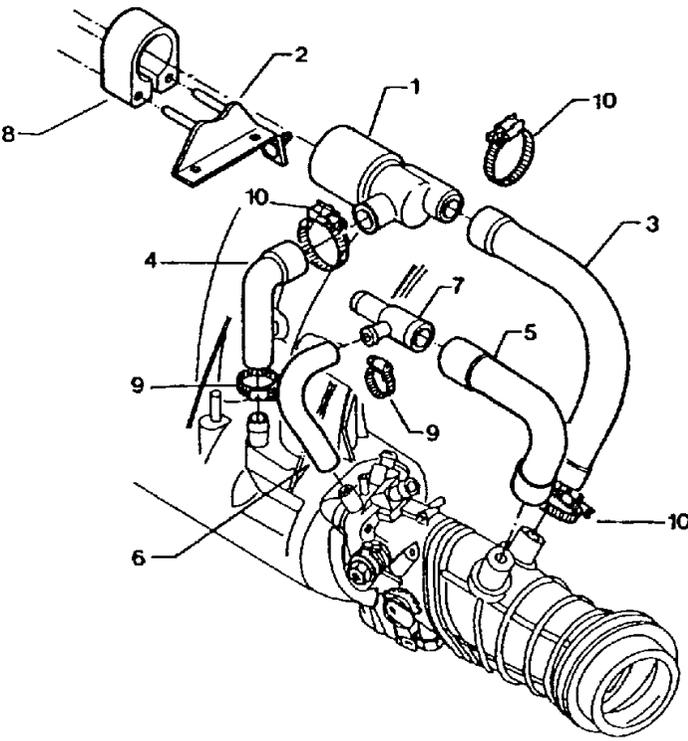


Engine Equipment *Additional air circuit*

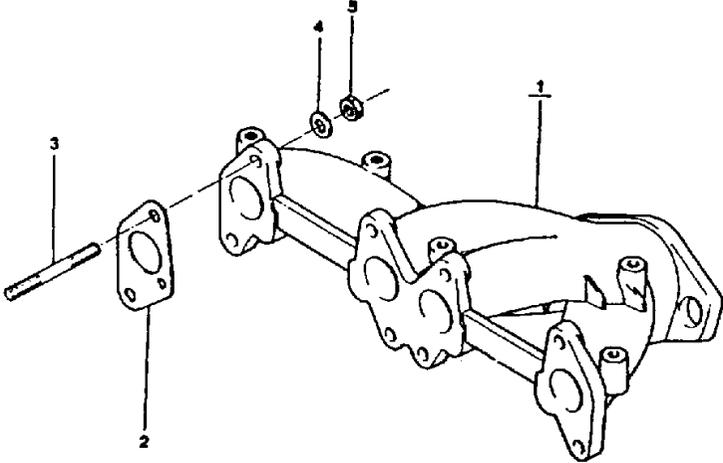
<p>30/01/88 GB D05 1235 02 1726 20 PAGE 1</p>	<p>30/08/98 ADDITIONAL AIR CIRCUIT</p>	<p>19 TRI 19 TZI GTI</p>	
<p style="text-align: center;">D17/901 D1726 204</p>		<p>1 91 541 740 RP 0345 40</p> <p>91 536 077 RP 0345 45</p> <p>2 95 632 509 RP 0362 71</p> <p> 96 111 899</p> <p>3 95 632 508 RP 0362 45</p> <p> 96 111 900 RP 0362 73</p> <p>4 79 03 079 018 RP 6987 91</p> <p>5 97 599 140 RP SRV 000 016</p>	<p>AIR HOUSING 01 -SALOON 19 TRI 01 -SALOON 19 TZI</p> <p>01 -ESTATE 19 TRI 01 -ESTATE 19 TZI -GTI</p> <p>ADDIT AIR HOSE 01 UP TO O 5137</p> <p>01 SINCE O 5138</p> <p>01 UP TO O 5137</p> <p>01 SINCE O 5138</p> <p>01 CLIP DIAM 24</p> <p>04 ADJUST COLLAR DIAM 12/22 01</p>
<p>E1726200</p>			



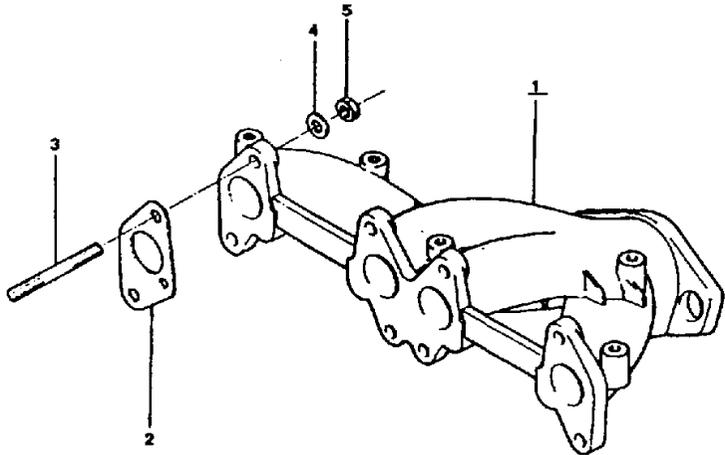
Engine Equipment *Additional air circuit*

30/01/98 GB D04 1235 02 1726 30 PAGE 1	30/06/98 ADDITIONAL AIR CIRCUIT	GTI 16V	
 <p style="text-align: right;">E 1726300</p>	1 91 540 797 RP 0345 42 2 96 005 611 RP 0345 43 3 95 638 660 4 91 540 299 RP 0362 46 5 95 638 661 6 91 541 557 RP 1192 64 7 95 633 026 8 91 541 568 RP 0345 44 9 SRV 000 017 RP 6981 37 10 SRV 000 019 RP 6981 39	01 01 01 01 01 01 01 01 99 01 03 01	COMPENSATOR IDLE COMP.SUPPT ADDIT AIR HOSE OIL VAPOR HOSE DIAM INT 8,4 3 WAY UNION FLANGE ADJUST CLAMP DIAM 16 A 27 LARG 9 METALLIC CLAMP DIAM 25 A 47 LARG 9
	E1726300		

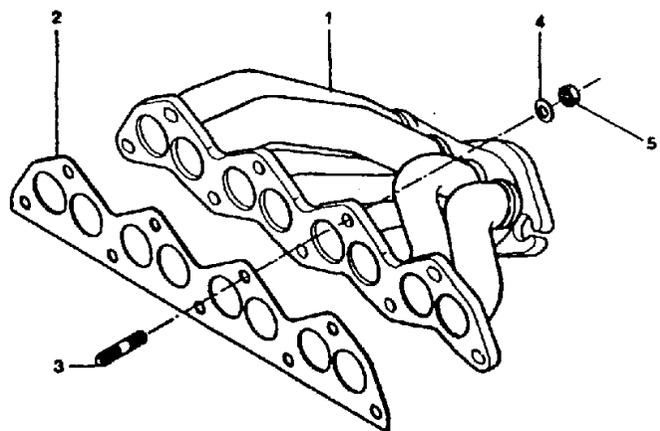
Engine Equipment *Exhaust pipe*

30/01/98 GB D03 1235 02 1810 10 PAGE 1	30/05/98 EXHAUST PIPE	16 TZI	
 <p style="text-align: center;">E1810100</p>		1 96 099 454 RP 0341 94 2 96 028 464 RP 0349 70 3 96 054 867 RP 0355 37 4 79 03 053 392 RP 6947 78 5 91 595 290 RP 0341 22	01 EXH MANIFOLD 01 04 MANIFOLD GASKET 01 08 STUD 8X125-36 01 08 PLAIN WASHER 8,5X16-1,5 01 08 NUT WITH BASE DIAM 8X1,25 01

Engine Equipment *Exhaust pipe*

30/01/98 GB D02 ↓ 1235 02 1810 20 PAGE 1	30/06/98 EXHAUST PIPE	19 TRI 19 TZI GTI	
 <p style="text-align: center;">018101J</p>		1 91 520 416 RP 0341 94 + 6922 73 96 099 454 RP 0341 94 2 96 028 464 RP 0349 70 3 91 595 090 RP 0355 32 96 054 867 RP 0355 37 4 79 03 053 392 RP 6947 78 5 91 595 290 RP 0341 22	EXH MANIFOLD UP TO O 4952 01 01 05 01 SINCE O 4953 01 04 MANIFOLD GASKET 01 STUD 08 DIAM 8X1,25-48 01 UP TO O 4952 08 8X125-36 01 SINCE O 4953 08 PLAIN WASHER 8,5X16-1,5 01 08 NUT WITH BASE DIAM 8X1,25 01
E1810200			

Engine Equipment *Exhaust pipe*

30/01/98 GB D01 1235 02 1810 30 PAGE 1	30/06/98 EXHAUST PIPE	GTI 16V	
 <p style="text-align: center;">02/pal 01810120</p> <p style="text-align: right;">E1810300</p>		1 91 541 839 RP 0341 37 2 91 538 218 RP 0349 E8 0349 E8 3 96 002 516 RP 0355 54 4 79 03 053 392 RP 6947 78 5 91 595 290 RP 0341 22	01 EXH MANIFOLD 01 01 MANIFOLD GASKET 01 A003 WITH ASBESTOS 01 A005 WITHOUT ASBESTOS 09 STUD 8X125-28-20-10-16 01 09 PLAIN WASHER 8,5X16-1,5 01 09 NUT WITH BASE DIAM 8X1,25 01

Engine Equipment *Ignition distributor*

30/01/88 GB E01 ↑ 1235 02 2112 20 PAGE 1	30/08/98 IGNITION DISTRIBUTOR	BOSCH 0237009051 SALOON 19 TRI UP TO 08/89	
<p style="text-align: center;">A+B+C+D+E+F+G+15</p> <p style="text-align: center;">[11/98] 02112260</p>		1 97 533 794 RP 5900 E3 2 95 659 459 3 94 05 941 328 NFP 4 95 602 185 NFP 5 94 05 933 478 6 95 618 795 RP 5904 E9 7 95 618 796 8 94 05 911 328 RP 5911 32 9 94 05 904 188 RP 5904 18 10 94 05 911 138 RP 5911 13 11 95 618 794 RP 5951 76 12 94 05 942 308 RP 5942 30 13 95 602 188 RP 5942 38 14 94 05 926 088 RP 5926 08 15 79 03 065 016 RP 5933 60 16 94 05 953 068 RP 5953 06	01 DISTRIBUTOR 01 DUCELLIER 01 H TENS LEAD SET 01 DISTRIBUTR HEAD 01 DISTRIBUT WASHR 01 DISTR SEAL DISC 01 PICK-UP COIL 01 FIELD COIL 01 CONNECTING WIRE 01 MOUNTING ASSY 01 KIT PARTS 01 VACUUM UNIT 01 SUPPORT LUG 01 CLIP DISTR CAP 01 STOP RING 01 O-RING SEAL 36,5X3 01 VACM UNIT UNION 3,5X8-5000
D2112260		17 79 10 032 930 RP 5903 17	02 DISTR FIX PLATE 01

Engine Equipment *Ignition distributor*

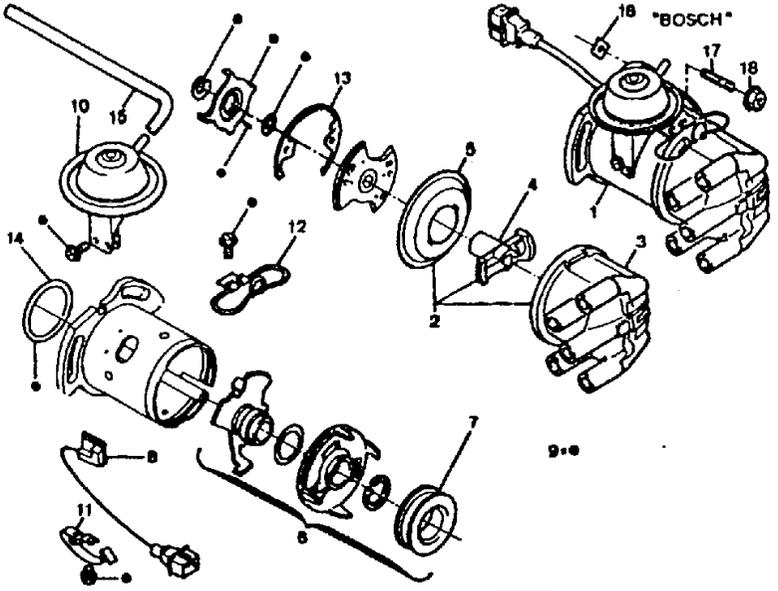
<p>30/01/88 GB E02 ↑ 1235 02 2112 20 PAGE 2</p>	<p>30/06/98 IGNITION DISTRIBUTOR</p>	<p>BOSCH 0237009051 SALOON 19 TRI UP TO 08/89</p>	
<p>11/98 D2112260</p> <p>D2112260</p>		<p>70 79 03 027 006 RP 6930 22</p> <p>71 79 03 037 005</p>	<p>02 01 STUD 7X100-18</p> <p>02 02 NUT WITH BASE 7X100</p>

Engine Equipment *Ignition distributor*

<p>30/01/96 GB E03 ↑ 1235 02 2112 21 PAGE 1</p>	<p>30/08/98 IGNITION DISTRIBUTOR</p>	<p>BOSCH 0237009074 SALOON 19 TRI SALOON 19 TZI SINCE 09/89</p>	
<p style="text-align: right;">01/92 02112270</p>		<p>1 97 533 794 RP 5900 E3</p> <p>2 95 659 459</p> <p>3 94 05 941 328 NFP</p> <p>4 95 602 185 NFP</p> <p>5 94 05 933 478</p> <p>6 95 619 492 RP 5904 G4</p> <p>7 95 619 493</p> <p>8 95 619 498 RP 5911 34</p> <p>9 94 05 904 188 RP 5904 18</p> <p>10 94 05 951 768 RP 5951 76</p> <p>11 94 05 942 308 RP 5942 30</p> <p>12 95 602 188 RP 5942 38</p> <p>13 94 05 926 088 RP 5926 08</p> <p>14 79 03 065 016 RP 5933 60</p> <p>15 94 05 953 068 RP 5953 06</p> <p>16 79 10 032 930 RP 5903 17</p>	<p>01 DISTRIBUTOR 01 DUCELLIER</p> <p>01 H TENS LEAD SET</p> <p>01 DISTRIBUTR HEAD</p> <p>01 DISTRIBUT WASHR</p> <p>01 DISTR SEAL DISC</p> <p>01 PICK-UP COIL ENS 01</p> <p>01 FIELD COIL</p> <p>01 IGNIT CONNECTOR 01</p> <p>01 MOUNTING ASSY 01</p> <p>01 VACUUM UNIT 01</p> <p>01 SUPPORT LUG 01</p> <p>01 CLIP DISTR CAP 01</p> <p>01 STOP RING 01</p> <p>01 O-RING SEAL 36,5X3 01</p> <p>01 VACM UNIT UNION 3,5X8-5000 01</p> <p>02 DISTR FIX PLATE 01</p>
<p>E2112210</p>		<p>17 79 03 027 006 RP 6930 22</p>	<p>02 STUD 7X100-18 01</p>



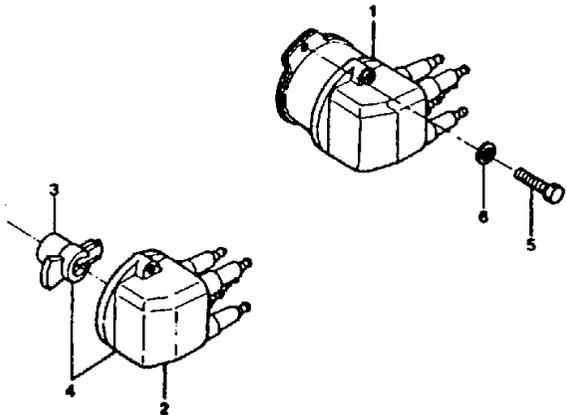
Engine Equipment *Ignition distributor*

<p>30/01/98 GB E04 ↑ 1235 02 2112 21 PAGE 2</p>	<p>30/08/98 IGNITION DISTRIBUTOR</p>	<p>BOSCH 0237009074 SALOON 19 TRI SALOON 19 TZI SINCE 09/89</p>	
 <p>[67/92] 02112270</p>		<p>18 79 03 037 005</p>	<p>02 NUT WITH BASE 7X100</p>
<p>E2112210</p>			

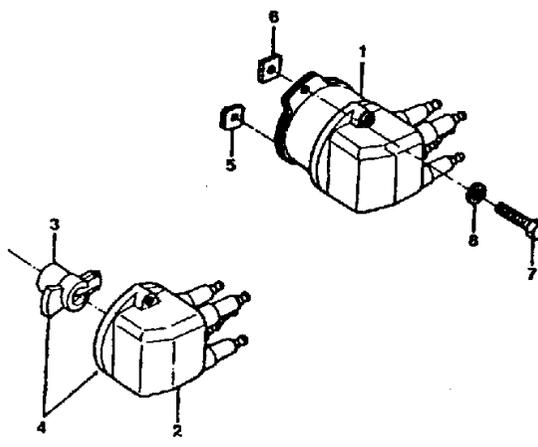
Engine Equipment *Ignition distributor*

30/01/98 GB E05 ↑ 1235 02 2112 30 PAGE 1	30/06/98 IGNITION DISTRIBUTOR	DUCELLIER 2525678 SALOON 19 TRI SALOON 19 TZI	
<p style="text-align: center;">[F/86] 02112300</p>		1 97 533 794 RP 5900 E3 2 95 618 396 → ORP 95 618 397 3 95 651 019 NFP 4 95 656 504 NFP 5 95 624 952 RP 5904 K3 6 95 618 397 7 79 03 065 016 RP 5933 60 8 94 05 953 068 RP 5953 06 9 79 10 032 930 RP 5903 17 70 79 03 027 006 RP 6930 22 71 79 03 037 005	01 DISTRIBUTOR 01 DUCELLIER 01 DISTRIBUTR HEAD 01 01 DISTRIBUT WASHR 01 01 MODULE ASSY 01 01 COIL + CONNECTION 01 01 H TENS LEAD SET 01 01 O-RING SEAL 36,5X3 01 01 VACM UNIT UNION 3,5X8-5000 01 02 DISTR FIX PLATE 01 02 STUD 7X100-18 01 02 NUT WITH BASE 7X100
D2112300			

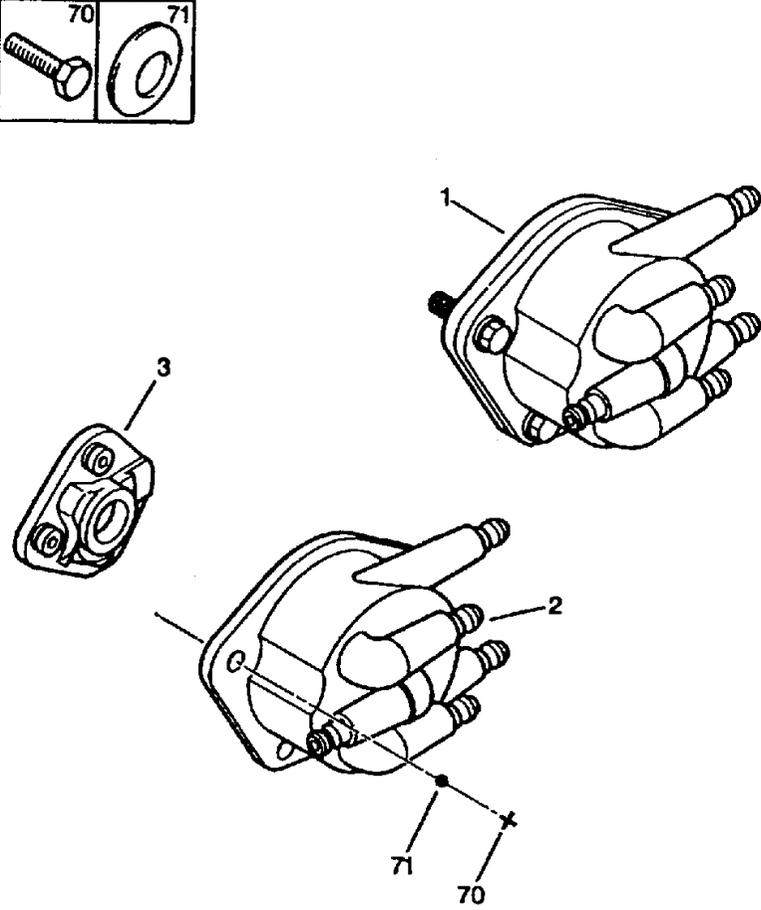
Engine Equipment *Assy distributor*

30/01/98 GB E06 ↑ 1235 02 2118 10 PAGE 1	30/06/98 ASSY DISTRIBUTOR	VALEO (ALLUM) DUCELLIER 2525655 16 TZI UP TO O 5284	
 <p style="text-align: center;">D 2118050</p> <p style="text-align: right;">E2118100</p>		1 97 535 800 RP 5900 G8 2 95 624 985 NFP 3 95 651 019 NFP 4 94 05 940 358 RP 5940 57 5 79 03 001 708 RP 6915 36 6 79 03 058 028 RP 6962 99	01 DISTRIBUTOR 01 VALEO (ALLUM) 01 DISTRIBUTR HEAD 01 DISTRIBUT WASHR 01 H TENS LEAD SET 01 02 CAPSCREW 7X100-20 01 02 SPRING WASHER DIAM 6X14X1,4 01

Engine Equipment *Assy distributor*

30/01/98 GB E07 1235 02 2118 30 PAGE 1	30/06/98 ASSY DISTRIBUTOR	VALEO (ALLUM) DUCELLIER 2525709A GTI ESTATE 19 TRI ESTATE 19 TZI	
 <p style="text-align: center;">07/90 D 2118 25</p>		1 96 041 373 RP 5900 H4 2 95 624 985 NFP 3 95 651 019 NFP 4 94 05 940 358 RP 5940 57 5 79 10 032 930 RP 5903 17 6 96 042 439 7 79 03 001 708 RP 6915 36 8 79 03 058 011 RP 6962 70	01 DISTRIBUTOR 01 DUCELLIER 01 DISTRIBUTR HEAD 01 DISTRIBUT WASHR 01 H TENS LEAD SET 01 01 DISTR FIX PLATE 01 01 02 CAPSCREW 7X100-20 01 02 SPRING WASHER DIAM 7,2X14,2-1,7 01
E2118300			

Engine Equipment *Assy distributor*

<p>30/01/98 GB E08 ↑ 1235 02 2118 40 PAGE 1</p>	<p>30/06/98 ASSY DISTRIBUTOR</p>	<p>VALEO (ALLUM) DUCELLIER 2525628 GTI 16V</p>	
 <p>[11/86] D2118100</p> <p>D2118100</p>		<p>1 96 038 183 2 91 538 999 RP 96 038 183 3 96 038 185 NFP 70 79 03 201 023 RP 6921 81 71 79 03 058 028 RP 6962 99</p>	<p>01 DISTRIBUTOR 01 DISTRIBUTOR HEAD 01 01 DISTRIBUTOR WASHR 03 CAPSCREW 6X100-25 01 03 SPRING WASHER DIAM 6X14X1,4 01</p>



Engine Equipment *Ignition harness, spark plugs, coil*

<p>30/01/98 GB E09 ↑ 1235 02 2120 10 PAGE 1</p>	<p>30/06/98 IGNITION HARNESS-SPARK PLUG-COIL</p>	<p>16 TZI UP TO O 5284</p>	
<p>1230</p> <p>01/90</p> <p>02 2120 12K</p>		<p>1 97 531 206 RP 5970 42</p> <p>2 96 013 114 RP 95 659 598</p> <p>3 96 024 614 96 009 090</p> <p>4 95 635 261 RP 5971 28</p> <p>5 95 611 814 RP 5979 65</p> <p>6 79 03 027 312 RP 0250 17</p> <p>7 79 03 201 759 RP 6922 49</p> <p>8 79 03 053 046 RP 6947 79</p> <p>9 95 623 754 RP 79 03 037 001</p> <p>10 79 03 233 002 RP 6936 91</p>	<p>01 IGNITION COIL 01</p> <p>01 IGNITION HARNES 01 ELECTRICFIL 01 MUSORB</p> <p>04 SPARK-PLUG 04 CHAMPION C9YCX</p> <p>04 EYQUEM FC 52 LS</p> <p>01 COIL BRACKET 01</p> <p>01 HARNES BRACKET 01</p> <p>02 SCREW COLUMN DIAM 6X100-37 01</p> <p>01 SELF-TAP SCREWS 8X125-25 01</p> <p>01 PLAIN WASHER DIAM 8X22-2,5 01</p> <p>02 NUT WITH BASE 02 DIAM 6X1,00 01</p> <p>02 6X100 01</p>
<p>E2120100</p>			



Engine Equipment *Ignition harness, spark plugs, coil*

30/01/98 GB E10 ↑ 1235 02 2120 11 PAGE 1	30/08/98 IGNITION HARNESS-SPARK PLUG-COIL	16 TZI SINCE O 5285	
		1 96 074 054 RP 5970 48 2 96 094 933 RP 5967 L0 3 96 009 090 96 040 824 RP 5962 W1 5962 S0 96 024 614 96 089 220 RP 5962 W0 4 96 084 499 RP 5979 79 5 79 03 201 271 RP 6922 C8 6 96 102 312 RP 6925 36 7 95 623 754 RP 79 03 037 001	01 IGNITION COIL 01 DUCELLIER 01 IGNITION HARNESS 01 04 SPARK-PLUG 04 EYQUEM FC 52 LS UP TO O 5900 04 EYQUEM RFC52LS 01 SINCE O 5901 04 BOSCH FR7DCO 04 CHAMPION C9YCX UP TO O 5900 04 CHAMPION RC9YCC 01 SINCE O 5901 01 HARNESS BRACKET 01 01 CAPSCREW 8X1,25-16 01 04 SCREW DIAM 5X0,80-50 01 01 NUT WITH BASE DIAM 6X1,00 01
E2120110			



Engine Equipment *Ignition harness, spark plugs, coil*

<p>30/01/98 GB E11 ↑ 1235 02 2120 20 PAGE 1</p>	<p>30/06/98 IGNITION HARNESS-SPARK PLUG-COIL</p>	<p>SALOON 19 TRI 19 TZI SINCE O 4680</p>	
<p>The diagram shows an exploded view of the ignition system. It includes four spark plugs (3), an ignition coil (1) mounted on a coil bracket (5), an ignition harness (2) with its mounting bracket (6), and various fasteners: a cap screw (7), a screw column (8), a plain washer (9), and a nut (10). The coil bracket (5) is shown with a mounting plate. The harness bracket (6) is shown with a screw column (8) and a nut (10). The spark plugs (3) are shown with their respective wires connected to the harness (2).</p>		<p>1 91 535 633 RP 5970 35</p> <p>2 97 534 955 RP 95 659 596</p> <p>3 96 009 090 96 024 614</p> <p>4 97 532 831 RP 5945 48</p> <p>97 522 876 RP 5945 48</p> <p>5 96 035 027 RP 5971 33</p> <p>6 91 518 232 RP 5979 63</p> <p>7 79 03 007 062 RP 6912 87</p> <p>8 79 03 027 312 RP 0250 17</p> <p>9 79 03 053 028 RP 6947 77</p> <p>10 95 623 754 RP 79 03 037 001</p>	<p>01 IGNITION COIL "BOSCH" 01 DUCELLIER 01 ISKRA 01 BOSCH</p> <p>01 IGNITION HARNES</p> <p>04 SPARK-PLUG 04 EYQUEM FC 52 LS 04 CHAMPION C9YCX</p> <p>01 MODULE 01 BOSCH</p> <p>01</p> <p>01</p> <p>01 COIL BRACKET</p> <p>01 HARNES BRACKET</p> <p>01</p> <p>02 CAPSCREW 4X0,70-20</p> <p>02 SCREW COLUMN DIAM 6X100-37 01</p> <p>02 PLAIN WASHER 6X12-1,2 01</p> <p>02 NUT WITH BASE DIAM 6X1,00 01</p>
<p>E2120200</p>			



Engine Equipment *Ignition harness, spark plugs, coil*

30/01/88 GB E12 ↑ 1235 02 2120 30 PAGE 1	30706/98 IGNITION HARNESS-SPARK PLUG-COIL	GTI ESTATE 19 TRI ESTATE 19 TZI UP TO O 4983	
<p style="text-align: center;">[10/83] 0212015F</p> <p style="text-align: right;">E2:20300</p>		1 91 535 633 RP 5970 35 2 96 037 048 RP 95 659 597 3 96 009 090 96 024 614 4 97 532 831 RP 5945 48 5 96 035 027 RP 5971 33 6 95 611 814 RP 5979 65 7 79 03 007 062 RP 6912 87 8 79 03 027 312 RP 0250 17 9 79 03 053 028 RP 6947 77 10 95 623 754 RP 79 03 037 001	01 IGNITION COIL "BOSCH" 01 DUCELLIER ISKRA BOSCH 01 IGNITION HARNES 01 04 SPARK-PLUG 04 EYQUEM FC 52 LS 04 CHAMPION C9YCX 01 MODULE 01 BOSCH 01 COIL BRACKET 01 01 HARNESS BRACKET 01 02 CAPSCREW 4X0,70-20 01 02 SCREW COLUMN DIAM 6X100-37 01 02 PLAIN WASHER 6X12-1,2 01 02 NUT WITH BASE DIAM 6X1,00 01



Engine Equipment *Ignition harness, spark plugs, coil*

30/01/98 GB E13 ↑ 1235 02 2120 31 PAGE 1	30/08/98 IGNITION HARNESS-SPARK PLUG-COIL	GTI ESTATE 19 TZI SINCE O 4984	
		1 97 530 780 RP 5970 43 2 96 070 994 RP 95 659 598 3 96 009 090 96 024 614 4 97 532 831 RP 5945 48 5 96 035 027 RP 5971 33 6 95 611 814 RP 5979 65 7 96 070 972 8 73 66 627 000 9 73 65 052 000 RP 26 230 229 10 97 599 219 RP 6992 A7 11 79 03 007 062 RP 6912 87 12 79 03 027 312 RP 0250 17 13 79 03 006 015 RP 6925 40 14 79 03 053 028 RP 6947 77 15 95 623 754 RP 79 03 037 001	01 IGNITION COIL BTR02 01 01 IGNITION HARNES 01 ELECTRICFIL 04 SPARK-PLUG 04 EYQUEM FC 52 LS 04 CHAMPION C9YCX 01 MODULE 01 BOSCH 01 COIL BRACKET 01 01 HARNESS BRACKET 01 01 01 01 FLANGE 01 PROTECT SHEATH 01 01 CLIP 01 02 CAPSCREW 4X0,70-20 01 02 SCREW COLUMN DIAM 6X100-37 01 04 SCREW CBLX RDL 4X70-30 01 02 PLAIN WASHER 6X12-1,2 01 02 NUT WITH BASE DIAM 6X1,00 01
E2120310			



Engine Equipment *Ignition harness, spark plugs, coil*

30/01/98 GB E14 ↑ 1235 02 2120 40 PAGE 1	30/08/98 IGNITION HARNESS-SPARK PLUG-COIL	GTI 16V	
<p style="text-align: center;">03791 021201M</p> <p style="text-align: right;">E2:20400</p>		1 97 531 206 RP 5970 42 2 97 535 465 3 96 039 962 96 123 906 4 97 532 831 RP 5945 48 5 95 586 679 6 95 586 920 7 91 514 880 80 RP 5946 03 8 79 03 201 020 RP 6915 84 9 79 03 007 062 RP 6912 87 10 79 03 033 009 RP 6934 27 11 79 03 061 122	01 IGNITION COIL 01 01 IGNITION HARNESS SPARK-PLUG 04 EYQUEM FC62LS3 UP TO O 5088 04 CHAMPION RC9BMC SINCE O 5089 01 MODULE 01 BOSCH 01 COIL BRACKET 02 SPACER DIAM 6,5X20EP7 01 PINKING SENSOR 01 02 CAPSCREW 02 6X1,00-12 01 02 4X0,70-20 01 02 WASHER-NUT 6X1,00 01 02 RUBBER WASHER 6X25-5

Engine Equipment *Clutch*

30/01/98 GB E15 ↑ 1235 02 3120 40 PAGE 1	30/06/98 CLUTCH	GTI 16V	
		1 96 085 306 RP 2004 A1 2 96 052 160 RP 2055 F3 96 098 305 RP 2055 F3 96 153 979 RP 2055 F3 3 96 090 882 RP 2041 60 4 94 02 115 150 RP 2115 25 5 97 532 100 RP 2175 21 6 96 021 053 RP 2175 20 7 96 000 971 RP 2107 A5 8 79 03 101 393 NFP 9 97 599 241 RP 6913 98 10 96 052 214 RP 2172 06	01 CLUTCH MECHANIM DIAM 215 01 VALEO (EMBRAY) CLUTCH PLATE 01 DIAM 215 01 UP TO O 4952 01 DIAM 215 01 VALEO (EMBRAY) SINCE O 4953 UP TO O 5532 01 DIAM 215 01 VALEO (EMBRAY) SINCE O 5533 01 BEARING BUFFER 01 FORK LEVER ENS 01 FORK BEARING SUP 01 INF 01 HSG LOCKG PLATE 03 CAPSCREW THRI 6X1,00-16 06 SCREW CHC 7X1,00-22 01 01 PIN DIAM 7 - 51 01
E3120400			

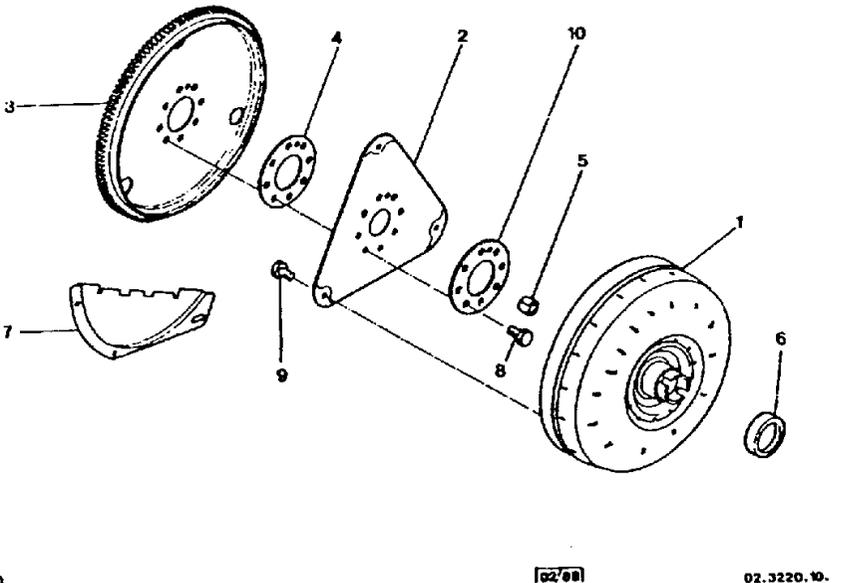
Engine Equipment *Automatic clutch*

30/01/98 GB F15 ↓ 1235 02 3220 10 PAGE 1	30/06/98 AUTOMATIC CLUTCH	16 TZI UP TO O 5306	
		1 95 616 038 RP 2004 61 2 95 604 818 RP 0535 35 3 96 054 475 RP 0535 53 4 95 011 190 RP 0535 36 5 95 602 227 RP 0524 17 6 95 568 777 RP 2264 15 7 97 500 379 RP 2107 86 8 95 599 408 RP 0537 32 9 96 041 879 RP 0537 34 10 95 599 319 RP 0535 37	01 CONVERTER 01 BRACKET 01 CROWN HOLDER 01 SPACER 01 CENTRING BUSH 17X12-12 01 HOUSING GASKET 01 LOCK PLATE 08 CAPSCREW CH9X1,00-18 03 SELF-TAP SCREWS 8X125-18,5 01 SPACER DIAM EXT 94 INT 49
1230 [02/86] 2.312 KK E3220100			

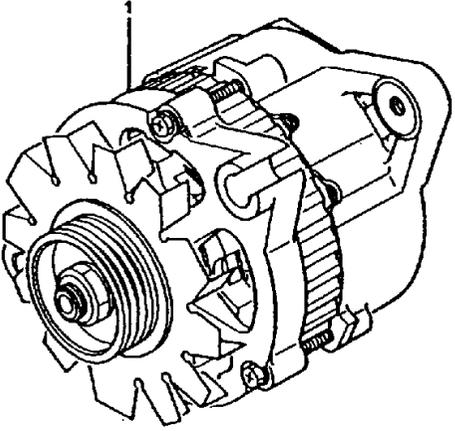
Engine Equipment *Automatic clutch*

30/01/98 GB F14 1235 02 3220 11 PAGE 1	30/06/98 AUTOMATIC CLUTCH	16 TZI SINCE O 5307	
		1 95 616 038 RP 2004 61 2 95 604 818 RP 0535 35 3 96 054 475 RP 0535 53 4 95 011 190 RP 0535 36 5 95 602 227 RP 0524 17 6 95 568 777 RP 2264 15 7 97 500 379 RP 2107 86 8 95 599 406 RP 0537 32 9 96 041 879 RP 0537 34 10 79 03 201 747 RP 6922 97 11 95 599 319 RP 0535 37	01 CONVERTER 01 01 BRACKET 01 01 CROWN HOLDER 01 01 SPACER 01 01 CENTRING BUSH 17X12-12 01 01 HOUSING GASKET 01 01 LOCK PLATE 01 08 CAPSCREW CH9X1,00-18 01 SELF-TAP SCREWS 03 8X125-18,5 01 03 6X100-16 01 01 SPACER DIAM EXT 94 INT 49 01
E3220110			

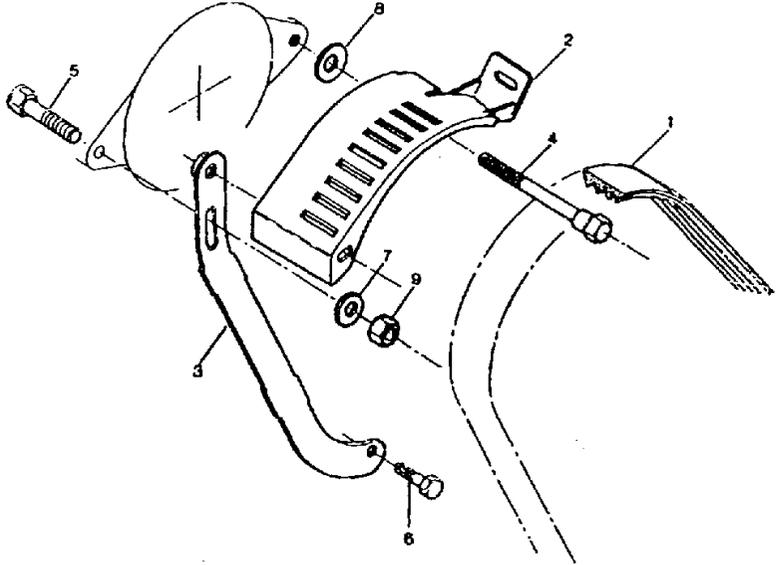
Engine Equipment *Automatic clutch*

<p>30/01/98 GB F13 1235 02 3220 20 PAGE 1</p>	<p>30/06/98 AUTOMATIC CLUTCH</p>	<p>19 TRI 19 TZI GTI</p>	
 <p>1230</p> <p>02/90</p> <p>02.3220.10.</p> <p>E3220200</p>		<p>1 95 624 501 95 653 086 RP 2004 71 2 95 604 818 RP 0535 35 3 96 040 166 RP 0535 52 96 054 475 RP 0535 53 4 95 011 190 RP 0535 36 5 95 602 227 RP 0524 17 6 95 568 777 RP 2264 15 7 97 500 379 RP 2107 86 96 000 971 RP 2107 A5 8 95 599 406 RP 0537 32 9 96 041 879 RP 0537 34 10 95 599 319 RP 0535 37</p>	<p>CONVERTER -SALOON 19 TRI -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI BRACKET CROWN HOLDER -SALOON 19 TRI -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI SPACER CENTRING BUSH 17X12-12 HOUSING GASKET LOCK PLATE -SALOON 19 TRI -SALOON 19 TZI HSG LOCKG PLATE -ESTATE 19 TRI -ESTATE 19 TZI -GTI CAPSCREW CH9X1,00-18 SELF-TAP SCREWS 8X125-18,5 SPACER DIAM EXT 94 INT 49</p>

Engine Equipment Alternator

<p>30/01/98 GB F12 ↓ 1235 02 5320 10 PAGE 1</p>	<p>30/06/98 ALTERNATOR</p>	<p>MITSUBISHI</p>	
<div style="text-align: center;">  <p>E5320100</p> </div>		<p>1 95 608 785 RP 5705 G7</p>	<p>01 ALTERNATOR NEW 01 CLASSE 8 01 MITSUBISHI* A003T03291 MITSUBISHI A 002 T 34591 -16 TZI -SALOON 19 TRI -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI</p>
		<p>95 599 763 RP 5705 A0</p>	<p>01 CLASSE 8 01 MITSUBISHI A 002 T 34598 MITSUBISHI A 003 T 03298 MITSUBISHI A 003 T 45298 MITSUBISHI* A 003 T 03291 MITSUBISHI* A 003 T 03292 MITSUBISHI* A 003 T 45191 MITSUBISHI* A 003 T 45291 MITSUBISHI* A 003 T 45292 -GTI 16V</p>
<p>E5320100</p>			

Engine Equipment *Alternator belt fastening*

30/01/98 GB F11 1235 02 5324 20 PAGE 1	30/06/98 ALTERNATOR - BELT FASTENING	16 TZI 19 TRI 19 TZI GTI	
 <p>1230 [02/84] 2-532-11</p> <p style="text-align: right;">E5324200</p>		1 91 536 229 RP 5750 H2 2 95 581 543 3 95 590 351 4 91 510 845 5 79 03 001 623 NFP 6 79 03 201 032 RP 6924 93 7 79 03 053 041 RP 6947 14 8 79 03 053 122 RP 6949 13 9 79 03 032 017 RP 6936 80	01 ALTERNATOR BELT 4 VOIES LON 1245 01 01 ALTERNATOR CAP 01 TENSION LUG CAPSCREW 01 10X150-118 01 8X125-30 01 DIAM 8X1,25-20 01 PLAIN WASHER 01 8X16-0,8 01 14X27-2,5 01 HEXAGONAL NUT HE 8X1,25

Engine Equipment *Alternator belt fastening*

<p>30/01/98 GB F10 1235 02 5324 30 PAGE 1</p>	<p>30/08/98 ALTERNATOR - BELT FASTENING</p>	<p>GTI 16V</p>	
<p style="text-align: center;">[11/98] D5324110</p>	<p>1 96 014 241 2 96 011 124 RP 5708 58 3 96 000 783 RP 5703 29 4 96 000 795 RP 5703 30 5 91 510 845 70 79 03 201 272 RP 6922 22 71 79 03 053 392 RP 6947 78 72 79 03 053 012 RP 6946 19 73 79 03 037 010 RP 6935 09</p>	<p>01 ALTERNATOR BELT K5 LON 1270 01 ALTERNATR SLIDE 01 CAPSCREW DIAM 8X1,25 01 SCREW WITH BASE 8X125-80 01 CAPSCREW 10X150-118 01 SELF-TAP SCREWS DIAM 8X125 LON 20 01 PLAIN WASHER 8,5X16-1,5 01 DIAM 14,5X29X2 01 NUT WITH BASE 8X125</p>	
<p>D5324110</p>			

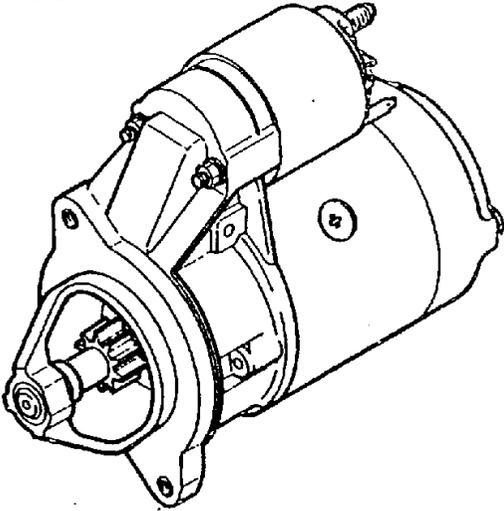
Engine Equipment *Alternator components*

30/01/98 GB F09 ↓ 1235 02 5325 20 PAGE 1	30/06/98 ALTERNATOR - COMPONENTS	mitsubishi A 003 T 03291	
<p style="text-align: center;">-MITSUBISHI-</p> <p style="text-align: right;">7 A+B</p> <p style="text-align: center;">[10/93]</p>		1 94 05 725 908 RP 5725 C8 2 97 90 260 608 RP 5725 C8 3 94 05 725 888 NFP 4 94 05 727 368 RP 5727 36 5 94 05 724 888 RP 5724 88 6 94 05 744 968 NFP 7 94 05 733 698 RP 5733 69 8 94 05 744 428 RP 5744 42 9 94 05 744 438 RP 5744 43 10 94 05 761 608 RP 5761 60 11 94 05 728 458 RP 5728 45 12 94 05 730 068 RP 5730 06	01 ALT FRT BEARING 01 01 ALTERN BEARING 01 01 SCREW KIT DIAM 5X18 01 01 ALTERNATR ROTOR 01 01 ALTERN BEARING 01 MITSUBISHI 01 ALTR RR BEARING 01 01 TERMIN PART SET ENS 01 01 DIODE PLATE 01 RIGHT 01 LEFT 01 01 ALTERN REGULATR 01 01 ALT BRUSH SET 01 01 SPRING SET 01
E5325200			

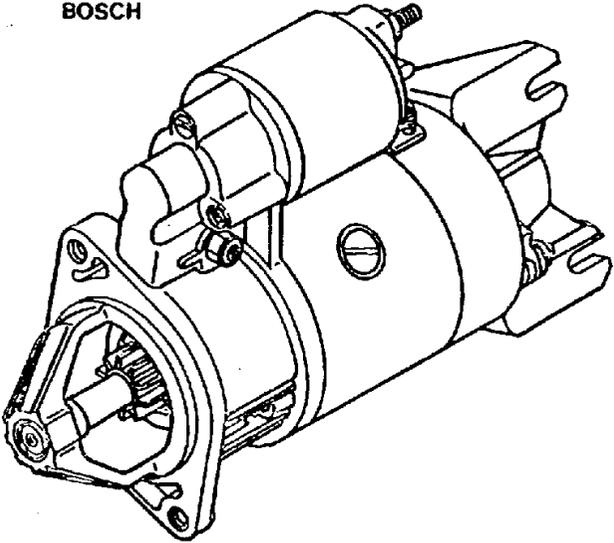
Engine Equipment *Alternator components*

30/01/98 GB F08 1235 02 5325 40 PAGE 1	30/06/98 ALTERNATOR - COMPONENTS	MITSUBISHI A 003 T 03298	
<p style="text-align: center;"> $\frac{8}{Y+Z}$ E5325400 </p>		1 94 05 725 908 RP 5725 C8 2 97 90 260 608 RP 5725 C8 3 94 05 725 888 NFP 4 95 656 572 RP 5727 36 5 94 05 724 888 RP 5724 88 6 94 05 720 678 RP 5720 67 7 94 05 744 968 NFP 8 94 05 733 698 RP 5733 69 9 94 05 744 428 RP 5744 42 10 94 05 744 438 RP 5744 43 11 94 05 761 608 RP 5761 60 12 94 05 728 458 RP 5728 45 13 94 05 730 068 RP 5730 06 14 94 05 746 418 NFP 15 95 616 724 NFP	01 ALT FRT BEARING 01 01 ALTERNT BEARING 01 01 SCREW KIT DIAM 5X18 NFP 01 ALTERNATR ROTOR 01 01 ALTERNT BEARING 01 MITSUBISHI* 01 ALTERNAT STATOR 01 01 ALTR RR BEARING NFP 01 TERMIN PART SET ENS 01 DIODE PLATE 01 RIGHT 01 01 LEFT 01 01 ALTERN REGULATR 01 01 ALT BRUSH SET 01 01 SPRING SET 01 01 PULLEY FIX PART ENS ECROU + RONDELLE NFP 01 ALTERNATOR FAN ENS MITSUBISHI*
E5325400		16 94 05 734 418 NFP	01 ALTERN ROD SET

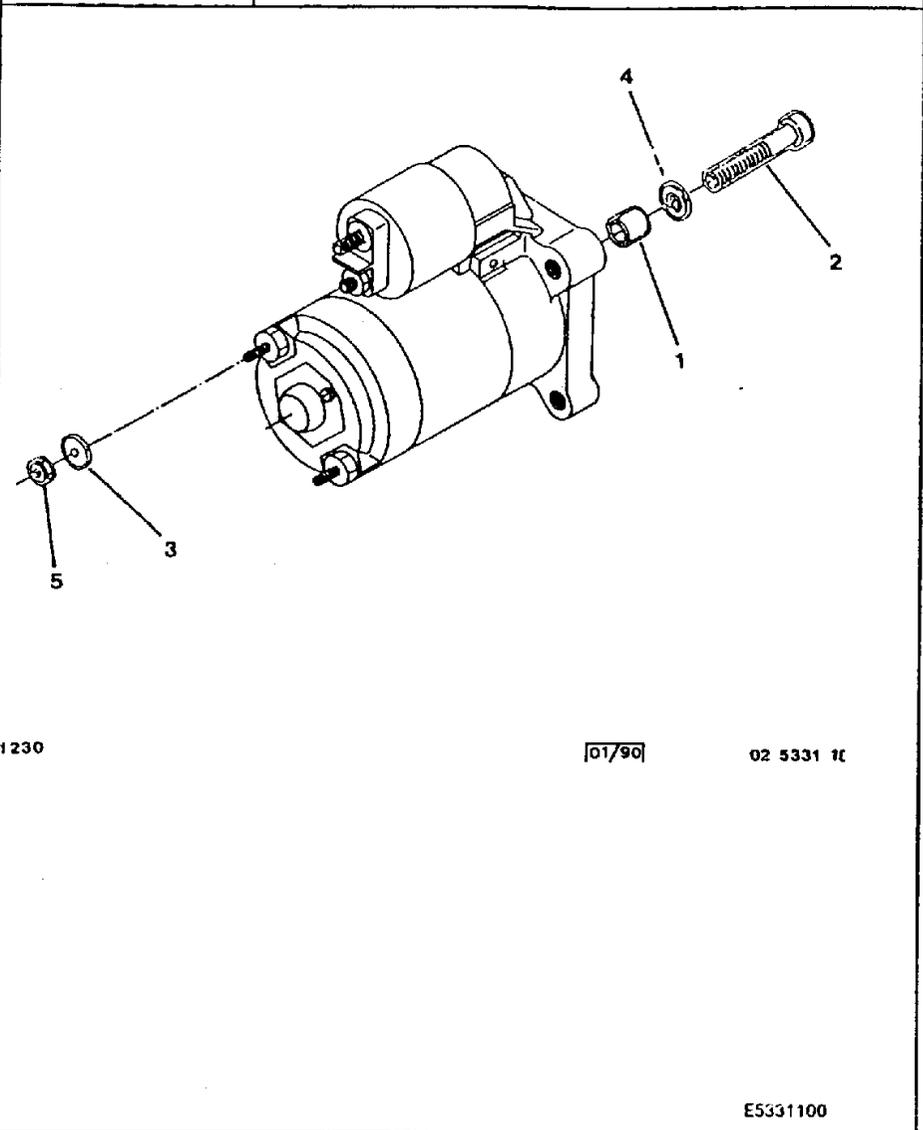
Engine Equipment Starter

30/01/98 GB F07 ↓ 1235 02 5330 10 PAGE 1	30/06/98 STARTER	PARIS RHONE	
<p style="text-align: center;">"PARIS-RHONE"</p>  <p style="text-align: center;">1230</p> <p style="text-align: center;">02/88 02.5330.30</p> <p style="text-align: right;">E5330100</p>		1 96 014 184 RP 5802 E4 2 91 508 644 RP 5802 E4	STRT-MOTOR NEW 01 -16 TZI 01 D6RA8 - D6RA18 01 -16 TZI 01 -SALOON 19 TRI -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI D9E48

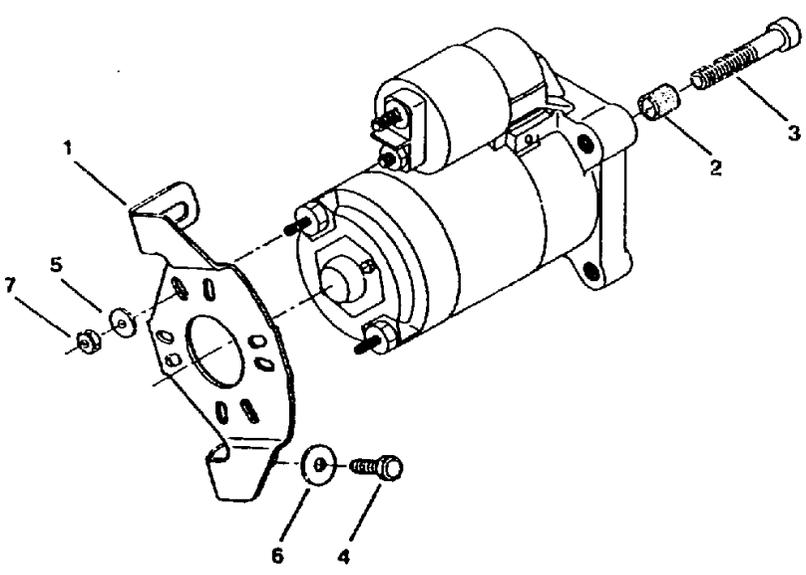
Engine Equipment Starter

<p>30/01/98 GB F06 ↓ 1235 02 5330 20 PAGE 1</p>	<p>30/05/98 STARTER</p>	<p>BOSCH</p>	
<div style="text-align: center;">  <p>BOSCH</p> </div> <p>1230</p> <p>[02/88] 02.5330.10</p>		<p>1 91 508 644 RP 5802 E4</p>	<p>01 STRT-MOTOR NEW 01 -16 TZI -SALOON 19 TRI -SALOON 19 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI 0001208516</p>
<p>E5530200</p>			

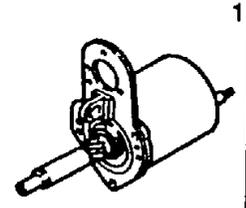
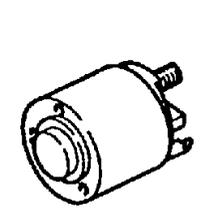
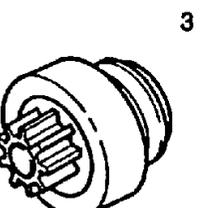
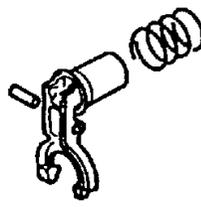
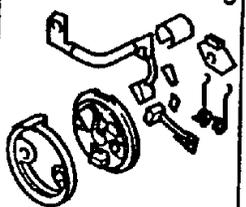
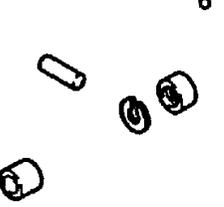
Engine Equipment *Starter motor fastening*

<p>30/01/98 GB F05 ↓ 1235 02 5331 10 PAGE 1</p>	<p>30/06/98 STARTER MOTOR SECURING</p>	<p>1,580L</p>	
		<p>1 79 03 067 034 01 RP 6968 43 01</p> <p>2 79 03 009 248 03 RP 6913 D0 01</p> <p>3 79 03 053 372 04 RP 6949 29 01</p> <p>4 79 03 057 100 03 RP 6962 11 01</p> <p>5 79 03 032 006 02 RP 6933 08 01</p>	<p>CENTRING PIN DIAM 14 LON 15</p> <p>SOCKET SCREW CHC10X1,50-60</p> <p>PLAIN WASHER 5X16-1,5</p> <p>FLEXIBLE WASHER 10,4X21,3-0,8</p> <p>HEXAGONAL NUT 5X80-4</p>
<p>E5331100</p>			

Engine Equipment *Starter motor fastening*

<p>30/01/98 GB F04 1235 02 5331 20 PAGE 1</p>	<p>30/06/98 STARTER MOTOR SECURING</p>	<p>1,905L</p>	
 <p>1230 [01/90] 02 5331 1</p>		<p>1 91 505 539 01 AR RP 5803 36 01 -19 TRI -19 TZI -GTI 96 040 762 01 AR -GTI 16V</p> <p>2 79 03 067 034 01 CENTRING PIN DIAM 14 LON 15 RP 6968 43 01</p> <p>3 79 03 009 248 SOCKET SCREW CHC10X1,50-60 RP 6913 D0</p> <p>4 79 03 101 756 02 CAPSCREW 7X100-25 RP 6921 72 01</p> <p>5 79 03 053 372 PLAIN WASHER RP 6949 29 02 5X16-1,5 01</p> <p>6 79 03 053 039 02 RP 95 624 273 01</p> <p>7 79 03 032 006 02 HEXAGONAL NUT 5X80-4 RP 6933 08 01</p>	<p>STTR-MTR BRACKT</p>
<p>E5331200</p>			

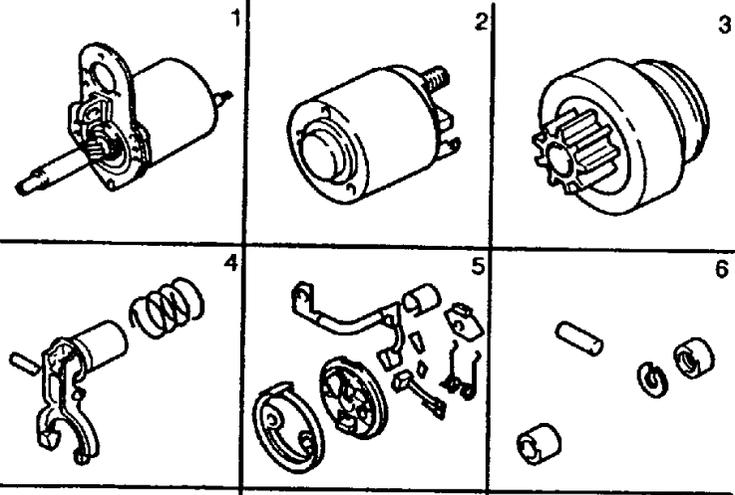
Engine Equipment *Starter details*

30/01/98 GB F03 ↓ 1235 02 5332 20 PAGE 1	30/06/98 STARTER - DETAILS	PARIS RHONE D 6 RA 8		
			1 94 05 817 018 RP 5817 02	01 MOTOREDUCER 01
			2 94 05 836 448 RP 5836 49	01 SOLENOID 01
			3 94 05 835 968 RP 5835 96	01 STRTR-MOT DRIVE 01
			4 94 05 855 778 RP 5855 77	01 FORK PART SET 01
			5 94 05 828 888 RP 5828 88	01 FEED ASSEMBLY 01
			6 94 05 827 818 RP 5827 81	01 REPAIR KIT 01

[11/98] D533211A

D533211A

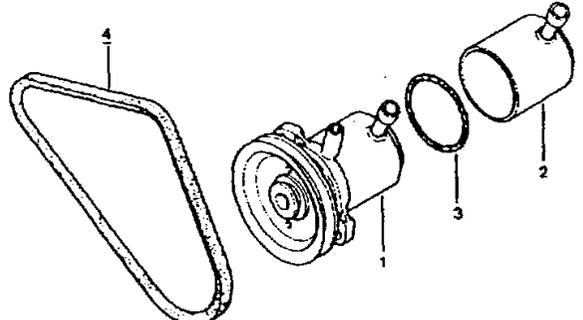
Engine Equipment *Starter details*

30/01/88 GB F02 1235 02 5332 21 PAGE 1	30/08/98 STARTER - DETAILS	PARIS RHONE D 6 RA 18	
	<p style="text-align: center;">11/88 D533211B</p>	1 94 05 817 028 RP 5817 02 2 94 05 836 498 RP 5836 49 3 97 90 260 708 RP 5835 A0 4 94 05 855 778 RP 5855 77 5 94 05 828 898 RP 5828 89 6 94 05 827 818 RP 5827 81	01 MOTOREDUCER 01 SOLENOID 01 STRTR-MOT DRIVE 01 FORK PART SET 01 FEED ASSEMBLY 01 REPAIR KIT
D533211B			

Engine Equipment *Starter details*

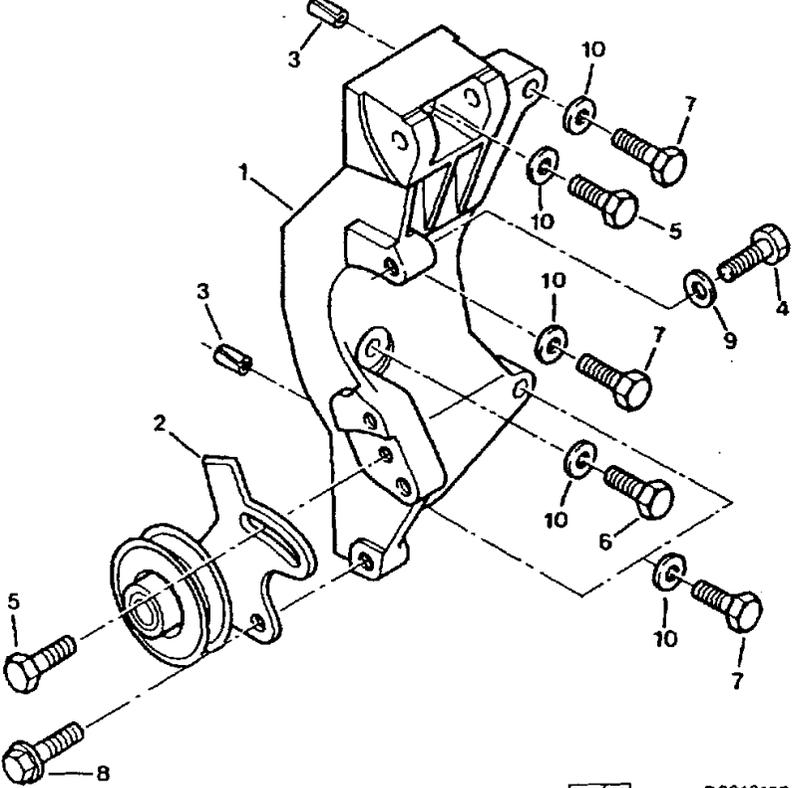
30/01/98 GB F01 1235 02 5332 30 PAGE 1	30/06/98 STARTER - DETAILS	BOSCH 0001208516	
		1 95 589 942 RP 5821 D4 2 95 589 955 RP 5827 57 3 95 589 941 NFP 4 95 572 896 NFP 5 95 589 943 RP 5835 71 6 95 589 944 NFP 7 95 589 945 NFP 8 95 572 915 RP 5826 08 9 95 589 946 RP 5855 44 10 95 589 949 NFP 11 95 589 947 NFP 12 95 589 948 RP 5837 15 13 95 616 841 RP 5828 72 14 95 589 950 RP 5829 21 15 95 572 905 NFP 16 95 589 952 NFP	01 STRTR MOT ARMAT 01 01 BRAKG PART SET ENS 01 01 FIELD COIL 03 POLE SHOE SCREW 01 STRTR-MOT DRIVE 01 02 SOLENOID BEARG 01 FRONT BEARING 01 01 COVER BEARING 01 01 START-MOT FORK 01 01 BRUSH-HOLDER 01 REAR BEARING 01 01 COVER BEARING 01 01 BRUSH SET 01 04 BRUSH SPRING 01 01 STARTER MOT CAP AR 01 02 STRTR ROD SET 01 .../...
E5332300			

Hydraulics and Running Gear *HP pump*

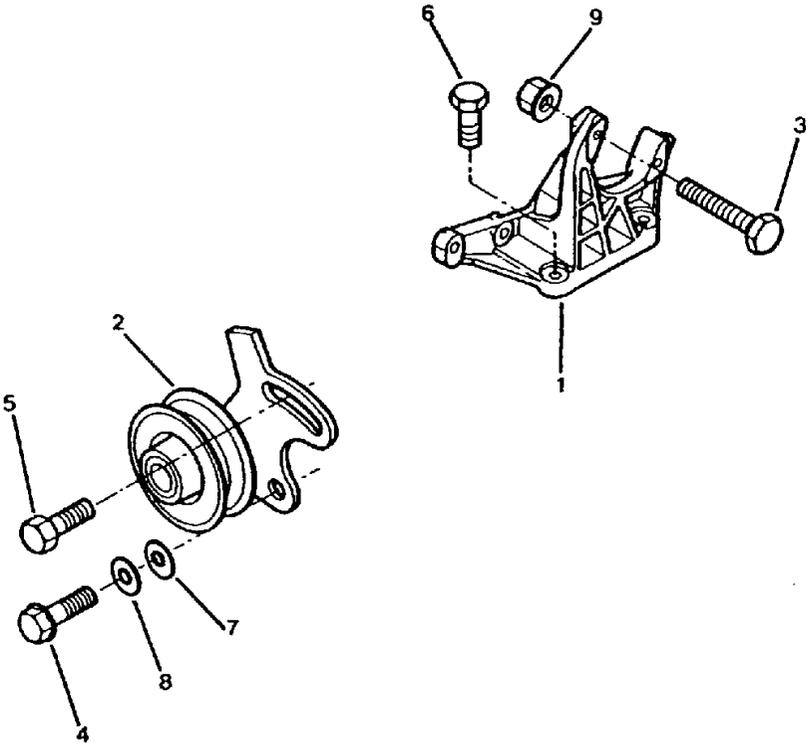
<p>30/01/98 GB C02 ↑ 1235 03 3912 10 PAGE 1</p>	<p>30/06/98 HP. PUMP</p>		
 <p style="text-align: center;">03912100</p> <p style="text-align: right;">E35:2100</p>		<p>1 95 589 236 01 96 034 023 01 2 75 518 905 01 3 95 612 497 01 RP 4009 80 01 4 91 536 303 01 RP 5750 F9 01 96 035 624 01</p>	<p>HIGH PRESS PUMP DIAM 120 -GTI 16V PUMP COVER DIAM INT 72 COVER GASKET SECTION CARRE BELT LON 790 HYD PUMP BELT L 650 -GTI 16V</p>



Hydraulics and Running Gear *HP pump bracket*

30/01/98 GB C03 ↑ 1235 03 3913 10 PAGE 1	30/06/98 HP.PUMP-BRACKET	EXCEPT GTI 16V	
 <p style="text-align: center;">01/92] D3913120</p> <p style="text-align: right;">E3913100</p>		1 95 640 071 01 2 95 590 353 01 3 79 03 067 023 02 RP 6968 37 01 4 79 03 001 623 02 NFP 5 79 03 009 039 01 RP 6913 50 01 6 79 03 201 036 01 RP 6923 23 01 7 79 03 001 994 04 RP 6921 83 01 8 79 03 001 043 01 NFP 9 79 03 058 030 02 RP 6962 66 01 10 79 03 057 005 05 RP 6962 13 01 79 03 057 100 01 RP 6962 11 01	01 PUMP BRACKET 01 TENSION ROLLER 02 PIN DIAM 8X18 01 02 CAPSCREW 8X125-30 01 01 SOCKET SCREW CHC 10X1,50-35 01 01 CAPSCREW 01 8X125-40 01 04 H 8X1,25-35 01 01 WASHER-SCREW THRI 8 X 1,25 -20 01 02 SPRING WASHER 8X18-1,4 01 05 FLEXIBLE WASHER 01 DIAM 8X14 01 01 10,4X21,3-0,8 01

Hydraulics and Running Gear *HP pump bracket*

30/01/98 GB C04 ↑ 1235 03 3913 20 PAGE 1	30/06/98 HP.PUMP-BRACKET	GTI 16V	
 <p style="text-align: center;">[01/92] D3913140</p> <p style="text-align: right;">E3913200</p>		1 2 3 4 5 6 7 8 9	96 034 024 01 PUMP BRACKET 96 034 825 01 TENSION ROLLER 79 03 201 038 02 CAPSCREW RP 6933 04 01 8X125-50 79 03 201 151 01 DIAM8X1,25-25 RP 5804 08 01 79 03 201 828 01 SELF-TAP SCREWS 8X125-40 RP 6922 88 01 79 03 201 035 03 CAPSCREW 8X125-35 RP 6921 83 01 79 03 053 392 01 PLAIN WASHER 8,5X16-1,5 RP 6947 78 01 79 03 056 014 01 SPRING WASHER DIAM 8,5X14 RP 6958 58 01 79 03 033 012 01 NUT WITH BASE HERI M8X1,25 RP 6936 71 01

Hydraulics and Running Gear *Pressure regulator, accumulator*

30/01/98 GB C05 ↑ 30/06/98 1235 03 3916 10 PAGE 1	PRESSURE REGULATOR-BRACKETS-ACCUMULATOR		
<p style="text-align: right;">[01/92] D3916100</p>	1 95 588 682 2 5 451 376 3 95 611 213 4 95 412 542 5 5 420 596 6 5 412 540 5 420 595 7 5 412 798 8 5 412 539 9 5 412 797 10 5 412 538 11 5 416 868 12 5 412 801 13 22 709 009 14 22 707 009 15 5 412 543 16 95 630 952 RP 5272 15	01 CIRCUIT BREAKER 01 SPHERE + GASKET 400CM3 PRESS 62 BARS 01 <i>CIRC BREAK BODY</i> 01 <i>CONNECTOR PLUG DIAM EXT 34 - H 45</i> 01 SPRING SHIM 01 21X28 E 0,3 99 24,5X32 E 0,7 99 24,5X32 E 0,3 01 <i>CIRC BRK SPRING DIAM EXT 26</i> 01 <i>CONJONCT SPRING DIAM EXT 32</i> 01 <i>CIRC BRAKER CUP</i> 01 <i>DIAM EXT 32 E 9</i> 01 <i>HYD VALVE RING</i> 01 DRAIN SCREW LON 28 01 BALL 01 DIAM 7 01 DIAM 6 01 <i>CONJUCTION BAR 1 DIAM 5</i> 01 <i>SUSP CYL O-RING 37,4X42X2,6</i>	
E3916100		.../...	

Hydraulics and Running Gear *Pressure regulator, accumulator*

30/01/98 GB C06 ↑ 30/06/98 1235 03 3916 10 PAGE 2	PRESSURE REGULATOR-BRACKETS-ACCUMULATOR		
		17 24 880 009 01 RP 96 157 730 01 18 24 881 009 01 RP 96 157 736 01 19 24 890 009 01 RP 96 157 738 01 20 26 214 429 02 RP 79 03 009 055 01 21 79 03 201 012 01 RP 6918 26 01 22 23 452 319 01 RP 23 755 009 01 23 26 212 819 01	HYD OIL O-RING 33,2X37X1,9 29X34,4X2,7 6,7X10,5X1,9 SOCKET SCREW TH 5 X 15 CAPSCREW 5X80-14 7 X 10 SCREW COLUMN DIAM 7X1,00-15-20
E39.6100			



Hydraulics and Running Gear *Pressure regulator bracket*

<p>30/01/98 GB C07 ↑ 1235 03 3917 10 PAGE 1</p>	<p>30/06/98 PRESSURE REGULATOR-BRACKETS</p>		
		<p>1 95 596 945 01 2 95 602 150 01 3 95 605 099 01 4 79 03 101 770 02 RP 0820 09 01 5 79 03 001 783 02 RP 6923 19 01 6 79 03 058 029 02 RP 6962 70 01</p>	<p>CIRCUIT BREAKER -GTI 16V AR -19 TRI -19 TZI -GTI -16 TZI CAPSCREW DIAM 7X1,00-18 SELF-TAP SCREWS DIAM 7X1,00-75 FLEXIBLE WASHER DIAM 7,2 X14,2X1,4</p>
<p style="text-align: right;">03/92 E3917100</p>			
<p style="text-align: right;">E3917100</p>			

Hydraulics and Running Gear *Safety valve*

30/01/98 GB C08 ↑ 1235 03 3921 10 PAGE 1	30/06/98 SAFETY VALVE		
<p style="text-align: right;">01/92 03921100</p> <p style="text-align: right;">E3921100</p>		1 95 050 064 01 2 96 049 204 01 3 5 415 510 99 4 95 050 061 01 5 5 415 508 01 6 5 410 179 01 7 24 887 009 01 8 24 831 009 01 RP 4048 H5 01 9 95 494 963 01 10 95 572 469 01 11 79 03 201 027 01 RP 6921 41 01 12 79 03 058 028 01 RP 6962 99 01 13 95 623 754 01 RP 79 03 037 001 01	01 SAFETY VALVE 01 VALVE PLUG 99 SPRING SHIM 8,5X14 E 0,9 01 HYD VALV SPRING DIAM EXT 15 01 HYD VALVE CUP 6,4X14 E 6,8 01 VALVE CUP RING 01 HYD OIL O-RING TO-20,7X24,5X1,9 01 14,2X18X1,9 01 01 HYD OIL SWITCH 01 PROTECTOR 01 CAPSCREW 6X100-45 01 01 SPRING WASHER DIAM 6X14X1,4 01 01 NUT WITH BASE DIAM 6X1,00 01

Hydraulics and Running Gear *LHM tank*

<p>30/01/98 GB C09 ↑ 1235 03 3930 10 PAGE 1</p>	<p>30/06/98 HYDRAULIC FLUID TANK</p>		
<p style="text-align: center;">02/92 E3930100</p>	<p>1 5 491 085 2 5 483 959 3 75 531 823 RP 5271 08 4 5 464 978 5 5 488 788 6 95 536 696 7 5 508 681 8 5 445 464 RP 5271 06 9 5 464 979 10 5 488 129 11 95 488 446 12 5 461 317 13 5 461 058 14 79 05 026 874 16 95 635 731 RP 5270 14</p>	<p>01 HYD RESERVOIR DIAM 226,5 H 162,5 01 EQUIPED BLOCK 01 LEVEL INDICATOR 01 INDICATOR SEAL 18X25,6X3,8 01 HYD BLOCK SEAL DIAM INT 83-EXT 125 01 RESERVOIR PLUG 01 INTAKE FILTER H 150MM 01 FEED BACK FILTR 01 FILTER HOOK 01 HYD TANK CUP DIAM 122-E 0,51 01 RESERVOIR CAP 01 HYDRL COMPNSTR 01 HYD TANK COLLAR DIAM 95X120X8 02 HYDRAULIC TUBE LON 2750 01 3 WAY UNION 3 DIAM 3,85</p>	
<p>E3930100</p>			



Hydraulics and Running Gear *Supply piping, suspension*

<p>30/01/98 GB C10 ↑ 30/06/98 1235 03 3941 10 PAGE 1</p>	<p>SUPPLY SUSPENSION PIPING</p>	<p>NOTICE: THE KEY NR 8 + 9 + 15 REPLACE THE ONE-PART STANDARD TUBE</p>																																																			
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: center;">1</td> <td style="width: 15%;">95 624 231</td> <td style="width: 5%;">01</td> <td style="width: 75%;"> HYDRAULIC TUBE LON480 -19 TRI -19 TZI -GTI -16 TZI </td> </tr> <tr> <td></td> <td>95 624 233</td> <td>01</td> <td>LON 1075 -GTI 16V</td> </tr> <tr> <td style="text-align: center;">2</td> <td>96 014 107</td> <td>01</td> <td>DIAM 6,35-1040 -16 TZI</td> </tr> <tr> <td></td> <td>96 075 164</td> <td>01</td> <td>DIAM 6,35-1040 -19 TRI -19 TZI -GTI</td> </tr> <tr> <td></td> <td>96 034 027</td> <td>01</td> <td>DIAM 6,35-525 -GTI 16V</td> </tr> <tr> <td style="text-align: center;">3</td> <td>95 596 576</td> <td>01</td> <td>DIAM 6,35-305 -19 TRI -19 TZI -GTI -16 TZI</td> </tr> <tr> <td></td> <td>96 016 910</td> <td>01</td> <td>-GTI 16V</td> </tr> <tr> <td style="text-align: center;">4</td> <td>96 033 161</td> <td>01</td> <td>DIAM 4,5-2200 -19 TRI -19 TZI -GTI -16 TZI</td> </tr> <tr> <td></td> <td>96 033 162</td> <td>01</td> <td>DIAM 4,5 -2200 -GTI 16V</td> </tr> <tr> <td style="text-align: center;">5</td> <td>95 567 431</td> <td>01</td> <td>DIAM 3,5-925</td> </tr> <tr> <td style="text-align: center;">6</td> <td>95 603 487</td> <td>01</td> <td>DIAM 3,5-450</td> </tr> <tr> <td style="text-align: center;">7</td> <td>96 117 586</td> <td>01</td> <td>DIAM 3,5-1300</td> </tr> <tr> <td style="text-align: center;">8</td> <td>95 567 435</td> <td>01</td> <td>DIAM 3,5-789</td> </tr> </table>	1	95 624 231	01	HYDRAULIC TUBE LON480 -19 TRI -19 TZI -GTI -16 TZI		95 624 233	01	LON 1075 -GTI 16V	2	96 014 107	01	DIAM 6,35-1040 -16 TZI		96 075 164	01	DIAM 6,35-1040 -19 TRI -19 TZI -GTI		96 034 027	01	DIAM 6,35-525 -GTI 16V	3	95 596 576	01	DIAM 6,35-305 -19 TRI -19 TZI -GTI -16 TZI		96 016 910	01	-GTI 16V	4	96 033 161	01	DIAM 4,5-2200 -19 TRI -19 TZI -GTI -16 TZI		96 033 162	01	DIAM 4,5 -2200 -GTI 16V	5	95 567 431	01	DIAM 3,5-925	6	95 603 487	01	DIAM 3,5-450	7	96 117 586	01	DIAM 3,5-1300	8	95 567 435	01	DIAM 3,5-789
1	95 624 231	01	HYDRAULIC TUBE LON480 -19 TRI -19 TZI -GTI -16 TZI																																																		
	95 624 233	01	LON 1075 -GTI 16V																																																		
2	96 014 107	01	DIAM 6,35-1040 -16 TZI																																																		
	96 075 164	01	DIAM 6,35-1040 -19 TRI -19 TZI -GTI																																																		
	96 034 027	01	DIAM 6,35-525 -GTI 16V																																																		
3	95 596 576	01	DIAM 6,35-305 -19 TRI -19 TZI -GTI -16 TZI																																																		
	96 016 910	01	-GTI 16V																																																		
4	96 033 161	01	DIAM 4,5-2200 -19 TRI -19 TZI -GTI -16 TZI																																																		
	96 033 162	01	DIAM 4,5 -2200 -GTI 16V																																																		
5	95 567 431	01	DIAM 3,5-925																																																		
6	95 603 487	01	DIAM 3,5-450																																																		
7	96 117 586	01	DIAM 3,5-1300																																																		
8	95 567 435	01	DIAM 3,5-789																																																		



Hydraulics and Running Gear *Supply piping, suspension*

<p>30/01/98 GB C11 ↑ 30/06/98 1235 03 3941 10 PAGE 2</p>	<p>SUPPLY SUSPENSION PIPING</p>																																																	
		<p>NOTICE: THE KEY NR 8 + 9 + 15 REPLACE THE ONE-PART STANDARD TUBE</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: center;">9</td> <td style="width: 60%;">95 603 737</td> <td style="width: 5%; text-align: center;">01</td> <td style="width: 30%;">HYDRAULIC TUBE DIAM 3,5-1125</td> </tr> <tr> <td style="text-align: center;">10</td> <td>95 595 683</td> <td style="text-align: center;">01</td> <td></td> </tr> <tr> <td style="text-align: center;">11</td> <td>95 595 685</td> <td style="text-align: center;">01</td> <td></td> </tr> <tr> <td style="text-align: center;">12</td> <td>95 595 682</td> <td style="text-align: center;">01</td> <td></td> </tr> <tr> <td style="text-align: center;">13</td> <td>95 595 684</td> <td style="text-align: center;">01</td> <td></td> </tr> <tr> <td style="text-align: center;">14</td> <td>95 496 828</td> <td style="text-align: center;">01</td> <td></td> </tr> <tr> <td style="text-align: center;">15</td> <td>5 438 353</td> <td style="text-align: center;">01</td> <td>PIPE 3WAY UNION 3 DIAM 8X1,25</td> </tr> <tr> <td style="text-align: center;">16</td> <td>75 515 788</td> <td style="text-align: center;">01</td> <td>PIPE 4WAY UNION AR 4 DIAM 8X1,25</td> </tr> <tr> <td></td> <td>RP 5 446 900</td> <td style="text-align: center;">01</td> <td></td> </tr> <tr> <td style="text-align: center;">17</td> <td>5 447 189</td> <td style="text-align: center;">01</td> <td>PIPE 2WAY UNION AV 2 DIAM 8X1,25</td> </tr> <tr> <td style="text-align: center;">18</td> <td>95 596 946</td> <td style="text-align: center;">01</td> <td>FIXING BRACKET</td> </tr> <tr> <td style="text-align: center;">19</td> <td>96 995 897</td> <td style="text-align: center;">01</td> <td>CLIP 1T 25A30</td> </tr> </table>	9	95 603 737	01	HYDRAULIC TUBE DIAM 3,5-1125	10	95 595 683	01		11	95 595 685	01		12	95 595 682	01		13	95 595 684	01		14	95 496 828	01		15	5 438 353	01	PIPE 3WAY UNION 3 DIAM 8X1,25	16	75 515 788	01	PIPE 4WAY UNION AR 4 DIAM 8X1,25		RP 5 446 900	01		17	5 447 189	01	PIPE 2WAY UNION AV 2 DIAM 8X1,25	18	95 596 946	01	FIXING BRACKET	19	96 995 897	01	CLIP 1T 25A30
9	95 603 737	01	HYDRAULIC TUBE DIAM 3,5-1125																																															
10	95 595 683	01																																																
11	95 595 685	01																																																
12	95 595 682	01																																																
13	95 595 684	01																																																
14	95 496 828	01																																																
15	5 438 353	01	PIPE 3WAY UNION 3 DIAM 8X1,25																																															
16	75 515 788	01	PIPE 4WAY UNION AR 4 DIAM 8X1,25																																															
	RP 5 446 900	01																																																
17	5 447 189	01	PIPE 2WAY UNION AV 2 DIAM 8X1,25																																															
18	95 596 946	01	FIXING BRACKET																																															
19	96 995 897	01	CLIP 1T 25A30																																															
<p>[03/92] E 3941100</p>																																																		
<p>E3941100</p>																																																		



Hydraulics and Running Gear *Supply piping, brake (ABS)*

30/01/98 GB C12 ↑ 30/06/98 1235 03 3942 10 PAGE 1		BRAKE PIPING		WITH ABS BRAKES			
				1	96 042 340	01	HYDRAULIC TUBE
					RP 96 141 003	01	DIAM 3,5-575
				2	96 051 264	01	
					RP 96 080 622	01	
				3	96 004 290	01	
					RP 96 080 621	01	
				4	96 004 282	01	
				5	96 004 291	01	
				6	96 004 292	01	-LEFT HAND DRIVE
					96 093 534	01	DIAM 3,5-3409 -RIGHT HAND DRIVE
				7	96 004 283	01	
				8	96 042 337	01	DIAM 4,5-825
				9	96 004 285	01	
				10	96 004 287	01	
					RP 96 042 339	01	
				11	95 595 676	01	-LEFT HAND DRIVE
					96 093 536	01	DIAM 3,5-554 -RIGHT HAND DRIVE
12	96 117 584	01	DIAM 3,5-3375 -LEFT HAND DRIVE				
	96 119 932	01	DIAM 3,5-3574 -RIGHT HAND DRIVE				
13	95 567 451	01					
14	95 567 450	01					
15	96 004 293	01					
16	79 05 026 703	01	LON 2350 DIAM 6X8				
17	95 632 790	02	FLEXIBLE HOSE LON 432 (ABS)				
	95 494 973		FLEXIBLE HOSE (NON-ABS)				

E3942100

.../...



Hydraulics and Running Gear *Supply piping, brake (ABS)*

30/01/98 GB C13 ↑ 1235 03 3942 10 PAGE 2	30/06/98 BRAKE PIPING	WITH ABS BRAKES	
		18 95 634 689 01 19 5 417 660 01 20 5 474 836 03 21 5 447 189 03 22 95 636 633 01 22 95 636 634 01 23 77 00 560 788 02 RP 4814 19 01 24 79 03 009 072 04 RP 6913 15 01 25 79 03 056 008 04 RP 6958 56 01 26 95 595 605 01 RP 96 093 541 01 27 96 093 542 01 28 96 026 117 01 RP 96 093 539 01 29 96 093 540 01 30 96 042 345 01 RP 96 119 263 01 96 119 263 01 31 96 119 261 01	RET TUBE SLEEVE CC2DIAM5 ET1DIAM7 PIPE 3WAY UNION 2DIAM8X1,25ET1 DE 9 PIPE 2WAY UNION 2DIAM 9X1,25 AV 2 DIAM 8X1,25 PIPE BRACKET LEFT AV RIGHT AV MOUNTING CLAMP SOCKET SCREW 6X100-12 SPRING WASHER 6,3X11 HYDRAULIC TUBE LON 620 -RIGHT HAND DRIVE DIAM 3,5-619 -RIGHT HAND DRIVE -RIGHT HAND DRIVE DIAM 3,5-419 -RIGHT HAND DRIVE DIAM 3,5-1150 -RIGHT HAND DRIVE DIAM 3,5-1094 -RIGHT HAND DRIVE DIAM 3,5-1083 -RIGHT HAND DRIVE
E3942100			



Hydraulics and Running Gear *Supply piping, steering and brake*

30/01/98 GB C14 ↑ 30/06/98		1235 03 3943 10		STEERING AND BRAKE PIPING	
PAGE 1					
1	95 595 676 01	HYDRAULIC TUBE			
	96 093 536 01	-LEFT HAND DRIVE			
		DIAM 3,5-554			
		-RIGHT HAND DRIVE			
2	96 117 584 01	DIAM 3,5-3375			
		-LEFT HAND DRIVE			
	96 119 932 01	DIAM 3,5-3574			
		-RIGHT HAND DRIVE			
3	95 595 677 01	-LEFT HAND DRIVE			
	96 093 538 01	DIAM 3,5-519			
		-RIGHT HAND DRIVE			
4	95 596 539 01	LON 500			
5	95 596 540 01	LON 1100			
6	96 117 585 01	DIAM 3,5-3100			
		-LEFT HAND DRIVE			
	96 093 534 01	DIAM 3,5-3409			
		-RIGHT HAND DRIVE			
7	95 567 451 01				
8	95 567 450 01				
9	96 033 163 01	DIAM 4,5 -2050			
		-LEFT HAND DRIVE			
	96 033 164 01	DIAM 4,5 -2000			
		-RIGHT HAND DRIVE			
10	96 090 490 01	RIGHT LON 320			
	RP 4020 8A 01	-LEFT HAND DRIVE			
	95 605 802 01	STRG HOIST PIPE			
	RP 95 666 898 01	-RIGHT HAND DRIVE			
11	96 090 491 01	HYDRAULIC TUBE LEFT LON 320			
	RP 95 666 899 01	-LEFT HAND DRIVE			
	95 605 803 01	STRG HOIST PIPE			
	RP 95 666 898 01	-RIGHT HAND DRIVE			
				E3943100	



Hydraulics and Running Gear *Supply piping, steering and brake*

30/01/98 GB C15 † 1235 03 3943 10 PAGE 2	30/06/98 STEERING AND BRAKE PIPING		
		12 5 438 353 01 13 95 567 472 01 14 96 026 117 01 RP 96 093 539 01 15 96 093 540 01 16 96 093 542 01 17 95 595 605 01 RP 96 093 541 01	PIPE 3WAY UNION 3 DIAM 8X1,25 3 DIAM 3,5 AV HYDRAULIC TUBE -RIGHT HAND DRIVE DIAM 3,5-419 -RIGHT HAND DRIVE DIAM 3,5-619 -RIGHT HAND DRIVE LON 620 -RIGHT HAND DRIVE
E3S43100			

Hydraulics and Running Gear *Return piping*

30/01/98 GB D15 ↓ 1235 03 3944 10 PAGE 1	30/06/98 RETURN PIPING	UP TO O 5167							
		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	<p>OIL BACK HARNES</p> 95 603 421 01 96 030 258 01	<p>HYDRAULIC TUBE LON 2750</p> 79 05 026 874 01 79 05 026 749 02 DIAM 2X4-180	<p>OIL BACK HARNES</p> 96 056 235 01 79 05 026 855 01 DIAM 4,5X6-2000 -LEFT HAND DRIVE 95 595 609 01 -RIGHT HAND DRIVE	<p>HYDRAULIC TUBE DIAM 3,5X5-850 -LEFT HAND DRIVE</p> 79 05 026 869 02 79 05 026 777 01 -RIGHT HAND DRIVE	79 05 026 949 03 DIAM INT 3-118 79 05 026 853 01 LON 80 95 579 689 01 DIAM 3,5X5-43,5 26 235 579 01 LON 450	95 573 142 01 RET TUBE SLEEVE ANTI RETOUR + BILLE	<p>HYDRAULIC TUBE LON 1250</p> 79 05 026 944 01 79 05 026 872 01 LON 2375 79 05 026 852 01 LON 725 79 05 026 747 01 LON 630 79 05 026 851 01 LON 825 95 567 452 01 LON 3785 RP 96 119 933 01 96 035 539 01 DIAM 6.5 -395
E3944100		.../...							







Hydraulics and Running Gear *Return piping*


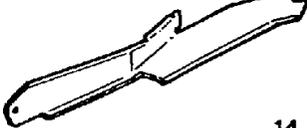

30/01/98 GB D13 1235 03 3944 12 PAGE 1	30/06/98 RETURN PIPING	SINCE O 5168	
	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	96 119 048 01 96 030 258 01 79 05 026 874 01 79 05 026 749 02 96 056 235 01 79 05 026 855 01 95 595 609 01 79 05 026 869 02 79 05 026 777 01 79 05 026 949 03 79 05 026 853 01 95 579 689 01 26 235 579 01 95 573 142 01 79 05 026 944 01 79 05 026 872 01 79 05 026 852 01 79 05 026 747 01 79 05 026 851 01 96 119 933 01 96 035 539 01	OIL BACK HARNES HYDRAULIC TUBE LON 2750 DIAM 2X4-180 OIL BACK HARNES DIAM 4,5X6-2000 -LEFT HAND DRIVE -RIGHT HAND DRIVE HYDRAULIC TUBE DIAM 3,5X5-850 -LEFT HAND DRIVE -RIGHT HAND DRIVE DIAM INT 3-118 LON 80 DIAM 3,5X5-43,5 LON 450 RET TUBE SLEEVE ANTI RETOUR + BILLE HYDRAULIC TUBE LON 1250 LON 2375 LON 725 LON 630 LON 825 DIAM 3,5-3729 DIAM 6,5 -395
E3944120		.../...	



Hydraulics and Running Gear *Piping brackets*

30/01/98 GB D11 1235 03 3945 10 PAGE 1		30/06/98 PIPING BRACKETS		1ST PART	
					
					
					
					
					
				[02/92]	E3945100
					E3945100
1	5 444 869	01	LINE BRACKET		
			4T 4 TROU 6,5		
2	95 499 060	02	5T 3,5A4,5 TROU 7,8		
			-WITH ABS BRAKES		
3	79 03 079 110	02	1T 3		
4	79 03 079 111	01	1T 4		
5	79 03 079 173	02	1 DIAM		
	RP 96 995 726	01			
6	26 199 449	05	1T 3,5 TROU 6,5		
7	95 499 139	02	2T 3,5A4,5 TROU 6,5		
8	79 03 079 109	02	4 DIAM		
	NFP				
9	79 03 079 126	01	2T 8-1T 3,5 TROU 6,5		
10	79 03 079 175	10	4 DIAM		
11	95 499 137	99	-WITH ABS BRAKES		
12	95 499 136	99	-WITH ABS BRAKES		
13	79 03 079 192	05	3T 8-4-10 TROU 6,5		
14	26 199 569	01	1T 9 TROU6,5		
15	79 03 079 108	01	CONNECT BRACKET		
	RP 95 499 140	01			
16	95 499 140	02	LINE BRACKET 2T 3,2		
			-WITH ABS BRAKES		
17	79 03 079 098	02	CONNECT BRACKET		
18	79 03 079 099	01	LINE BRACKET 1T 13-1T 10		
19	79 03 079 093	01	CLIP 2 DIAM		
	RP 6994 71	01			
	+ 6994 72	01			
20	96 995 893	01	LINE BRACKET		
			2T 14A16-1T 18A20		
					.../...

Hydraulics and Running Gear *Plate bracket*

30/01/98 GB D08 ↓ 30706798		1235 03 3946 10			PIPING-PLATE-BRACKET			1ST PART		
PAGE 1										
					1	5 413 090	07	SUPPORT BRACKET		
					2	5 439 023	01	LINE BRACKET		
					3	75 438 350	02	-16 TZI		
						RP 5280 03	01	17 10		
					4	95 577 400	02	FIXING BRACKET		
					5	95 577 401	01	-16 TZI		
					6	95 581 337	01	LINE BRACKET		
						NFP				
					7	95 598 469	01			
					8	95 581 339	01	-16 TZI		
					9	96 004 951	01			
					10	95 581 943	01	2 DIAM 6,5		
					11	95 582 490	01			
					12	95 582 491	01			
					13	95 584 926	01			
					14	95 577 402	01			
					15	95 572 462	01			
					16	95 572 463	01			
					17	95 575 448	02			
					18	GX 13 308 01A	02			
					19	96 061 543	01			
					20	96 061 540	01			
					21	96 118 502	02			
E3546100										

Hydraulics and Running Gear *Plate bracket*

30/01/98 GB D07 1235 03 3946 11 PAGE 1	30/06/98 PIPING-PLATE-BRACKET	2ND PART	
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  1 </div> <div style="text-align: center;">  2 </div> <div style="text-align: center;">  3 </div> </div> <div style="text-align: center; margin-top: 200px;"> 03/91 03946110 </div> <div style="text-align: right; margin-top: 100px;"> E3946110 </div>		1 26 197 909 2 26 197 999 3 26 198 259 RP 6991 73	99 CLIP 1T 5,5 PINC E2,5 99 HARNESS CLIP 1T 9,4PINCE E0,2A0,5 99 CLIP 01

Hydraulics and Running Gear *Sheath collar*

30/01/98 GB D06 ↓ 1235 03 3947 10 PAGE 1	30/06/98 PIPING-SHEATH-COLLAR		
<p style="text-align: center;">E3S47100</p>		1 79 03 083 250 RP 1565 99 2 SRV 000 017 RP 6981 37 3 26 141 629 96 162 039 4 26 141 639 NFP 5 79 03 085 044 RP 6547 08 6 79 03 085 045 RP 6980 28 7 SRV 000 015 RP 6981 E1 8 26 189 549 RP 4828 06 96 061 612 9 21 073 009 NFP 10 26 208 089 11 26 208 159 12 26 208 169 13 75 413 089 RP 5270 22 14 5 411 956	99 ADJUST CLAMP LONG 580 LARG 5 01 01 DIAM 16 A 27 LARG 9 01 01 ADJUST COLLAR LONG 151,5 LARG 8 UP TO O 5650 01 LONG 180 LARG 8 SINCE O 5651 02 LON 100 01 STRAP LON 200 LARG 4,6 01 02 LON 245 01 01 ADJUST CLAMP DIAM 8 A 16 LARG 8 01 08 PIPE SLEEVE DIAM INT 3,5 01 99 OUTER SLEEVE DIAM 3,5 A 5-160 02 RUBBER GROMMET DIAM 8 01 01 TUBE RING 19X23X15 01 8,5X12,5-15 01 17X21-45 03 DIAM 4,5X13 01 02 PROTECT SLEEVE DIAM 4X9 L = 15
E3S47100		.../...	



Hydraulics and Running Gear *Sheath collar*

<p>30/01/98 GB D05 1235 03 3947 10 PAGE 2</p>	<p>30/06/98 PIPING-SHEATH-COLLAR</p>		
<p style="text-align: center;">03/91 D3947100</p>		<p>15 75 426 224 RP 2443 09</p> <p>16 79 05 026 983</p> <p>17 26 230 579</p> <p>18 96 085 785</p> <p>21 889 009 RP 96 085 784</p> <p> 96 085 783</p> <p>19 96 995 085</p>	<p>02 WIRING-SHEATH 6,6X17 01</p> <p>01 TUBE RING 21X25-15</p> <p>02 PROTECT SHEATH DIAM INT10 EXT12X550</p> <p>99 FLEXIBLE LINING TUBE 3,5</p> <p> PIPE LINING</p> <p>99 4,5X7,2-9,5 01</p> <p>99 TUBE 6,35</p> <p>01 PROTECT GROMMET DIAM 12X21E7,5</p>
<p>E3947100</p>			

Hydraulics and Running Gear *Arm, front*

<p>30/01/98 GB D04 1235 03 4123 10 PAGE 1</p>	<p>30/06/98 FRONT ARMS</p>		<table border="1"> <tr> <td>1</td> <td>96 070 144</td> <td>01</td> <td>FRONT ARM LEFT COMPLET</td> </tr> <tr> <td></td> <td>96 070 145</td> <td>01</td> <td>RIGHT COMPLET</td> </tr> <tr> <td>2</td> <td>95 637 690</td> <td>02</td> <td>WISHBONE BUSH AV</td> </tr> <tr> <td>3</td> <td>96 070 064</td> <td>02</td> <td>AR DIAM 16X40-50</td> </tr> <tr> <td>4</td> <td>95 611 436</td> <td>02</td> <td>ARM SHAFT 2 DIAM 16X1,50-339</td> </tr> <tr> <td>5</td> <td>95 611 443</td> <td>02</td> <td>WASHER DIAM 16X42 E 2,5</td> </tr> <tr> <td>6</td> <td>95 631 038</td> <td>02</td> <td>DIAM 16X50 E 2,5</td> </tr> <tr> <td>7</td> <td>79 03 232 056 RP 0812 07</td> <td>02 01</td> <td>HEXAGONAL NUT 16X150-13</td> </tr> <tr> <td>8</td> <td>79 03 234 072 RP 6939 63</td> <td>02 01</td> <td>SELF LOCKG NUT HEF 16X1,50 H 14</td> </tr> </table>	1	96 070 144	01	FRONT ARM LEFT COMPLET		96 070 145	01	RIGHT COMPLET	2	95 637 690	02	WISHBONE BUSH AV	3	96 070 064	02	AR DIAM 16X40-50	4	95 611 436	02	ARM SHAFT 2 DIAM 16X1,50-339	5	95 611 443	02	WASHER DIAM 16X42 E 2,5	6	95 631 038	02	DIAM 16X50 E 2,5	7	79 03 232 056 RP 0812 07	02 01	HEXAGONAL NUT 16X150-13	8	79 03 234 072 RP 6939 63	02 01	SELF LOCKG NUT HEF 16X1,50 H 14	<p>(185.9~ RP 3220 ~ D73-a変更</p>
1	96 070 144	01	FRONT ARM LEFT COMPLET																																					
	96 070 145	01	RIGHT COMPLET																																					
2	95 637 690	02	WISHBONE BUSH AV																																					
3	96 070 064	02	AR DIAM 16X40-50																																					
4	95 611 436	02	ARM SHAFT 2 DIAM 16X1,50-339																																					
5	95 611 443	02	WASHER DIAM 16X42 E 2,5																																					
6	95 631 038	02	DIAM 16X50 E 2,5																																					
7	79 03 232 056 RP 0812 07	02 01	HEXAGONAL NUT 16X150-13																																					
8	79 03 234 072 RP 6939 63	02 01	SELF LOCKG NUT HEF 16X1,50 H 14																																					
		<p>E4123100</p>																																						



Hydraulics and Running Gear *Front pivots and hubs*

30/01/98 GB D03 1235 03 4131 10 PAGE 1	30/06/98 FRONT PIVOTS AND HUBS		
<p style="text-align: center;">A+2+3+4+5</p> <p style="text-align: center;">[05/95] D4131100</p> <p style="text-align: right;">E4131100</p>		1 95 603 832 01 95 603 836 01 95 615 973 01 95 616 046 01 2 95 590 023 02 RP 3307 69 01 3 96 041 652 02 RP 3640 21 01 4 95 563 385 02 RP 3623 06 01 5 95 619 160 02 RP 3350 16 01 6 79 03 066 168 02 RP 3345 35 01 7 96 059 168 02 RP 3622 29 01 96 105 771 02 RP 3622 29 01 8 79 03 234 011 02 RP 3622 30 01 96 136 046 02 RP 3622 30 01 9 79 03 234 049 02 RP 5173 13 01 10 96 068 399 02 RP 3297 00 01 11 95 572 354 02 RP 3297 02 01	FRT SWIVEL PIN LEFT RIGHT LEFT -WITH ABS BRAKES RIGHT -WITH ABS BRAKES WHEEL HUB PIN BALL-JOINT INF GUARD SHEET MET HUB BEARING DIAM 42X82 EP 36 STOP-RING 87,5X77,2-2,5 SCREW SWIVL PIN TH 10X1,50-65 UP TO O 5347 DIAM 10X150-72 SINCE O 5348 SELF LOCKG NUT 10X150-12 UP TO O 5347 DIAM 10X150 SINCE O 5348 12X125-11,2 HUB FIXING NUT 24 X 150 LOCKING NUT .../...



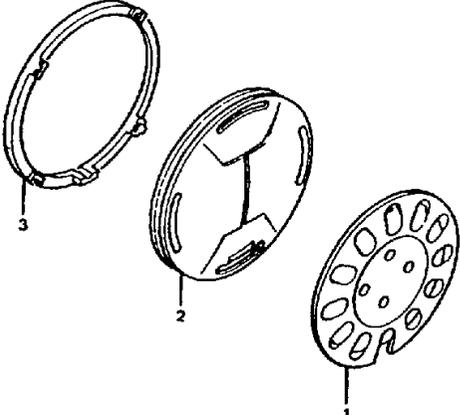
Hydraulics and Running Gear *Front pivots and hubs*

<p>30/01/98 GB D02 1235 03 4131 10 PAGE 2</p>	<p>30/06/98 FRONT PIVOTS AND HUBS</p>		
<p style="text-align: center;">1 A+2+3+4+5</p> <p style="text-align: center;">[05/95] D4131100</p>		<p>12 95 605 131 RP 3297 03</p>	<p>02 PIN 01</p>
<p style="text-align: right;">E4131100</p>			

Hydraulics and Running Gear *Wheels, steel*

30/01/98 GB D01 1235 03 4161 11 PAGE 1	30/06/98 WHEELS		
<p>1230</p> <p>102/88</p> <p>3_416_11</p> <p>E4161110</p>		1 95 496 583 96 046 074 RP 96 155 310 2 96 009 844 RP 5405 59 3 5 503 515 RP 5404 08 96 019 016 4 75 491 339 RP 5404 02 5 79 10 015 662 6 91 540 474 RP 5435 80 91 540 476 RP 5435 82 91 540 478 RP 5435 84 91 540 480 RP 5435 86 91 540 482 RP 5435 88 91 540 484 RP 5435 90	05 STEEL WHEEL 05 MXL 5 00B14FH4 25 05 5,5 J14 FH 4 14 01 -GTI 16 MONTING SCREW 12X1,25-53 01 05 ASSEMBLY VALVE 01 AVEC BOUCHON 04 TYRE VALVE LONGUE 60 05 VALVE PLUG 01 99 WEIGHT SPRING MXL 99 BALANCE WEIGHT 99 10 GR + RESSORT 01 99 20 GR + RESSORT 01 99 30 GR + RESSORT 01 99 40 GR + RESSORT 01 99 50 GR + RESSORT 01 99 60 GR + RESSORT 01

Hydraulics and Running Gear *Wheel caps*

30/01/98 GB E01 ↑ 1235 03 4162 10 PAGE 1	30/06/98 WHEEL CAPS	UP TO O 4740										
 <p style="text-align: center;">E4162100</p>		1 2 3	<table border="1"> <tr> <td data-bbox="1514 424 1541 448">96 012 967</td> <td data-bbox="1514 424 1541 448">04</td> <td data-bbox="1514 400 2098 480"> WHEEL CAP DIAM 347 -ESTATE 19 TRI </td> </tr> <tr> <td data-bbox="1514 488 1541 512">95 616 549</td> <td data-bbox="1514 488 1541 512">04</td> <td data-bbox="1514 488 2098 568"> DIAM 345 -SALOON 19 TRI -GTI </td> </tr> <tr> <td data-bbox="1514 576 1541 600">95 612 961</td> <td data-bbox="1514 576 1541 600">04</td> <td data-bbox="1514 576 2098 608"> CAP RETAINER </td> </tr> </table>	96 012 967	04	WHEEL CAP DIAM 347 -ESTATE 19 TRI	95 616 549	04	DIAM 345 -SALOON 19 TRI -GTI	95 612 961	04	CAP RETAINER
		96 012 967	04	WHEEL CAP DIAM 347 -ESTATE 19 TRI								
		95 616 549	04	DIAM 345 -SALOON 19 TRI -GTI								
95 612 961	04	CAP RETAINER										
E4162100												



Hydraulics and Running Gear *Arm, rear*

30/01/98 GB E04 ↑ 1235 03 4220 10 PAGE 1	30/06/98 REAR ARM																																																						
<p style="text-align: right;">E4220100</p>		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	<table border="1"> <tr> <td>95 571 695 01</td> <td>SUSPENSION ARM LEFT</td> </tr> <tr> <td>95 571 696 01</td> <td>RIGHT</td> </tr> <tr> <td>95 630 227 01</td> <td>LEFT -WITH ABS BRAKES</td> </tr> <tr> <td>95 630 228 01</td> <td>RIGHT -WITH ABS BRAKES</td> </tr> <tr> <td>95 616 019 02</td> <td>RR WHEEL SWIVEL WHEEL HUB</td> </tr> <tr> <td>95 496 146 02</td> <td>RP 3701 42 01</td> </tr> <tr> <td>95 035 532 02</td> <td>-WITH ABS BRAKES</td> </tr> <tr> <td>95 588 632 02</td> <td>HUB REPAIR KIT</td> </tr> <tr> <td>95 565 794 02</td> <td>CIRCLIP 32X34-2</td> </tr> <tr> <td>95 559 360 02</td> <td>BEARING CUP DIAM 47,3 EXT 75</td> </tr> <tr> <td>RP 3726 14 01</td> <td></td> </tr> <tr> <td>79 03 074 114 04</td> <td>PLUG DIAM 12 H 10</td> </tr> <tr> <td>91 502 315 02</td> <td>SEAL PROTECTOR DIAM 37,2 LON 140,5</td> </tr> <tr> <td>RP 5179 12 01</td> <td></td> </tr> <tr> <td>75 472 408 04</td> <td>ARM BEARING 22X41X14,4</td> </tr> <tr> <td colspan="2">ADJUSTMENT SHIM</td> </tr> <tr> <td>91 501 057 99</td> <td>22 X 30 - 0,15</td> </tr> <tr> <td>LISTE 9306</td> <td></td> </tr> <tr> <td>91 501 058 99</td> <td>22 X 30 - 0,25</td> </tr> <tr> <td>LISTE 9305</td> <td></td> </tr> <tr> <td>91 501 059 99</td> <td>22 X 30 - 0,35</td> </tr> <tr> <td>LISTE 9305</td> <td></td> </tr> <tr> <td>91 501 060 99</td> <td>22 X 30 - 0,45</td> </tr> <tr> <td>LISTE 9306</td> <td></td> </tr> <tr> <td>91 501 061 99</td> <td>22 X 30 - 0,55</td> </tr> <tr> <td>LISTE 9306</td> <td></td> </tr> </table>	95 571 695 01	SUSPENSION ARM LEFT	95 571 696 01	RIGHT	95 630 227 01	LEFT -WITH ABS BRAKES	95 630 228 01	RIGHT -WITH ABS BRAKES	95 616 019 02	RR WHEEL SWIVEL WHEEL HUB	95 496 146 02	RP 3701 42 01	95 035 532 02	-WITH ABS BRAKES	95 588 632 02	HUB REPAIR KIT	95 565 794 02	CIRCLIP 32X34-2	95 559 360 02	BEARING CUP DIAM 47,3 EXT 75	RP 3726 14 01		79 03 074 114 04	PLUG DIAM 12 H 10	91 502 315 02	SEAL PROTECTOR DIAM 37,2 LON 140,5	RP 5179 12 01		75 472 408 04	ARM BEARING 22X41X14,4	ADJUSTMENT SHIM		91 501 057 99	22 X 30 - 0,15	LISTE 9306		91 501 058 99	22 X 30 - 0,25	LISTE 9305		91 501 059 99	22 X 30 - 0,35	LISTE 9305		91 501 060 99	22 X 30 - 0,45	LISTE 9306		91 501 061 99	22 X 30 - 0,55	LISTE 9306	
95 571 695 01	SUSPENSION ARM LEFT																																																						
95 571 696 01	RIGHT																																																						
95 630 227 01	LEFT -WITH ABS BRAKES																																																						
95 630 228 01	RIGHT -WITH ABS BRAKES																																																						
95 616 019 02	RR WHEEL SWIVEL WHEEL HUB																																																						
95 496 146 02	RP 3701 42 01																																																						
95 035 532 02	-WITH ABS BRAKES																																																						
95 588 632 02	HUB REPAIR KIT																																																						
95 565 794 02	CIRCLIP 32X34-2																																																						
95 559 360 02	BEARING CUP DIAM 47,3 EXT 75																																																						
RP 3726 14 01																																																							
79 03 074 114 04	PLUG DIAM 12 H 10																																																						
91 502 315 02	SEAL PROTECTOR DIAM 37,2 LON 140,5																																																						
RP 5179 12 01																																																							
75 472 408 04	ARM BEARING 22X41X14,4																																																						
ADJUSTMENT SHIM																																																							
91 501 057 99	22 X 30 - 0,15																																																						
LISTE 9306																																																							
91 501 058 99	22 X 30 - 0,25																																																						
LISTE 9305																																																							
91 501 059 99	22 X 30 - 0,35																																																						
LISTE 9305																																																							
91 501 060 99	22 X 30 - 0,45																																																						
LISTE 9306																																																							
91 501 061 99	22 X 30 - 0,55																																																						
LISTE 9306																																																							



Hydraulics and Running Gear *Arm, rear*

30/01/98 GB E05 ↑ 1235 03 4220 10 PAGE 2	30/06/98 REAR ARM		
		10 91 501 062 LISTE 9305 91 501 063 LISTE 9306 91 501 064 LISTE 9305 91 501 065 LISTE 9306 ∅ 11 79 03 087 098 12 91 507 997 RP 5133 20 13 91 501 066 RP 5132 52 14 91 500 053 RP 5132 44 15 95 624 275 16 79 03 234 072 RP 6939 63	ADJUSTMENT SHIM 22 X 30 - 0,65 22 X 30 - 0,75 22 X 30 - 0,85 22 X 30 - 0,95 04 SUSP ARM SEAL DIAM 30X41X11 04 BEARING BUSH 01 02 SUSPENSN SPACER DIAM22X16X194,3 01 02 WISHBONE BUSH DIAM 16X1,50-236 01 02 PLAIN WASHER 16X30-1,5 02 SELF LOCKG NUT HEF 16X1,50 H 14 01
E4220100			

Hydraulics and Running Gear *Rear axle, flexible mounts*

<p>30/01/98 GB E06 ↑ 1235 03 4221 10 PAGE 1</p>	<p>30/06/98 REAR AXLE - FLEXIBLE MOUNTS</p>	<p style="text-align: center;">[05/95] 04221100</p> <p style="text-align: right;">E4221100</p>	<table border="1"> <tr> <td>1</td> <td>95 633 140</td> <td>01</td> <td>SUSP CROSSMEMBR</td> </tr> <tr> <td></td> <td></td> <td></td> <td>FLEXIBLE JOINT</td> </tr> <tr> <td>2</td> <td>95 632 592</td> <td>01</td> <td>LEFT AV</td> </tr> <tr> <td></td> <td>95 632 593</td> <td>01</td> <td>RIGHT AV</td> </tr> <tr> <td>3</td> <td>91 504 873</td> <td>02</td> <td>FLEXIB MOUNTING AR</td> </tr> <tr> <td></td> <td>RP 5149 90</td> <td>01</td> <td></td> </tr> <tr> <td>4</td> <td>75 532 224</td> <td>02</td> <td>REBOUND BLOCK AR 40X55X40</td> </tr> <tr> <td></td> <td>RP 5166 42</td> <td>01</td> <td></td> </tr> <tr> <td>5</td> <td>95 635 231</td> <td>02</td> <td>RUBBER BUFFER DIAM 45 E 73,5</td> </tr> <tr> <td>6</td> <td>95 565 801</td> <td>02</td> <td>ARM STOP CC</td> </tr> <tr> <td>7</td> <td>95 565 802</td> <td>02</td> <td>SUSP BUMP SPACR DIAM 8,5X12-35</td> </tr> <tr> <td></td> <td></td> <td></td> <td>CAPSCREW</td> </tr> <tr> <td>8</td> <td>79 03 001 315</td> <td>02</td> <td>DIAM 12X1,50-66,5</td> </tr> <tr> <td></td> <td>RP 6922 58</td> <td>01</td> <td></td> </tr> <tr> <td>9</td> <td>79 03 201 038</td> <td>02</td> <td>8X125-50</td> </tr> <tr> <td></td> <td>RP 6933 04</td> <td>01</td> <td></td> </tr> <tr> <td>10</td> <td>79 03 053 115</td> <td>06</td> <td>PLAIN WASHER DIAM 10,25X27X3,5</td> </tr> <tr> <td></td> <td>RP 6949 09</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td>SELF LOCKG NUT</td> </tr> <tr> <td>11</td> <td>25 355 019</td> <td>02</td> <td>8X125-10,5-13</td> </tr> <tr> <td>12</td> <td>79 03 034 087</td> <td>02</td> <td>HEF 12X1,50H13</td> </tr> <tr> <td></td> <td>RP 6939 34</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td>WASHER-NUT</td> </tr> <tr> <td>13</td> <td>79 03 033 027</td> <td>02</td> <td>DIAM 10X1,50</td> </tr> <tr> <td></td> <td>RP 6936 30</td> <td>01</td> <td></td> </tr> <tr> <td>14</td> <td>79 03 033 015</td> <td>02</td> <td>10X125-9,2-21,9</td> </tr> <tr> <td></td> <td>RP 6932 43</td> <td>01</td> <td></td> </tr> </table>	1	95 633 140	01	SUSP CROSSMEMBR				FLEXIBLE JOINT	2	95 632 592	01	LEFT AV		95 632 593	01	RIGHT AV	3	91 504 873	02	FLEXIB MOUNTING AR		RP 5149 90	01		4	75 532 224	02	REBOUND BLOCK AR 40X55X40		RP 5166 42	01		5	95 635 231	02	RUBBER BUFFER DIAM 45 E 73,5	6	95 565 801	02	ARM STOP CC	7	95 565 802	02	SUSP BUMP SPACR DIAM 8,5X12-35				CAPSCREW	8	79 03 001 315	02	DIAM 12X1,50-66,5		RP 6922 58	01		9	79 03 201 038	02	8X125-50		RP 6933 04	01		10	79 03 053 115	06	PLAIN WASHER DIAM 10,25X27X3,5		RP 6949 09	01					SELF LOCKG NUT	11	25 355 019	02	8X125-10,5-13	12	79 03 034 087	02	HEF 12X1,50H13		RP 6939 34	01					WASHER-NUT	13	79 03 033 027	02	DIAM 10X1,50		RP 6936 30	01		14	79 03 033 015	02	10X125-9,2-21,9		RP 6932 43	01	
1	95 633 140	01	SUSP CROSSMEMBR																																																																																																												
			FLEXIBLE JOINT																																																																																																												
2	95 632 592	01	LEFT AV																																																																																																												
	95 632 593	01	RIGHT AV																																																																																																												
3	91 504 873	02	FLEXIB MOUNTING AR																																																																																																												
	RP 5149 90	01																																																																																																													
4	75 532 224	02	REBOUND BLOCK AR 40X55X40																																																																																																												
	RP 5166 42	01																																																																																																													
5	95 635 231	02	RUBBER BUFFER DIAM 45 E 73,5																																																																																																												
6	95 565 801	02	ARM STOP CC																																																																																																												
7	95 565 802	02	SUSP BUMP SPACR DIAM 8,5X12-35																																																																																																												
			CAPSCREW																																																																																																												
8	79 03 001 315	02	DIAM 12X1,50-66,5																																																																																																												
	RP 6922 58	01																																																																																																													
9	79 03 201 038	02	8X125-50																																																																																																												
	RP 6933 04	01																																																																																																													
10	79 03 053 115	06	PLAIN WASHER DIAM 10,25X27X3,5																																																																																																												
	RP 6949 09	01																																																																																																													
			SELF LOCKG NUT																																																																																																												
11	25 355 019	02	8X125-10,5-13																																																																																																												
12	79 03 034 087	02	HEF 12X1,50H13																																																																																																												
	RP 6939 34	01																																																																																																													
			WASHER-NUT																																																																																																												
13	79 03 033 027	02	DIAM 10X1,50																																																																																																												
	RP 6936 30	01																																																																																																													
14	79 03 033 015	02	10X125-9,2-21,9																																																																																																												
	RP 6932 43	01																																																																																																													

Hydraulics and Running Gear *Suspension cylinder, front*

30/01/98 GB E07 ↑ 1235 03 4345 10 PAGE 1	30/06/98 FRONT SUSPENSION CYLINDER		
<p style="text-align: center;">[05/95] 04345100</p> <p style="text-align: right;">E4545100</p>		1 95 637 130 02 RP 95 650 942 01 2 95 675 146 02 RP 95 650 942 01 3 4 95 566 649 02 5 96 141 827 02 6 24 826 009 09 7 95 566 652 02 8 95 574 124 02 9 95 622 818 02 10 95 612 275 02 RP 96 127 591 01 11 95 579 468 02 12 95 579 470 02 13 95 563 928 02 14 95 563 922 02 15 95 576 879 02	SUSPENSION CYL SPHERE + GASKET 500CM3 55BARS -16 TZI -SALOON 19 TRI -SALOON 19 TZI 500CM3 55BARS -ESTATE 19 TRI -ESTATE 19 TZI 400CM3 55BARS -GTI 400CM3 45 BARS -GTI 16V -WITH ABS BRAKES SPHERE BRACKET SUPPORT LUG RAYMOND SUSP CYL O-RING SUPPORT NUT DIAM INT 26X1,00 SUSP PROTECTOR CC DIAM INT 28 E8,5 LEAK BACK HOSE ADJUST COLLAR DUST GUARD BOOT RING DIAM 52,5X63 E 5 CYL SUPPORT SUP RETAINER CYLINDER PIN
			.../...



Hydraulics and Running Gear *Suspension cylinder, front*

<p>30/01/98 GB E08 ↑ 30/06/98 1235 03 4345 10 PAGE 2</p>	<p>FRONT SUSPENSION CYLINDER</p>									
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: center;">16</td> <td style="width: 55%;">95 630 952 RP 5272 15</td> <td style="width: 10%; text-align: center;">02</td> <td style="width: 25%;">SUSP CYL O-RING 37,4X42X2,6</td> </tr> <tr> <td style="text-align: center;">17</td> <td>79 03 033 007 RP 6936 80</td> <td style="text-align: center;">06</td> <td>SELF LOCKG NUT DIAM 8X1,25</td> </tr> </table>	16	95 630 952 RP 5272 15	02	SUSP CYL O-RING 37,4X42X2,6	17	79 03 033 007 RP 6936 80	06	SELF LOCKG NUT DIAM 8X1,25	
16	95 630 952 RP 5272 15	02	SUSP CYL O-RING 37,4X42X2,6							
17	79 03 033 007 RP 6936 80	06	SELF LOCKG NUT DIAM 8X1,25							
<p>[05/95] 04345100</p> <p>E4345100</p>										



Hydraulics and Running Gear *Suspension cylinder components, front*

<p>30/01/98 GB E09 ↑ 1235 03 4346 10 PAGE 1</p>	<p>30/06/98 FRONT SUSPENSION CYLINDER-COPONENTS</p>																																	
	<table border="1"> <tr><td>1</td><td>95 598 748</td><td>02</td><td>CYLINDER SLIDE</td></tr> <tr><td>2</td><td>95 607 546</td><td>02</td><td>SUSPENSION CYL</td></tr> <tr><td>3</td><td>95 607 545</td><td>02</td><td>SUSP CYL PISTON</td></tr> <tr><td>4</td><td>95 598 746</td><td>02</td><td>CYLINDER ROD</td></tr> <tr><td>5</td><td>96 004 372</td><td>02</td><td>SLIDE BEARING</td></tr> <tr><td>6</td><td>24 826 009</td><td>04</td><td>SUSP CYL O-RING</td></tr> <tr><td>7</td><td>95 597 221</td><td>02</td><td>CYLINDER KIT</td></tr> <tr><td>8</td><td>95 650 941</td><td>02</td><td>AV</td></tr> </table>	1	95 598 748	02	CYLINDER SLIDE	2	95 607 546	02	SUSPENSION CYL	3	95 607 545	02	SUSP CYL PISTON	4	95 598 746	02	CYLINDER ROD	5	96 004 372	02	SLIDE BEARING	6	24 826 009	04	SUSP CYL O-RING	7	95 597 221	02	CYLINDER KIT	8	95 650 941	02	AV	
1	95 598 748	02	CYLINDER SLIDE																															
2	95 607 546	02	SUSPENSION CYL																															
3	95 607 545	02	SUSP CYL PISTON																															
4	95 598 746	02	CYLINDER ROD																															
5	96 004 372	02	SLIDE BEARING																															
6	24 826 009	04	SUSP CYL O-RING																															
7	95 597 221	02	CYLINDER KIT																															
8	95 650 941	02	AV																															
<p>E4346100</p>																																		



Hydraulics and Running Gear *Suspension cylinder, rear*

<p>30/01/98 GB E11 † 1235 03 4347 10 PAGE 2</p>	<p>30/06/98 REAR SUSPENSION CYLINDER</p>		
<p>[05/93] E4347100</p>		<p>13 95 630 952 RP 5272 15</p>	<p>02 SUSP CYL O-RING 37,4X42X2,6 01</p>
<p>E4347100</p>			

Hydraulics and Running Gear *Height correctors*

30/01/98 GB E12 ↑ 1235 03 4351 10 PAGE 1	30/06/98 HEIGHT CORRECTORES		
		1 2 3 4 5 6 7 8 9 10 11 12 13 14	HEIGHT CORRECTR 01 AV 01 AR CONTROL ROD 01 AV-DIAM 23 01 AR-DIAM 17 -16 TZI 01 AR-DIAM 18 -ESTATE 01 AR-DIAM 19 -SALOON 01 HYD CHANGE ROD AR DIAM 21 -GTI 16V 02 CONTROL BEARING DIAM EXT 14 H 11 02 BEARING PIN LON 20 CORRECTOR CUP UP TO O 5109 02 POLYAMIDE 01 SINCE O 5110 01 02 04 AJUSTER RING DIAM EXT 61 CORRECTOR CUP 04 04 E 4,90 04 CORR DIAPHRAGM 04 CORRECTR SPRING DIAM INT 21,5 04 STOP-RING 11,1X4,7-0,6 01 04 CORRECTOR VALVE DIAM 5,85X25X0,2
E4351100		.../...	

Hydraulics and Running Gear *Height correctors*

<p>30/01/98 GB E13 ↑ 1235 03 4351 10 PAGE 2</p>	<p>30/06/98 HEIGHT CORRECTORES</p>		
	<p>15 95 567 065 01 16 79 03 101 756 02 RP 6921 72 01 17 79 03 101 753 04 RP 6921 24 01</p>	<p>CORR END PIECE CAPSCREW 7X100-25 7X100-14</p>	
<p>E4351100</p>			

Hydraulics and Running Gear *Anti-roll bars, connecting rods*

<p>30/01/98 GB E14 ↑ 1235 03 4352 10 PAGE 1</p>	<p>30/06/98 ANTI-ROLL BARS-CONNECTING RODS</p>																																																																																								
	<p>1 2 3 4 5 6 7 8 9</p>	<table border="1"> <tr> <td>95 637 695</td> <td>01</td> <td>CONTROL BAR</td> </tr> <tr> <td></td> <td></td> <td>R/ANTI-ROLL BAR</td> </tr> <tr> <td>95 635 548</td> <td>01</td> <td>-16 TZI</td> </tr> <tr> <td>95 635 549</td> <td>01</td> <td>-ESTATE</td> </tr> <tr> <td>95 612 107</td> <td>01</td> <td>-SALOON 19 TRI</td> </tr> <tr> <td></td> <td></td> <td>-SALOON 19 TZI</td> </tr> <tr> <td></td> <td></td> <td>-GTI</td> </tr> <tr> <td>95 654 391</td> <td>01</td> <td>DIAM 21 AVEC BRIDES</td> </tr> <tr> <td>RP 5170 72</td> <td>01</td> <td>-GTI 16V</td> </tr> <tr> <td>95 597 955</td> <td>02</td> <td>BAR LINK AV</td> </tr> <tr> <td>95 635 526</td> <td>02</td> <td>BAR BEARING DIAM INT 22,5X42 -44</td> </tr> <tr> <td></td> <td></td> <td>BEARING CLAMP</td> </tr> <tr> <td>96 031 947</td> <td>01</td> <td>LEFT INF</td> </tr> <tr> <td>96 031 949</td> <td>01</td> <td>RIGHT INF</td> </tr> <tr> <td>95 635 532</td> <td>01</td> <td>LEFT AV SUP</td> </tr> <tr> <td>95 635 534</td> <td>01</td> <td>RIGHT AV SUP</td> </tr> <tr> <td>91 504 593</td> <td>02</td> <td></td> </tr> <tr> <td>RP 5172 20</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td></td> <td>ADJUSTMENT SHIM</td> </tr> <tr> <td>95 566 391</td> <td>99</td> <td>E 1</td> </tr> <tr> <td>95 566 392</td> <td>99</td> <td>E 2</td> </tr> <tr> <td>95 566 393</td> <td>99</td> <td>E 3</td> </tr> <tr> <td>95 566 394</td> <td>99</td> <td>E 4</td> </tr> <tr> <td>95 566 395</td> <td>99</td> <td>E 5</td> </tr> <tr> <td></td> <td></td> <td>CLAMP PLATE</td> </tr> <tr> <td>95 565 790</td> <td>02</td> <td>AR</td> </tr> <tr> <td></td> <td></td> <td>-EXCEPT GTI 16V</td> </tr> <tr> <td>96 995 332</td> <td>02</td> <td>AR POUR BARRE DIAM21</td> </tr> <tr> <td></td> <td></td> <td>-GTI 16V</td> </tr> </table>	95 637 695	01	CONTROL BAR			R/ANTI-ROLL BAR	95 635 548	01	-16 TZI	95 635 549	01	-ESTATE	95 612 107	01	-SALOON 19 TRI			-SALOON 19 TZI			-GTI	95 654 391	01	DIAM 21 AVEC BRIDES	RP 5170 72	01	-GTI 16V	95 597 955	02	BAR LINK AV	95 635 526	02	BAR BEARING DIAM INT 22,5X42 -44			BEARING CLAMP	96 031 947	01	LEFT INF	96 031 949	01	RIGHT INF	95 635 532	01	LEFT AV SUP	95 635 534	01	RIGHT AV SUP	91 504 593	02		RP 5172 20	01				ADJUSTMENT SHIM	95 566 391	99	E 1	95 566 392	99	E 2	95 566 393	99	E 3	95 566 394	99	E 4	95 566 395	99	E 5			CLAMP PLATE	95 565 790	02	AR			-EXCEPT GTI 16V	96 995 332	02	AR POUR BARRE DIAM21			-GTI 16V
95 637 695	01	CONTROL BAR																																																																																							
		R/ANTI-ROLL BAR																																																																																							
95 635 548	01	-16 TZI																																																																																							
95 635 549	01	-ESTATE																																																																																							
95 612 107	01	-SALOON 19 TRI																																																																																							
		-SALOON 19 TZI																																																																																							
		-GTI																																																																																							
95 654 391	01	DIAM 21 AVEC BRIDES																																																																																							
RP 5170 72	01	-GTI 16V																																																																																							
95 597 955	02	BAR LINK AV																																																																																							
95 635 526	02	BAR BEARING DIAM INT 22,5X42 -44																																																																																							
		BEARING CLAMP																																																																																							
96 031 947	01	LEFT INF																																																																																							
96 031 949	01	RIGHT INF																																																																																							
95 635 532	01	LEFT AV SUP																																																																																							
95 635 534	01	RIGHT AV SUP																																																																																							
91 504 593	02																																																																																								
RP 5172 20	01																																																																																								
		ADJUSTMENT SHIM																																																																																							
95 566 391	99	E 1																																																																																							
95 566 392	99	E 2																																																																																							
95 566 393	99	E 3																																																																																							
95 566 394	99	E 4																																																																																							
95 566 395	99	E 5																																																																																							
		CLAMP PLATE																																																																																							
95 565 790	02	AR																																																																																							
		-EXCEPT GTI 16V																																																																																							
96 995 332	02	AR POUR BARRE DIAM21																																																																																							
		-GTI 16V																																																																																							

Hydraulics and Running Gear *Anti-roll bars, connecting rods*

<p>30/01/98 GB E15 ↑ 1235 03 4352 10 PAGE 2</p>	<p>30/06/98 ANTI-ROLL BARS-CONNECTING RODS</p>		
<p>[05/92] E4352100</p>	<p>10 79 03 002 009 04 RP 6916 34 01</p> <p>96 995 749 04 RP 5173 15 01</p> <p>11 79 03 101 201 02 RP 6921 21 01</p> <p>79 03 201 038 02 RP 6933 04 01</p> <p>12 79 03 058 019 04</p> <p>13 79 03 058 052 02 RP 79 03 058 019 01</p> <p>14 25 358 019 04 NFP</p> <p>15 79 03 232 017 02 RP 6932 38 01</p> <p>16 79 03 041 034 02 RP 6942 17 01</p>	<p>SCREW WITH BASE TH 12X1,50 LON 27</p> <p>12X150-29 -GTI 16V</p> <p>CAPSCREW 8X125-70</p> <p>8X125-50</p> <p>SPRING WASHER 8X16-1,4</p> <p>8 2X14 EP2</p> <p>SELF LOCKG NUT HEF 10X1,25</p> <p>HEXAGONAL NUT 8X1,25-6,5</p> <p>SQUARE NUT</p>	
<p>E4352100</p>			



Hydraulics and Running Gear *Manual height control*

30/01/98 GB F15 1235 03 4370 10 PAGE 1	30/06/98 MANUL HEIGHT CONTROL		
<p>1230 [06/89] 03-4370-10</p>		1 95 568 517 FXX RP 95 568 517 XX 2 95 589 173 3 5 426 325 4 95 568 748 5 95 568 525 6 95 568 521 7 96 061 241 8 95 568 527 9 95 568 520 10 95 575 641 11 26 212 599 12 79 03 101 591 RP 6921 39 + 79 03 058 027 13 79 03 101 600 RP 6922 22 14 79 03 008 142 RP 6920 21 15 79 03 058 027 16 79 03 053 046 RP 6947 79 17 26 192 359 NFP 18 26 158 339 NFP 19 79 03 032 006 RP 6933 08	01 CONTROL LEVER 01 MOULDING GRILLE 01 LEVER CAP 2DIAM5,75 ENT 43 01 LEVER BEARING 01 ROD FRONT PROP 02 LEVER BEARING 01 BUSHING DIAM INT 6,5 01 ROD REAR LEVER 01 CONTROL ROD LON 2277 DIAM 6 01 SEAL WASHER DIAM 7,5X14,5E5 01 SCREW COLUMN 2DIAM8X1,25 E 6,5 02 WASHER-SCREW DIAM 5X0,80-20 01 01 02 CAPSCREW DIAM 8X1,25-20 01 02 5X80-12 01 01 SPRING WASHER 5X12X1,2 02 PLAIN WASHER DIAM 8X22-2,5 01 02 9X30-2,5 04 CAGED NUT DIAM 5X0,80 01 01 HEXAGONAL NUT 5X80-4 01
		E4370100	.../...

Hydraulics and Running Gear *Manual height control*

<p>30/01/98 GB F14 ↓ 1235 03 4370 10 PAGE 2</p>	<p>30/06/98 MANUL HEIGHT CONTROL</p>		
		<p>20 79 03 033 012 RP 6936 71</p>	<p>01 NUT WITH BASE HERI M8X1,25 01</p>
<p>E4370100</p>			



Hydraulics and Running Gear *Steering wheel, ignition lock*

<p>30/01/98 GB F13 1235 03 4412 10 PAGE 1</p>	<p>30/06/98 STEERING WHEEL - ANTITHEFT DEVICE</p>		
<p style="text-align: center;">E4412100</p>		<p>1 95 631 185 FCH 01 RP 95 631 185 CH 01</p> <p>95 631 185 FLE 01 RP 95 631 185 LE 01</p> <p>95 631 185 FTL 01 RP 95 631 185 TL 01</p> <p>95 631 185 FXX 01 RP 95 631 185 XX 01</p> <p>95 631 185 TR 01 95 631 259 XX 01</p> <p>2 95 631 186 FCH 01 RP 95 631 186 CH 01</p> <p>95 631 186 FLE 01 RP 95 631 186 LE 01</p> <p>95 631 186 FTL 01 RP 95 631 186 TL 01</p> <p>95 631 186 FXX 01 RP 95 631 186 XX 01</p> <p>95 631 186 TR 01</p> <p>3 95 635 736 XX 01 RP 95 666 968 XX 01</p> <p>95 666 968 XX 01</p> <p>4 95 635 312 01 96 085 395 01 RP 4112 P4 01</p> <p>5 95 633 341 01</p>	<p>STEERING WHEEL DIAM EXT 380</p> <p>CUSHIONING PAD</p> <p>50X65 -GTI 16V WITH EMBLEM</p> <p>50X65 -GTI 16V WITHOUT EMBLEM</p> <p>STRG WHEEL CAP -GTI 16V UP TO O 4709 -GTI 16V SINCE O 4710</p> <p>STRG WHEEL BOWL</p>



Hydraulics and Running Gear *Steering wheel, ignition lock*

30/01/98 GB F12 ↓ 1235 03 4412 10 PAGE 2	30/06/98 STEERING WHEEL - ANTITHEFT DEVICE		
<p style="text-align: center;">03/92 04412100</p>		6 95 662 479 RP 96 070 197 7 95 638 762 8 96 032 545 96 140 643 9 95 593 577 10 95 654 324 11 95 585 707 12 79 03 080 002 RP 6986 75 13 96 021 419 RP 4105 24 14 79 03 201 001 RP 6914 26 15 79 03 056 003 RP 6958 54 16 79 03 053 510 RP 6947 27 17 79 03 058 030 RP 6962 66 18 79 03 234 055 RP 6939 91 19 79 03 034 079 RP 6939 83 20 79 03 234 024 RP 6939 83	01 IGNIT + DOOR LOCK UP TO O 5956 ANTIVOL AVEC 8 FILS 01 SINCE O 5957 01 AVEC ANTIVOL A 6 FILS 01 STRG LOCK GASKT 38X52 01 CCOLUMN SUPPORT UP TO O 5438 01 SINCE O 5439 01 STRG WHL SHAFT -RIGHT HAND DRIVE 01 STEERING GASKET 02 BUSHING 01 RETAINING CLIP 01 JOINT SCREW 8X1,25-35 01 CAPSCREW 4X70-8 01 SPRING WASHER 4,2X8-0,5 01 PLAIN WASHER 14,5X27,5-1,5 01 SPRING WASHER 8X18-1,4 04 SELF LOCKG NUT HEF 14X1,50-H12 01 HEF 8X1,25 01 HEF 8X125 04 01
E4412100			



Hydraulics and Running Gear *Steering box and rods*

<p>30/01/98 GB F11 ↓ 30/06/98 1235 03 4420 11 STEERING BOX AND RODS PAGE 1</p>	<p style="text-align: center;">E4420110</p>	<p>NOTA: 1 POS: "LEMFORDER" -2 POS: "EHRENRIECH"</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: center;">1</td> <td style="width: 15%;"></td> <td style="width: 15%; text-align: center;">95 615 724 01</td> <td style="width: 65%;">STEERING BOX COMPLET -LEFT HAND DRIVE</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">95 615 725 01</td> <td>COMPLET -RIGHT HAND DRIVE</td> </tr> <tr> <td style="text-align: center;">2</td> <td></td> <td style="text-align: center;">95 496 044 01</td> <td>CONNECTING ROD LEFT 1 POS</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">95 496 045 01</td> <td>RIGHT 1 POS</td> </tr> <tr> <td style="text-align: center;">3</td> <td></td> <td style="text-align: center;">95 495 440 02</td> <td>ROD BALL-JOINT 1 POS</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">95 495 439 02</td> <td>2 POS</td> </tr> <tr> <td style="text-align: center;">4</td> <td></td> <td style="text-align: center;">95 604 346 01</td> <td>STRG RACK BOOT LEFT</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">95 496 072 01</td> <td></td> </tr> <tr> <td style="text-align: center;">5</td> <td></td> <td style="text-align: center;">91 507 343 01</td> <td>STRG PROTECTOR</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">RP 4066 21 01</td> <td></td> </tr> <tr> <td style="text-align: center;">6</td> <td></td> <td style="text-align: center;">95 584 424 01</td> <td>BOOT CLIP</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">RP 4075 35 01</td> <td></td> </tr> <tr> <td style="text-align: center;">7</td> <td></td> <td style="text-align: center;">79 03 083 209 02</td> <td>RUBR BOOT CLAMP DIAM 47</td> </tr> <tr> <td></td> <td></td> <td></td> <td>WASHER</td> </tr> <tr> <td style="text-align: center;">8</td> <td></td> <td style="text-align: center;">79 10 034 968 01</td> <td></td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">RP 4058 25 01</td> <td></td> </tr> <tr> <td style="text-align: center;">9</td> <td></td> <td style="text-align: center;">91 507 342 01</td> <td></td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">RP 4058 29 01</td> <td></td> </tr> <tr> <td style="text-align: center;">10</td> <td></td> <td style="text-align: center;">95 595 410 01</td> <td>PROTECT SCREEN -LEFT HAND DRIVE</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">96 013 643 01</td> <td>-RIGHT HAND DRIVE</td> </tr> <tr> <td style="text-align: center;">11</td> <td></td> <td style="text-align: center;">95 558 565 02</td> <td>ADJUSTMENT SHIM E 1</td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">NFP</td> <td></td> </tr> <tr> <td style="text-align: center;">12</td> <td></td> <td style="text-align: center;">95 602 787 02</td> <td>STEERING SCREW TH 10X1,50-50</td> </tr> </table>	1		95 615 724 01	STEERING BOX COMPLET -LEFT HAND DRIVE			95 615 725 01	COMPLET -RIGHT HAND DRIVE	2		95 496 044 01	CONNECTING ROD LEFT 1 POS			95 496 045 01	RIGHT 1 POS	3		95 495 440 02	ROD BALL-JOINT 1 POS			95 495 439 02	2 POS	4		95 604 346 01	STRG RACK BOOT LEFT			95 496 072 01		5		91 507 343 01	STRG PROTECTOR			RP 4066 21 01		6		95 584 424 01	BOOT CLIP			RP 4075 35 01		7		79 03 083 209 02	RUBR BOOT CLAMP DIAM 47				WASHER	8		79 10 034 968 01				RP 4058 25 01		9		91 507 342 01				RP 4058 29 01		10		95 595 410 01	PROTECT SCREEN -LEFT HAND DRIVE			96 013 643 01	-RIGHT HAND DRIVE	11		95 558 565 02	ADJUSTMENT SHIM E 1			NFP		12		95 602 787 02	STEERING SCREW TH 10X1,50-50
1		95 615 724 01	STEERING BOX COMPLET -LEFT HAND DRIVE																																																																																											
		95 615 725 01	COMPLET -RIGHT HAND DRIVE																																																																																											
2		95 496 044 01	CONNECTING ROD LEFT 1 POS																																																																																											
		95 496 045 01	RIGHT 1 POS																																																																																											
3		95 495 440 02	ROD BALL-JOINT 1 POS																																																																																											
		95 495 439 02	2 POS																																																																																											
4		95 604 346 01	STRG RACK BOOT LEFT																																																																																											
		95 496 072 01																																																																																												
5		91 507 343 01	STRG PROTECTOR																																																																																											
		RP 4066 21 01																																																																																												
6		95 584 424 01	BOOT CLIP																																																																																											
		RP 4075 35 01																																																																																												
7		79 03 083 209 02	RUBR BOOT CLAMP DIAM 47																																																																																											
			WASHER																																																																																											
8		79 10 034 968 01																																																																																												
		RP 4058 25 01																																																																																												
9		91 507 342 01																																																																																												
		RP 4058 29 01																																																																																												
10		95 595 410 01	PROTECT SCREEN -LEFT HAND DRIVE																																																																																											
		96 013 643 01	-RIGHT HAND DRIVE																																																																																											
11		95 558 565 02	ADJUSTMENT SHIM E 1																																																																																											
		NFP																																																																																												
12		95 602 787 02	STEERING SCREW TH 10X1,50-50																																																																																											

E4420110

.../...



Hydraulics and Running Gear *Steering box and rods*

<p>30/01/98 GB F10 ↓ 30706798 1235 03 4420 11 PAGE 2</p>	<p>STEERING BOX AND RODS</p>																																																		
<p style="text-align: center;">E4420110</p>		<p>NOTA: 1 POS: "LEMFORDER" -2 POS: "EHRENRIECH"</p> <table border="1"> <tr> <td data-bbox="1267 432 1480 464">13</td> <td data-bbox="1480 432 1518 464">95 602 788</td> <td data-bbox="1518 432 1541 464">02</td> <td data-bbox="1541 432 2101 464">PLAIN WASHER 10,2X32-11</td> </tr> <tr> <td data-bbox="1267 472 1480 504">14</td> <td data-bbox="1480 472 1518 504">79 03 058 043</td> <td data-bbox="1518 472 1541 504">02</td> <td data-bbox="1541 472 2101 504">SPRING WASHER 10X27-1,6</td> </tr> <tr> <td data-bbox="1267 512 1480 544">15</td> <td data-bbox="1480 512 1518 544">79 03 234 011</td> <td data-bbox="1518 512 1541 544">02</td> <td data-bbox="1541 512 2101 544">SELF LOCKG NUT</td> </tr> <tr> <td data-bbox="1267 552 1480 584"></td> <td data-bbox="1480 552 1518 584">RP 3622 30</td> <td data-bbox="1518 552 1541 584">01</td> <td data-bbox="1541 552 2101 584">10X150-12</td> </tr> <tr> <td data-bbox="1267 592 1480 624">16</td> <td data-bbox="1480 592 1518 624">79 03 034 007</td> <td data-bbox="1518 592 1541 624">02</td> <td data-bbox="1541 592 2101 624">HEF 10X1,25H18</td> </tr> <tr> <td data-bbox="1267 632 1480 663"></td> <td data-bbox="1480 632 1518 663">RP 6939 42</td> <td data-bbox="1518 632 1541 663">01</td> <td data-bbox="1541 632 2101 663"></td> </tr> <tr> <td data-bbox="1267 671 1480 703">17</td> <td data-bbox="1480 671 1518 703">79 03 232 035</td> <td data-bbox="1518 671 1541 703">02</td> <td data-bbox="1541 671 2101 703">HEXAGONAL NUT H 14X1,50 E 7</td> </tr> <tr> <td data-bbox="1267 711 1480 743"></td> <td data-bbox="1480 711 1518 743">NFP</td> <td data-bbox="1518 711 1541 743"></td> <td data-bbox="1541 711 2101 743"></td> </tr> <tr> <td data-bbox="1267 751 1480 783">18</td> <td data-bbox="1480 751 1518 783">95 598 764</td> <td data-bbox="1518 751 1541 783">01</td> <td data-bbox="1541 751 2101 783">RETAIN SPRING</td> </tr> <tr> <td data-bbox="1267 791 1480 823"></td> <td data-bbox="1480 791 1518 823"></td> <td data-bbox="1518 791 1541 823"></td> <td data-bbox="1541 791 2101 823">-RIGHT HAND DRIVE</td> </tr> <tr> <td data-bbox="1267 831 1480 863">19</td> <td data-bbox="1480 831 1518 863">95 591 820</td> <td data-bbox="1518 831 1541 863">01</td> <td data-bbox="1541 831 2101 863">TAPPING SCREW DIAM 5X0,8-15</td> </tr> <tr> <td data-bbox="1267 871 1480 903"></td> <td data-bbox="1480 871 1518 903"></td> <td data-bbox="1518 871 1541 903"></td> <td data-bbox="1541 871 2101 903">-RIGHT HAND DRIVE</td> </tr> </table>		13	95 602 788	02	PLAIN WASHER 10,2X32-11	14	79 03 058 043	02	SPRING WASHER 10X27-1,6	15	79 03 234 011	02	SELF LOCKG NUT		RP 3622 30	01	10X150-12	16	79 03 034 007	02	HEF 10X1,25H18		RP 6939 42	01		17	79 03 232 035	02	HEXAGONAL NUT H 14X1,50 E 7		NFP			18	95 598 764	01	RETAIN SPRING				-RIGHT HAND DRIVE	19	95 591 820	01	TAPPING SCREW DIAM 5X0,8-15				-RIGHT HAND DRIVE
13	95 602 788	02	PLAIN WASHER 10,2X32-11																																																
14	79 03 058 043	02	SPRING WASHER 10X27-1,6																																																
15	79 03 234 011	02	SELF LOCKG NUT																																																
	RP 3622 30	01	10X150-12																																																
16	79 03 034 007	02	HEF 10X1,25H18																																																
	RP 6939 42	01																																																	
17	79 03 232 035	02	HEXAGONAL NUT H 14X1,50 E 7																																																
	NFP																																																		
18	95 598 764	01	RETAIN SPRING																																																
			-RIGHT HAND DRIVE																																																
19	95 591 820	01	TAPPING SCREW DIAM 5X0,8-15																																																
			-RIGHT HAND DRIVE																																																
<p>E4420110</p>																																																			



Hydraulics and Running Gear *Steering box and rack*

30/01/98 GB F09 1235 03 4425 11 PAGE 1	30/06/98 STEERING BOX AND RACK		
		1 94 71 001 765 NFP 94 71 001 865 NFP 2 95 593 571 RP 4056 49 95 593 572 NFP 3 95 640 118 95 589 766 NFP 4 79 10 007 584 RP 4059 07 5 95 592 155 6 96 090 490 RP 4020 8A 91 513 609 RP 4020 7A 95 605 802 RP 95 666 898 7 96 090 491 RP 95 666 899 91 513 608 RP 4020 7A 95 605 803 RP 95 666 898 8 75 529 889 RP 4018 20 9 96 068 033 RP 4043 30	STEERING BOX 01 NU -LEFT HAND DRIVE 01 NU -RIGHT HAND DRIVE STEERING RACK 01 -LEFT HAND DRIVE 01 01 -RIGHT HAND DRIVE CYLINDER 01 -LEFT HAND DRIVE 01 -RIGHT HAND DRIVE ARTICULATION 01 01 LEAK BACK UNION 01 HYDRAULIC TUBE RIGHT LON 320 01 -LEFT HAND DRIVE 01 HIGH PRESS PIPE RIGHT LON 200 01 -RIGHT HAND DRIVE UP TO O 5137 01 STRG HOIST PIPE 01 -RIGHT HAND DRIVE SINCE O 5138 01 HYDRAULIC TUBE LEFT LON 320 01 -LEFT HAND DRIVE 01 HIGH PRESS PIPE LEFT LON 200 01 -RIGHT HAND DRIVE UP TO O 5137 01 STRG HOIST PIPE 01 -RIGHT HAND DRIVE SINCE O 5138 01 LINE BRACKET 2T 6 01 01 SHAFT SCREW CX 12X1,50-55 01
1230 62 681 3-442-21 E4425110		.../...	



Hydraulics and Running Gear *Steering box and rack*

<p>30/01/98 GB F08 ↓ 1235 03 4425 11 PAGE 2</p>	<p>30/06/98 STEERING BOX AND RACK</p>		
		<p>10 95 593 573 RP 23 847 539</p> <p>11 96 065 619 RP 4010 23</p> <p>12 79 03 058 087 RP 96 108 079</p>	<p>01 CAPSCREW 9X12S-15 01</p> <p>01 PLAIN WASHER 12X22-2,5 01</p> <p>01 WASHER DIAM 9X20 01</p>
<p>E4425110</p>			

Hydraulics and Running Gear *PAS valve*

30/01/98 GB F07 1235 03 4426 10 PAGE 1	30/06/98 STEERING ASSISTANCE VALVE		
		1 95 603 268 RP 4048 G3 95 603 269 RP 4048 G2 2 79 03 090 258 NFP 3 95 630 094 4 79 10 023 867 5 79 10 009 748 RP 4063 01 6 79 03 053 516 LISTE 9306 79 03 053 530 LISTE 9306 79 03 053 524 LISTE 9306 79 03 053 531 LISTE 9306 79 03 053 517 LISTE 9401 79 03 053 518 LISTE 9306 79 03 053 519 LISTE 9306 79 03 053 520 LISTE 9305 79 03 053 521 LISTE 9305 79 03 053 522 LISTE 9305	01 <i>PINION VALVE</i> 01 <i>-LEFT HAND DRIVE</i> 01 <i>-RIGHT HAND DRIVE</i> 01 <i>PINION RING</i> 01 <i>COUPLING</i> 01 <i>RACK PISTON</i> 01 <i>PISTON SPRING</i> 99 <i>PISTON WASHER</i> 99 8,2 X 27,5 - 0,1 99 8,2 X 27,5 - 0,12 99 8,2 X 27,5 - 0,15 99 8,2 X 27,5 - 0,18 99 8,2 X 27,5 - 0,2 99 8X27,5 E 0,30 99 8,2 X 27,5 - 0,4 99 8,2 X 27,5 - 0,5 99 8,2 X 27,5 - 0,6 99 8,2 X 27,5 - 0,7 .../...

Hydraulics and Running Gear PAS valve

<p>30/01/98 GB F06 1235 03 4426 10 PAGE 2</p>	<p>30/06/98 STEERING ASSISTANCE VALVE</p>		
		<p>6 79 03 053 523 99 LISTE 9305</p> <p>7 96 024 123 01 RP 4026 21 01</p> <p>8 91 506 516 01 RP 4006 20 01</p> <p>9 79 03 001 028 02 RP 6915 36 01</p> <p>10 79 03 009 256 02 RP 6913 33 01</p> <p>11 26 213 549 02 RP 6913 A7 01</p> <p>12 79 03 057 003 02 RP 6962 12 01</p> <p>13 79 03 034 071 02 RP 6939 61 01</p> <p>Ø 95 669 033</p>	<p>PISTON WASHER 8,2 X 27,5 - 0,8</p> <p>RING-SEAL</p> <p>PUSH CLAMP 2DIAM7,7 ENT44 E 5</p> <p>WASHER-SCREW THRI 7X1,00</p> <p>SOCKET SCREW 7X100-20</p> <p>7X100-32</p> <p>FLEXIBLE WASHER 7,4X14,2X0,8</p> <p>SELF LOCKG NUT 7X100-8,5</p> <p>PINION VALVE REPAIR KIT</p>
<p>E4426100</p>			



Hydraulics and Running Gear *Flow distributor valve*

<p>30/01/98 GB F05 1235 03 4428 10 PAGE 1</p>	<p>30/06/98 STEERING - DISTRIBUTOR</p>		
		<p>1 95 589 765 RP 4024 01</p> <p>2 95 640 843</p> <p>3 95 534 068</p> <p>4 23 746 509 RP 6917 95</p> <p>5 77 00 591 002 NFP</p> <p>6 79 03 053 394 RP 6946 77</p> <p>7 95 623 737 RP 96 143 825</p> <p>8 79 03 032 252 RP 6932 15</p> <p>9 79 03 232 024</p>	<p>01 DISTRIBUTOR</p> <p>01 STRUT 90X30 -INJECTION 1,905L</p> <p>02 FILTER</p> <p>01 CAPSCREW 7X100-38</p> <p>01 ALTERNAT SCREW TH 10X1,50-120 -INJECTION 1,905L</p> <p>01 PLAIN WASHER DIAM 10X20 EP 2 -INJECTION 1,905L</p> <p>01 WASHER DIAM 10X20 EP 1,6 -INJECTION 1,905L</p> <p>01 HEXAGONAL NUT HE 10X1,50 -INJECTION 1,905L</p> <p>01 10X150-5 -INJECTION 1,905L</p> <p>FLOW DISTRIBUTOR REPAIR KIT Original number: 95-669-034</p>

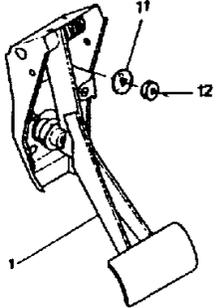
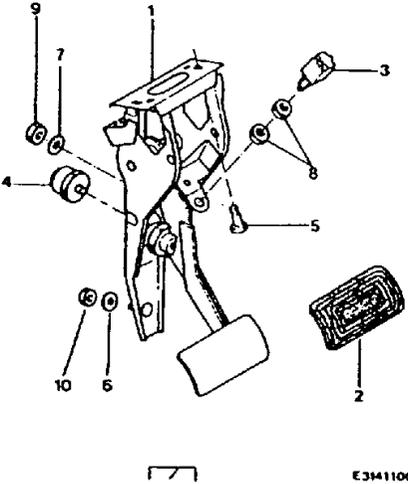


Brakes and Transmission *Pedal gear (brake, clutch)*

30/01/98 GB C02 ↑ 1235 04 3140 10 PAGE 1	30706798 PEDAL GEAR - BRAKE - CLUTCH	BVM LEFT HAND DRIVE																																																																						
		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	<table border="0"> <tr> <td>96 080 508</td> <td>01</td> <td>TOE BOARD ASSY</td> </tr> <tr> <td>95 636 691</td> <td>01</td> <td>CONTROL CABLE LON 698 -GTI 16V</td> </tr> <tr> <td>95 576 135</td> <td>01</td> <td>SHEATH SLEEVE</td> </tr> <tr> <td>95 567 179</td> <td>01</td> <td>SHEATH STOP</td> </tr> <tr> <td>96 035 654</td> <td>01</td> <td>CABLE GUIDE -GTI 16V</td> </tr> <tr> <td>95 596 054</td> <td>01</td> <td>CABLE END-PIECE DIAM 45X6,5-22</td> </tr> <tr> <td>95 575 913</td> <td>02</td> <td>PEDAL COVER</td> </tr> <tr> <td>RP 2130 14</td> <td>01</td> <td></td> </tr> <tr> <td>95 593 620</td> <td>01</td> <td>PEDAL SPRING DIAM EXT15,3 LON 105</td> </tr> <tr> <td>79 10 033 931</td> <td>01</td> <td>CONTACT SWITCH</td> </tr> <tr> <td>RP 4534 02</td> <td>01</td> <td></td> </tr> <tr> <td>92 518 983</td> <td>01</td> <td>LOCK FIX FORK</td> </tr> <tr> <td>RP 9172 04</td> <td>01</td> <td>-GTI 16V</td> </tr> <tr> <td>95 593 655</td> <td>01</td> <td>SPACER</td> </tr> <tr> <td>79 03 009 108</td> <td>02</td> <td>SOCKET SCREW CHC 6X1,00-20</td> </tr> <tr> <td>RP 6913 10</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 001 342</td> <td>02</td> <td>WASHER-SCREW THRI 8X1,25-16</td> </tr> <tr> <td>NFP</td> <td></td> <td></td> </tr> <tr> <td>95 623 758</td> <td>03</td> <td>WASHER DIAM 6X18</td> </tr> <tr> <td>RP 79 03 058 063</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 032 121</td> <td>02</td> <td>HEXAGONAL NUT 10X100-3,2</td> </tr> <tr> <td>95 623 754</td> <td>01</td> <td>NUT WITH BASE DIAM 6X1,00</td> </tr> <tr> <td>RP 79 03 037 001</td> <td>01</td> <td></td> </tr> </table>	96 080 508	01	TOE BOARD ASSY	95 636 691	01	CONTROL CABLE LON 698 -GTI 16V	95 576 135	01	SHEATH SLEEVE	95 567 179	01	SHEATH STOP	96 035 654	01	CABLE GUIDE -GTI 16V	95 596 054	01	CABLE END-PIECE DIAM 45X6,5-22	95 575 913	02	PEDAL COVER	RP 2130 14	01		95 593 620	01	PEDAL SPRING DIAM EXT15,3 LON 105	79 10 033 931	01	CONTACT SWITCH	RP 4534 02	01		92 518 983	01	LOCK FIX FORK	RP 9172 04	01	-GTI 16V	95 593 655	01	SPACER	79 03 009 108	02	SOCKET SCREW CHC 6X1,00-20	RP 6913 10	01		79 03 001 342	02	WASHER-SCREW THRI 8X1,25-16	NFP			95 623 758	03	WASHER DIAM 6X18	RP 79 03 058 063	01		79 03 032 121	02	HEXAGONAL NUT 10X100-3,2	95 623 754	01	NUT WITH BASE DIAM 6X1,00	RP 79 03 037 001	01	
96 080 508	01	TOE BOARD ASSY																																																																						
95 636 691	01	CONTROL CABLE LON 698 -GTI 16V																																																																						
95 576 135	01	SHEATH SLEEVE																																																																						
95 567 179	01	SHEATH STOP																																																																						
96 035 654	01	CABLE GUIDE -GTI 16V																																																																						
95 596 054	01	CABLE END-PIECE DIAM 45X6,5-22																																																																						
95 575 913	02	PEDAL COVER																																																																						
RP 2130 14	01																																																																							
95 593 620	01	PEDAL SPRING DIAM EXT15,3 LON 105																																																																						
79 10 033 931	01	CONTACT SWITCH																																																																						
RP 4534 02	01																																																																							
92 518 983	01	LOCK FIX FORK																																																																						
RP 9172 04	01	-GTI 16V																																																																						
95 593 655	01	SPACER																																																																						
79 03 009 108	02	SOCKET SCREW CHC 6X1,00-20																																																																						
RP 6913 10	01																																																																							
79 03 001 342	02	WASHER-SCREW THRI 8X1,25-16																																																																						
NFP																																																																								
95 623 758	03	WASHER DIAM 6X18																																																																						
RP 79 03 058 063	01																																																																							
79 03 032 121	02	HEXAGONAL NUT 10X100-3,2																																																																						
95 623 754	01	NUT WITH BASE DIAM 6X1,00																																																																						
RP 79 03 037 001	01																																																																							



Brakes and Transmission Pedal gear (brake)

30/01/98 GB C04 1235 04 3141 10 PAGE 1	30/06/98 PEDAL GEAR FOR BRAKE	BVA																																																																			
 <p style="text-align: center;">DAD</p>	 <p style="text-align: center;">E3M1100</p>	1 2 3 4 5 6 7 8 9 10 11 12	<table border="1"> <tr> <td>95 595 837</td> <td>01</td> <td>TOE BOARD ASSY -LEFT HAND DRIVE</td> </tr> <tr> <td>95 601 027</td> <td>01</td> <td>-RIGHT HAND DRIVE</td> </tr> <tr> <td>5 445 181</td> <td>01</td> <td>PEDAL COVER</td> </tr> <tr> <td>79 10 033 931</td> <td>01</td> <td>CONTACT SWITCH</td> </tr> <tr> <td>RP 4534 02</td> <td>01</td> <td></td> </tr> <tr> <td>95 593 655</td> <td>01</td> <td>SPACER</td> </tr> <tr> <td>79 03 201 463</td> <td>02</td> <td>CAPSCREW RI 6X1,00-20</td> </tr> <tr> <td>RP 6922 54</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td></td> <td>SPRING WASHER</td> </tr> <tr> <td>79 03 058 028</td> <td>01</td> <td>DIAM 6X14X1,4</td> </tr> <tr> <td>RP 6962 99</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 058 011</td> <td>02</td> <td>DIAM 7,2X14,2-1,7</td> </tr> <tr> <td>RP 6962 70</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td></td> <td>HEXAGONAL NUT</td> </tr> <tr> <td>79 03 032 121</td> <td>02</td> <td>10X100-3,2</td> </tr> <tr> <td>79 03 032 036</td> <td>01</td> <td>DIAM 7X100</td> </tr> <tr> <td>RP 6932 05</td> <td>01</td> <td></td> </tr> <tr> <td>25 260 019</td> <td>01</td> <td>DIAM 6X1,00</td> </tr> <tr> <td>RP 79 03 232 016</td> <td>01</td> <td></td> </tr> <tr> <td>95 591 611</td> <td>01</td> <td>PLAIN WASHER 6X19,5-4 -RIGHT HAND DRIVE</td> </tr> <tr> <td>79 03 234 016</td> <td>01</td> <td>SELF LOCKG NUT 6X100</td> </tr> <tr> <td>RP 6935 86</td> <td>01</td> <td>-RIGHT HAND DRIVE</td> </tr> </table>	95 595 837	01	TOE BOARD ASSY -LEFT HAND DRIVE	95 601 027	01	-RIGHT HAND DRIVE	5 445 181	01	PEDAL COVER	79 10 033 931	01	CONTACT SWITCH	RP 4534 02	01		95 593 655	01	SPACER	79 03 201 463	02	CAPSCREW RI 6X1,00-20	RP 6922 54	01				SPRING WASHER	79 03 058 028	01	DIAM 6X14X1,4	RP 6962 99	01		79 03 058 011	02	DIAM 7,2X14,2-1,7	RP 6962 70	01				HEXAGONAL NUT	79 03 032 121	02	10X100-3,2	79 03 032 036	01	DIAM 7X100	RP 6932 05	01		25 260 019	01	DIAM 6X1,00	RP 79 03 232 016	01		95 591 611	01	PLAIN WASHER 6X19,5-4 -RIGHT HAND DRIVE	79 03 234 016	01	SELF LOCKG NUT 6X100	RP 6935 86	01	-RIGHT HAND DRIVE
95 595 837	01	TOE BOARD ASSY -LEFT HAND DRIVE																																																																			
95 601 027	01	-RIGHT HAND DRIVE																																																																			
5 445 181	01	PEDAL COVER																																																																			
79 10 033 931	01	CONTACT SWITCH																																																																			
RP 4534 02	01																																																																				
95 593 655	01	SPACER																																																																			
79 03 201 463	02	CAPSCREW RI 6X1,00-20																																																																			
RP 6922 54	01																																																																				
		SPRING WASHER																																																																			
79 03 058 028	01	DIAM 6X14X1,4																																																																			
RP 6962 99	01																																																																				
79 03 058 011	02	DIAM 7,2X14,2-1,7																																																																			
RP 6962 70	01																																																																				
		HEXAGONAL NUT																																																																			
79 03 032 121	02	10X100-3,2																																																																			
79 03 032 036	01	DIAM 7X100																																																																			
RP 6932 05	01																																																																				
25 260 019	01	DIAM 6X1,00																																																																			
RP 79 03 232 016	01																																																																				
95 591 611	01	PLAIN WASHER 6X19,5-4 -RIGHT HAND DRIVE																																																																			
79 03 234 016	01	SELF LOCKG NUT 6X100																																																																			
RP 6935 86	01	-RIGHT HAND DRIVE																																																																			
E3:41100																																																																					

Brakes and Transmission Driveshafts

30/01/98 GB C05 ↑ 1235 04 3711 15 PAGE 1	30/06/98 DRIVE SHAFTS	16 TZI EXCEPT WITH ABS BRAKES	
		16 TZI WITH ABS OPTION: LOOK AT SUBGROUP 3711 30	
		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	3272 A8 01 3273 K4 01 3293 83 02 3293 59 02 3287 74 02 3247 03 01 3248 06 01 3252 04 02 96 995 619 02 3255 03 01 79 03 083 153 04 6935 84 02 3297 00 02 3297 02 02 3297 03 02 95 615 129 99
E3711150			

Brakes and Transmission Driveshafts

30/01/98 GB C06 ↑ 30/06/98		DRIVE SHAFTS		
1235 04 3711 30				
PAGE 1				
<p style="text-align: center;">[10/94] 03711300</p> <p style="text-align: right;">E3711300</p>	1	3272 A8 01	DRIVE-SHAFT NEW	
				LEFT
				REPERE 8GN04 8GN84 8GN86 8HN92 8HN98 (8HN98)
				-EXCEPT WITH ABS BRAKES
			3272 C3 01	LEFT
				REPERE 8GN41 (8GN41)
				-WITH ABS BRAKES
	2	3273 K4 01	RIGHT	
				REPERE 8GN05 8GN85 8GN87 8HN93 8HN99 (8HN99)
				-EXCEPT WITH ABS BRAKES
		3273 K7 01	RIGHT	
				REPERE 8GN42 (8GN42)
				-WITH ABS BRAKES
	4	3293 91 02	BOOT PROTECTING	
				COTE ROUES (REP SOUFFLET
			9563146480/9604451080/9613559180)	
5	3293 59 02	COTE PONT (REP SOUFFLET 9502508880)		
	3293 65 02	COTE PONT (REP SOUFFLET 9554962180)		
6	3247 03 01	BEARING 30 X 55 - 13		
7	3248 06 01	DRIV SHAFT BUSH RIGHT		
8	3252 04 02	SCREW 7X100-44		
9	3294 04 02	TRANS SNAP RING		
10	3255 03 01	DEFLECTOR RIGHT 26 X 60 - 12		
11	79 03 083 140 04	BOOT CLAMP		
	LISTE 9403	LON 660		
	79 03 083 153 04	LON 240		
12	6935 84 02	SELF LOCKG NUT 7X100-7-11		
13	3297 00 02	HUB FIXING NUT 24 X 150		
14	3297 02 02	LOCKING NUT		
15	3297 03 02	PIN		

Brakes and Transmission Driveshafts

<p>30/01/98 GB C07 ↑ 1235 04 3711 30 PAGE 2</p>	<p>30/06/98 DRIVE SHAFTS</p>		
<p>[10/94] D3711300</p>	<p>16 95 615 129</p>	<p>99 GREASE 80 GRS</p>	
<p>E3711300</p>			



Brakes and Transmission *Brake calipers and disks, front*

30/01/98 GB C08 1235 04 4512 10 PAGE 1	30/06/98 FRONT BRAKES - CALIPERS AND DISCS																																																																																																		
<p> 11 $B+C+F+H+L+8+15$ 12 $B+C+D+E+F+H+8$ 13 $K+I+8+M$ 4 $A+B+G+8$ 14 $M+B+J$ </p> <p>[05/95] 04512100</p>		<table border="1"> <tr> <td>1</td> <td>95 588 899</td> <td>01</td> <td>BRAKE CALIPER/F LEFT</td> </tr> <tr> <td></td> <td>95 624 922</td> <td>01</td> <td>LEFT -GTI 16V</td> </tr> <tr> <td></td> <td>95 588 900</td> <td>01</td> <td>RIGHT</td> </tr> <tr> <td></td> <td>95 624 923</td> <td>01</td> <td>RIGHT -GTI 16V</td> </tr> <tr> <td>2</td> <td>95 575 080</td> <td>02</td> <td>BRAKE DISC DIAM 266 E 10 → 95 661 746</td> </tr> <tr> <td></td> <td>95 632 048</td> <td>02</td> <td>DIAM 66X266E20,4 -GTI 16V</td> </tr> <tr> <td></td> <td>LISTE 9305</td> <td></td> <td></td> </tr> <tr> <td>3</td> <td>95 589 273</td> <td>01</td> <td>SET 4 BRAKE PAD</td> </tr> <tr> <td></td> <td>RP 95 624 484</td> <td>01</td> <td></td> </tr> <tr> <td>4</td> <td>95 590 797</td> <td>01</td> <td>REPAIR KIT DE COLONNETTES</td> </tr> <tr> <td></td> <td>RP 4439 03</td> <td>01</td> <td></td> </tr> <tr> <td>5</td> <td>96 082 396</td> <td>01</td> <td>STOP PLATE LEFT POUR DEFLECT PLASTIQ</td> </tr> <tr> <td></td> <td>96 082 397</td> <td>01</td> <td>RIGHT POUR DEFLECT PLASTIQ</td> </tr> <tr> <td>6</td> <td>96 035 564</td> <td>01</td> <td>BRAKE AIR DEFCT LEFT PLASTIQUE</td> </tr> <tr> <td></td> <td>96 036 119</td> <td>01</td> <td>LEFT TOLE</td> </tr> <tr> <td></td> <td>RP 96 035 564</td> <td>01</td> <td>-GTI 16V</td> </tr> <tr> <td></td> <td>+ 96 082 396</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>96 035 565</td> <td>01</td> <td>RIGHT PLASTIQUE</td> </tr> <tr> <td></td> <td>96 036 120</td> <td>01</td> <td>RIGHT TOLE</td> </tr> <tr> <td></td> <td>RP 96 035 565</td> <td>01</td> <td>-GTI 16V</td> </tr> <tr> <td></td> <td>+ 96 082 397</td> <td>01</td> <td></td> </tr> <tr> <td>7</td> <td>95 578 347</td> <td>02</td> <td>DRAIN SCREW</td> </tr> <tr> <td>8</td> <td>79 41 401 043</td> <td>02</td> <td>BLEED SCREW CAP</td> </tr> <tr> <td></td> <td>RP 2088 15</td> <td>01</td> <td></td> </tr> </table>	1	95 588 899	01	BRAKE CALIPER/F LEFT		95 624 922	01	LEFT -GTI 16V		95 588 900	01	RIGHT		95 624 923	01	RIGHT -GTI 16V	2	95 575 080	02	BRAKE DISC DIAM 266 E 10 → 95 661 746		95 632 048	02	DIAM 66X266E20,4 -GTI 16V		LISTE 9305			3	95 589 273	01	SET 4 BRAKE PAD		RP 95 624 484	01		4	95 590 797	01	REPAIR KIT DE COLONNETTES		RP 4439 03	01		5	96 082 396	01	STOP PLATE LEFT POUR DEFLECT PLASTIQ		96 082 397	01	RIGHT POUR DEFLECT PLASTIQ	6	96 035 564	01	BRAKE AIR DEFCT LEFT PLASTIQUE		96 036 119	01	LEFT TOLE		RP 96 035 564	01	-GTI 16V		+ 96 082 396	01			96 035 565	01	RIGHT PLASTIQUE		96 036 120	01	RIGHT TOLE		RP 96 035 565	01	-GTI 16V		+ 96 082 397	01		7	95 578 347	02	DRAIN SCREW	8	79 41 401 043	02	BLEED SCREW CAP		RP 2088 15	01		<p>...</p>
1	95 588 899	01	BRAKE CALIPER/F LEFT																																																																																																
	95 624 922	01	LEFT -GTI 16V																																																																																																
	95 588 900	01	RIGHT																																																																																																
	95 624 923	01	RIGHT -GTI 16V																																																																																																
2	95 575 080	02	BRAKE DISC DIAM 266 E 10 → 95 661 746																																																																																																
	95 632 048	02	DIAM 66X266E20,4 -GTI 16V																																																																																																
	LISTE 9305																																																																																																		
3	95 589 273	01	SET 4 BRAKE PAD																																																																																																
	RP 95 624 484	01																																																																																																	
4	95 590 797	01	REPAIR KIT DE COLONNETTES																																																																																																
	RP 4439 03	01																																																																																																	
5	96 082 396	01	STOP PLATE LEFT POUR DEFLECT PLASTIQ																																																																																																
	96 082 397	01	RIGHT POUR DEFLECT PLASTIQ																																																																																																
6	96 035 564	01	BRAKE AIR DEFCT LEFT PLASTIQUE																																																																																																
	96 036 119	01	LEFT TOLE																																																																																																
	RP 96 035 564	01	-GTI 16V																																																																																																
	+ 96 082 396	01																																																																																																	
	96 035 565	01	RIGHT PLASTIQUE																																																																																																
	96 036 120	01	RIGHT TOLE																																																																																																
	RP 96 035 565	01	-GTI 16V																																																																																																
	+ 96 082 397	01																																																																																																	
7	95 578 347	02	DRAIN SCREW																																																																																																
8	79 41 401 043	02	BLEED SCREW CAP																																																																																																
	RP 2088 15	01																																																																																																	



Brakes and Transmission *Brake calipers and disks, front*

<p>30/01/98 GB C09 ↑ 30706798 1235 04 4512 10 PAGE 2</p>	<p>FRONT BRAKES - CALIPERS AND DISCS</p>																																	
		<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: center;">9</td> <td style="width: 60%;">ZF 13 301 111L RP 6905 36</td> <td style="width: 5%; text-align: center;">04</td> <td style="width: 30%;">CAPSCREW DIAM 6X1,00-20</td> </tr> <tr> <td style="text-align: center;">10</td> <td>91 501 258 RP 4405 14</td> <td style="text-align: center;">04</td> <td>CALIPER SCREW 12X150-79</td> </tr> <tr> <td style="text-align: center;">11</td> <td>95 590 798</td> <td style="text-align: center;">01</td> <td>PISTON SEAL KIT</td> </tr> <tr> <td style="text-align: center;">12</td> <td>95 590 796</td> <td style="text-align: center;">01</td> <td>HANDBRAKE KIT</td> </tr> <tr> <td></td> <td></td> <td></td> <td>PAD SPRING KIT</td> </tr> <tr> <td style="text-align: center;">13</td> <td>95 590 838 RP 4427 65</td> <td style="text-align: center;">01</td> <td></td> </tr> <tr> <td></td> <td>95 614 560 RP 4427 64</td> <td style="text-align: center;">01</td> <td>-GTI 16V</td> </tr> <tr> <td style="text-align: center;">14</td> <td>95 618 408</td> <td style="text-align: center;">01</td> <td>PISTON SEAL KIT</td> </tr> </table>	9	ZF 13 301 111L RP 6905 36	04	CAPSCREW DIAM 6X1,00-20	10	91 501 258 RP 4405 14	04	CALIPER SCREW 12X150-79	11	95 590 798	01	PISTON SEAL KIT	12	95 590 796	01	HANDBRAKE KIT				PAD SPRING KIT	13	95 590 838 RP 4427 65	01			95 614 560 RP 4427 64	01	-GTI 16V	14	95 618 408	01	PISTON SEAL KIT
9	ZF 13 301 111L RP 6905 36	04	CAPSCREW DIAM 6X1,00-20																															
10	91 501 258 RP 4405 14	04	CALIPER SCREW 12X150-79																															
11	95 590 798	01	PISTON SEAL KIT																															
12	95 590 796	01	HANDBRAKE KIT																															
			PAD SPRING KIT																															
13	95 590 838 RP 4427 65	01																																
	95 614 560 RP 4427 64	01	-GTI 16V																															
14	95 618 408	01	PISTON SEAL KIT																															
<p>E4512100</p>																																		



Brakes and Transmission *Brake calipers and disks, rear*

30/01/98 GB C10 ↑ 1235 04 4516 10 PAGE 1	30/06/98 REAR BRAKE CALIPERS AND DISCS		
<p style="text-align: right;">E4516100</p>		1 95 651 079 2 95 582 061 NFP 3 95 650 873 LISTE 9606 4 5 454 927 5 95 565 090 6 96 995 632 7 95 587 148 8 95 608 524 9 5 438 689 10 95 610 018 RP 95 630 820 95 630 820 11 ZC 9617 067 U 12 95 578 346 RP 1210 06 13 79 41 401 043 RP 2088 15 14 96 020 546 15 5 438 691 16 5 438 690 17 79 03 201 020 RP 6915 84 18 79 03 053 028 RP 6947 77	02 BRAKE CALIPER 02 BRAKE DISC DIAM 224 X 71 E 7 01 SET 4 BRAKE PAD 01 CALIPER PISTON DIAM 30X29 04 PISTON SEAL 29,5X35,7X2,8 04 30X35X2,5 02 DIAM 7,2 X11X1,9 02 BRAK PAD SPRING 02 GUARD SHEET MET 02 02 01 02 DISC PROTECTOR -WITH ABS BRAKES 02 PIN 5,4X18 02 DRAIN SCREW 01 02 BLEED SCREW CAP 01 02 DISC FIX SCREW DIAM 6X100-24 04 CALIPER SCREW TH 9X139 02 RETAINING PIN DIAM5-82 06 CAPSCREW 6X1,00-12 01 06 PLAIN WASHER 6X12-1,2 01
<p style="text-align: right;">E4516100</p>		<p style="text-align: right;">.../...</p>	



Brakes and Transmission *Brake calipers and disks, rear*

<p>30/01/98 GB C11 ↑ 1235 04 4516 10 PAGE 2</p>	<p>30/06/98 REAR BRAKE CALIPERS AND DISCS</p>		
		<p>19 79 03 058 027 20 79 03 058 087 RP 96 108 079 21 79 03 032 006 RP 6933 08</p>	<p>04 SPRING WASHER 5X12X1,2 04 WASHER DIAM 9X20 01 02 HEXAGONAL NUT 5X80-4 01</p>
<p>E4516100</p>			



Brakes and Transmission *Brake control valve*

30/01/98 GB C12 † 1235 04 4540 10 PAGE 1	30/06/98 BRAKE CONTROL VALVE		
		1 95 650 892 2 5 424 455 3 95 640 067 4 79 03 066 207 RP 6978 01 5 96 018 815 6 5 431 086 7 96 003 057 8 95 638 813 9 95 495 759 10 79 03 065 984 11 75 434 306 12 79 41 401 043 RP 2088 15 13 95 588 825 95 593 692 14 79 03 058 011 RP 6962 70 15 79 03 032 036 RP 6932 05 16 95 593 696 17 95 593 695	01 CONTROL-UNIT 3 TIROIRS 01 CNTRL-UNIT RING 27X32-7 01 BRAKE PROTECTOR 01 STOP-RING 37,8X23,2-1,5 01 01 CIRCLIP CONTR UNIT SPRG DIAM EXT 14,8 01 DIAM 38,8X30,2 01 BRAKE O-RING DIAM 42X45,2X1,6 01 CNTRL-UNIT SEAL 14,7X14,9-2 01 BRAKE O-RING 16,4X19-1,3 01 DRAIN SCREW DIAM 8X1,25-36 01 BLEED SCREW CAP 01 CONTL UNIT STUD DIAM 7X1,00 -LEFT HAND DRIVE 02 DIAM 7X1,00 -RIGHT HAND DRIVE 02 SPRING WASHER DIAM 7,2X14,2-1,7 01 01 HEXAGONAL NUT DIAM 7X100 01 01 BRAKE PUSHROD -RIGHT HAND DRIVE 01 SPACER -RIGHT HAND DRIVE



Brakes and Transmission *ABS sensors, brackets*

30/01/98 GB C14 ↑ 1235 04 4543 10 PAGE 1	30/06/98 BRAKES-FEELERS-BRACKETS	WITH ABS BRAKES	
<p>1230 [02/00] 4-453-30</p>		1 91 539 398 2 91 537 913 3 95 632 845 RP 96 041 049 95 632 848 RP 96 041 050 4 95 499 186 5 79 03 079 053 6 79 03 079 005 RP 6986 96 7 79 03 201 735 RP 6921 53	02 AV 02 AR 01 SENSOR LUG 01 LEFT AR 01 RIGHT AR 01 02 CLIP 02 2T 10-8 TROU6,5 L41 01 2T 6-3 L20X12 H13 02 01 04 CAPSCREW 6X100-35 01
E4543100			



Brakes and Transmission *ABS computer, relays, brackets*

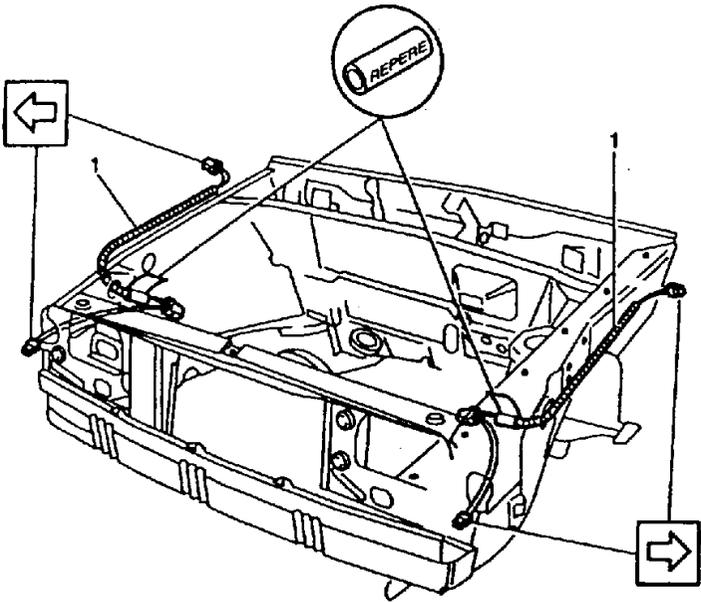
30/01/98 GB C15 ↑ 1235 04 4546 10 PAGE 1	30/06/98 BRAKES-COMPUTOR-RELAYS-BRACKETS	WITH ABS BRAKES	
<p>1230 [02/88] 4-453-40</p>		1 91 537 759 01 2 97 521 600 01 RP 79 05 522 220 01 3 95 632 853 01 4 95 632 854 01 5 79 03 016 008 02 6 79 03 016 283 01 RP 6925 31 01 7 79 03 081 073 02 RP 6992 G2 01 8 79 03 046 036 01 RP 6943 47 01	01 CALCULATOR REP LILAS 01 ELECTRIC RELAY 01 COMPUTER BRACKT 01 MATERIAL SCREW 4,2-9,5 01 SCREW CBLX 4,8-13 01 RETAINING CLIP DIAM 4,2 01 SPEED NUT 5X80-20,4-14
E4546100			

Brakes and Transmission Handbrake

30/01/98 GB D15 ↓ 1235 04 4555 10 PAGE 1	30/06/98 HANDBRAKE - LEVER - CABLES		
<p style="text-align: right;">E4555101</p> <p style="text-align: right;">E4555100</p>		1 95 567 611 FXX RP 95 567 611 XX 2 95 611 505 RP 4745 L2 3 95 574 973 4 79 03 077 099 5 95 572 023 FXX RP 95 572 023 XX 6 95 574 974 7 96 011 524 8 96 008 884 RP 96 118 522 9 95 635 843 95 635 844 10 79 03 201 759 RP 6922 49 11 79 03 201 263 RP 6922 80 12 79 03 058 028 RP 6962 99 13 25 260 019 RP 79 03 232 016 14 96 995 864 RP 6934 27	01 HANDBRAKE LEVER 01 02 HANDBRAKE CABLE LON 1642 01 01 PROTECTOR 01 CLIP TROU 6,5 DIAM 12 H20 01 LEVER HANDLE DIAM 19,5 LON 105 01 01 SWITCH STOP 01 CABLE GUIDE 01 LEFT 01 RIGHT 01 01 LEFT ON BRIDLE (FRONT ANTI ROLL BAR) 01 RIGHT ON BRIDLE (FRONT ANTI ROLL BAR) 02 SELF-TAP SCREWS 8X125-25 01 02 WASHER-SCREW DIAM 6X1,00-25 01 02 SPRING WASHER DIAM 6X14X1,4 01 01 HEXAGONAL NUT DIAM 6X1,00 01 06 WASHER-NUT M6X100 01



Electrical Equipment *Wiring harness, front face*

30/01/98 GB C02 ↑ 1235 05 5010 02 PAGE 1	30/06/98 FRONT FACE HARNESS		
 <p data-bbox="913 1161 1151 1182">09/96 D5010020</p> <p data-bbox="1077 1465 1167 1485">D5010020</p>	1	95 637 318	01 BLINKER HARNESS RAPPEL GLIGNOTANTS

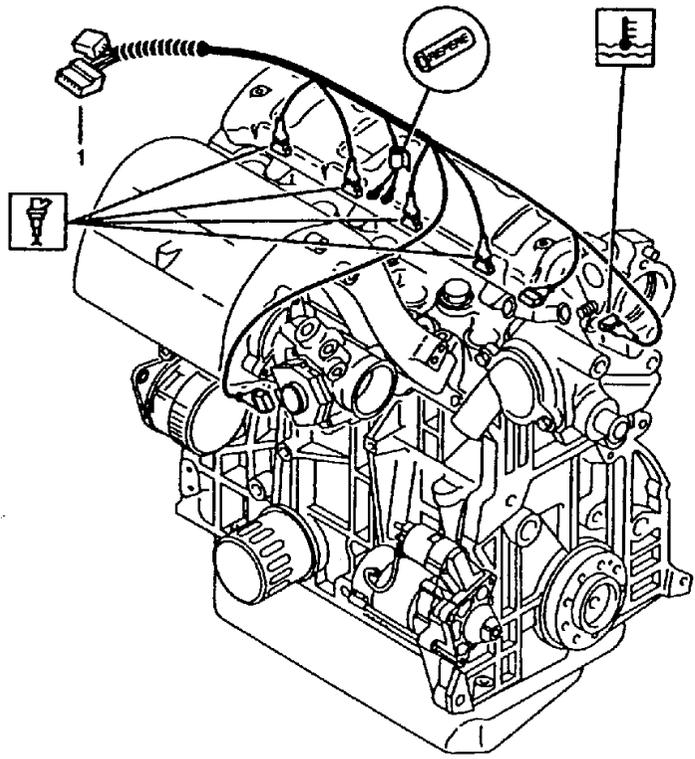
Electrical Equipment *Wiring harness, main*

<p>30/01/98 GB C03 † 1235 05 5011 10 PAGE 1</p>	<p>30/06/98 MAIN WIRING HARNESS</p>	
<p>[10/96] D5011070</p>	<p>1</p>	<p>FRONT HARNESS</p> <ul style="list-style-type: none"> 96 085 598 01 -16 TZI UP TO O 5074 96 104 455 01 -16 TZI SINCE O 5075 96 044 799 01 -SALOON 19 TRI -SALOON 19 TZI UP TO O 4759 96 095 069 01 -SALOON 19 TZI SINCE O 4760 UP TO O 5074 RP 96 085 598 01 96 104 462 01 -SALOON 19 TZI SINCE O 5075 96 035 781 01 -ESTATE 19 TRI LEFT HAND DRIVE NFP -ESTATE 19 TZI LEFT HAND DRIVE UP TO O 4759 -GTI LEFT HAND DRIVE UP TO O 4759 -GTI 16V LEFT HAND DRIVE UP TO O 4759 96 095 089 01 -ESTATE 19 TZI LEFT HAND DRIVE SINCE O 4760 RP 96 101 497 01 UP TO O 4922 -GTI LEFT HAND DRIVE SINCE O 4760 UP TO O 4922 -GTI 16V LEFT HAND DRIVE SINCE O 4760 UP TO O 4922 96 104 474 01 -ESTATE 19 TZI LEFT HAND DRIVE SINCE O 4923 -GTI LEFT HAND DRIVE SINCE O 4923 -GTI 16V LEFT HAND DRIVE SINCE O 4923 96 014 500 01 -ESTATE 19 TRI RIGHT HAND DRIVE -ESTATE 19 TZI RIGHT HAND DRIVE UP TO O 4922 -GTI RIGHT HAND DRIVE UP TO O 4922 96 030 494 01 -GTI 16V RIGHT HAND DRIVE UP TO O 4922 96 104 476 01 -ESTATE 19 TZI RIGHT HAND DRIVE SINCE O 4923 -GTI RIGHT HAND DRIVE SINCE O 4923 -GTI 16V RIGHT HAND DRIVE SINCE O 4923
<p>D5011070</p>		

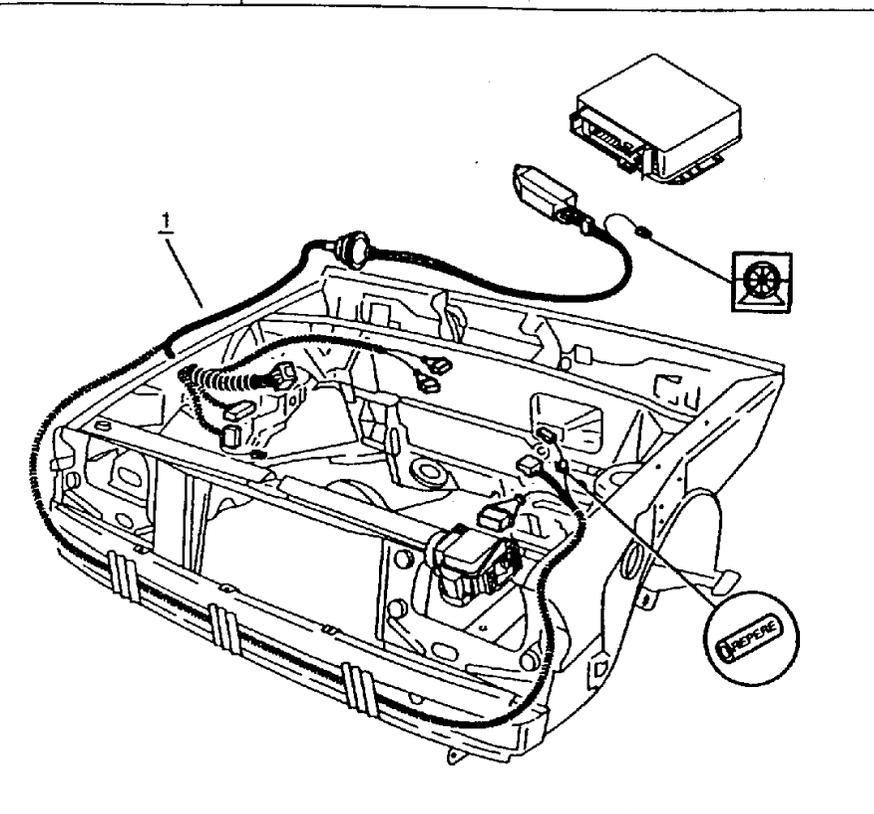
Electrical Equipment *Wiring harness, engine*

<p>30/01/98 GB C04 ↑ 1235 05 5012 10 PAGE 1</p>	<p>30/06/98 ENGINE HARNESS</p>		
<p style="text-align: right;">ESG:2100</p>		<p>1</p> <p>2</p>	<p>ENGINE HARNESS</p> <p>96 087 448 01 -16 TZI</p> <p>95 634 918 01 -SALOON 19 TRI -SALOON 19 TZI</p> <p>96 041 132 01 -ESTATE 19 TRI -ESTATE 19 TZI -GTI</p> <p>96 081 489 01 -GTI 16V UP TO O 4922</p> <p>96 111 725 01 -GTI 16V SINCE O 4923</p> <p>96 087 447 01 SAFETY HARNESS -16 TZI</p> <p>95 599 760 01 ELECTRIC HARNES SECURITE DEMAREUR -19 TRI -19 TZI -GTI</p>

Electrical Equipment *Wiring harness, engine*

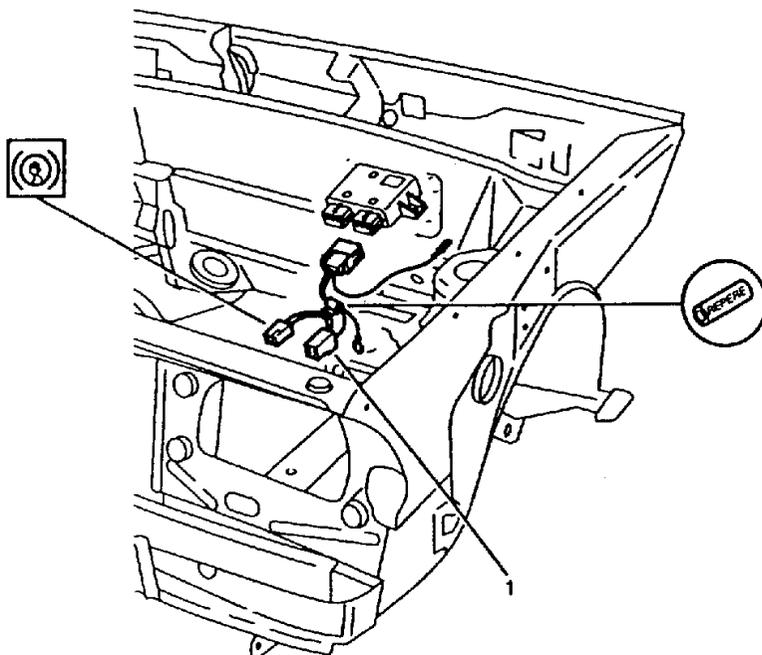
<p>30/01/98 GB C05 ↑ 1235 05 5012 20 PAGE 1</p>	<p>30/06/98 ENGINE HARNESS</p>																																	
 <p style="text-align: right;">06/96</p>		<p>INJECTION HARNESS: ENGINE SIDE CER: COMPACT CONNECTOR (SOME VEHICLES 16TZI CAN BE EQUIPED)</p>																																
		<p>1</p>	<table border="1"> <tr> <td>96 102 571</td> <td>01</td> <td>INJECTN HARNESS COTE MOTEUR -16 TZI UP TO O 5074</td> </tr> <tr> <td>96 113 423</td> <td>01</td> <td>COTE MOTEUR -16 TZI SINCE O 5075 UP TO O 5284</td> </tr> <tr> <td>96 124 661</td> <td>01</td> <td>COTE MOTEUR -16 TZI SINCE O 5285</td> </tr> <tr> <td>96 141 978</td> <td>01</td> <td>PARTIE MOTEUR -16 TZI SINCE O 5474 UP TO O 5683 COMPACT CONNECTOR (CER)</td> </tr> <tr> <td>6543 SR</td> <td>01</td> <td>PARTIE MOTEUR</td> </tr> <tr> <td>RP 96 141 978</td> <td>01</td> <td>-16 TZI SINCE O 5684 COMPACT CONNECTOR (CER)</td> </tr> <tr> <td>95 634 054</td> <td>01</td> <td>COTE MOTEUR -SALOON 19 TRI -SALOON 19 TZI UP TO O 5074</td> </tr> <tr> <td>96 123 686</td> <td>01</td> <td>COTE MOTEUR -SALOON 19 TZI SINCE O 5075</td> </tr> <tr> <td>96 031 884</td> <td>01</td> <td>COTE MOTEUR -ESTATE 19 TRI -ESTATE 19 TZI -GTI</td> </tr> <tr> <td>96 032 184</td> <td>01</td> <td>COTE MOTEUR -GTI 16V UP TO O 4922</td> </tr> <tr> <td>96 104 393</td> <td>01</td> <td>COTE MOTEUR -GTI 16V SINCE O 4923</td> </tr> </table>	96 102 571	01	INJECTN HARNESS COTE MOTEUR -16 TZI UP TO O 5074	96 113 423	01	COTE MOTEUR -16 TZI SINCE O 5075 UP TO O 5284	96 124 661	01	COTE MOTEUR -16 TZI SINCE O 5285	96 141 978	01	PARTIE MOTEUR -16 TZI SINCE O 5474 UP TO O 5683 COMPACT CONNECTOR (CER)	6543 SR	01	PARTIE MOTEUR	RP 96 141 978	01	-16 TZI SINCE O 5684 COMPACT CONNECTOR (CER)	95 634 054	01	COTE MOTEUR -SALOON 19 TRI -SALOON 19 TZI UP TO O 5074	96 123 686	01	COTE MOTEUR -SALOON 19 TZI SINCE O 5075	96 031 884	01	COTE MOTEUR -ESTATE 19 TRI -ESTATE 19 TZI -GTI	96 032 184	01	COTE MOTEUR -GTI 16V UP TO O 4922	96 104 393
96 102 571	01	INJECTN HARNESS COTE MOTEUR -16 TZI UP TO O 5074																																
96 113 423	01	COTE MOTEUR -16 TZI SINCE O 5075 UP TO O 5284																																
96 124 661	01	COTE MOTEUR -16 TZI SINCE O 5285																																
96 141 978	01	PARTIE MOTEUR -16 TZI SINCE O 5474 UP TO O 5683 COMPACT CONNECTOR (CER)																																
6543 SR	01	PARTIE MOTEUR																																
RP 96 141 978	01	-16 TZI SINCE O 5684 COMPACT CONNECTOR (CER)																																
95 634 054	01	COTE MOTEUR -SALOON 19 TRI -SALOON 19 TZI UP TO O 5074																																
96 123 686	01	COTE MOTEUR -SALOON 19 TZI SINCE O 5075																																
96 031 884	01	COTE MOTEUR -ESTATE 19 TRI -ESTATE 19 TZI -GTI																																
96 032 184	01	COTE MOTEUR -GTI 16V UP TO O 4922																																
96 104 393	01	COTE MOTEUR -GTI 16V SINCE O 4923																																
<p>E50 12200</p>																																		

Electrical Equipment *Wiring harness, engine*

30/01/98 GB C06 ↑ 1235 05 5012 30 PAGE 1	30/06/98 ENGINE HARNESS																																																			
		INJECTION HARNESS: BODY SIDE CER: COMPACT CONNECTOR (SOME VEHICLES 16TZI CAN BE EQUIPED)																																																		
		<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: center;">1</td> <td style="width: 15%;"></td> <td style="width: 15%; text-align: center;">96 060 848</td> <td style="width: 5%; text-align: center;">01</td> <td style="width: 60%;"> INJECTN HARNESS COTE CAISSE -16 TZI UP TO O 5074 </td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">96 107 262</td> <td style="text-align: center;">01</td> <td> COTE CAISSE -16 TZI SINCE O 5075 </td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">96 141 977</td> <td style="text-align: center;">01</td> <td> PARTIE CAISSE -16 TZI SINCE O 5474 UP TO O 5683 COMPACT CONNECTOR (CER) </td> </tr> <tr> <td></td> <td style="text-align: center;">6543 QQ</td> <td></td> <td style="text-align: center;">01</td> <td> PARTIE CAISSE -16 TZI SINCE O 5684 </td> </tr> <tr> <td></td> <td style="text-align: center;">RP</td> <td style="text-align: center;">96 141 977</td> <td style="text-align: center;">01</td> <td> COMPACT CONNECTOR (CER) </td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">96 107 251</td> <td style="text-align: center;">01</td> <td> COTE CAISSE -SALOON 19 TRI -SALOON 19 TZI </td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">96 032 340</td> <td style="text-align: center;">01</td> <td> COTE CAISSE -ESTATE 19 TRI -ESTATE 19 TZI UP TO O 5074 -GTI UP TO O 5074 </td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">96 110 898</td> <td style="text-align: center;">01</td> <td> COTE CAISSE -ESTATE 19 TZI SINCE O 5075 -GTI SINCE O 5075 </td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">96 031 889</td> <td style="text-align: center;">01</td> <td> COTE CAISSE -GTI 16V UP TO O 4922 </td> </tr> <tr> <td></td> <td></td> <td style="text-align: center;">96 104 394</td> <td style="text-align: center;">01</td> <td> COTE CAISSE -GTI 16V SINCE O 4923 </td> </tr> </table>	1		96 060 848	01	INJECTN HARNESS COTE CAISSE -16 TZI UP TO O 5074			96 107 262	01	COTE CAISSE -16 TZI SINCE O 5075			96 141 977	01	PARTIE CAISSE -16 TZI SINCE O 5474 UP TO O 5683 COMPACT CONNECTOR (CER)		6543 QQ		01	PARTIE CAISSE -16 TZI SINCE O 5684		RP	96 141 977	01	COMPACT CONNECTOR (CER)			96 107 251	01	COTE CAISSE -SALOON 19 TRI -SALOON 19 TZI			96 032 340	01	COTE CAISSE -ESTATE 19 TRI -ESTATE 19 TZI UP TO O 5074 -GTI UP TO O 5074			96 110 898	01	COTE CAISSE -ESTATE 19 TZI SINCE O 5075 -GTI SINCE O 5075			96 031 889	01	COTE CAISSE -GTI 16V UP TO O 4922			96 104 394	01	COTE CAISSE -GTI 16V SINCE O 4923
1		96 060 848	01	INJECTN HARNESS COTE CAISSE -16 TZI UP TO O 5074																																																
		96 107 262	01	COTE CAISSE -16 TZI SINCE O 5075																																																
		96 141 977	01	PARTIE CAISSE -16 TZI SINCE O 5474 UP TO O 5683 COMPACT CONNECTOR (CER)																																																
	6543 QQ		01	PARTIE CAISSE -16 TZI SINCE O 5684																																																
	RP	96 141 977	01	COMPACT CONNECTOR (CER)																																																
		96 107 251	01	COTE CAISSE -SALOON 19 TRI -SALOON 19 TZI																																																
		96 032 340	01	COTE CAISSE -ESTATE 19 TRI -ESTATE 19 TZI UP TO O 5074 -GTI UP TO O 5074																																																
		96 110 898	01	COTE CAISSE -ESTATE 19 TZI SINCE O 5075 -GTI SINCE O 5075																																																
		96 031 889	01	COTE CAISSE -GTI 16V UP TO O 4922																																																
		96 104 394	01	COTE CAISSE -GTI 16V SINCE O 4923																																																
E5012300																																																				

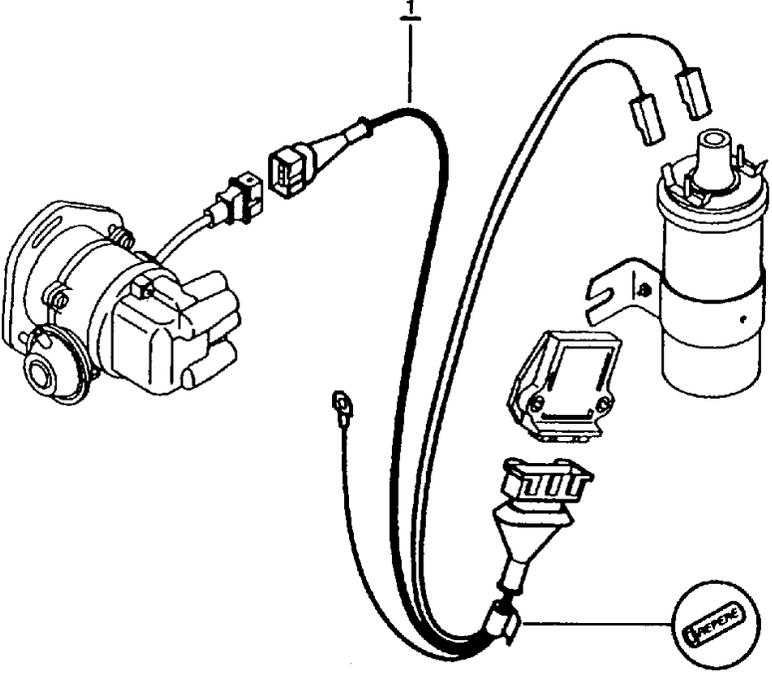


Electrical Equipment *Wiring harness, antipollution device*

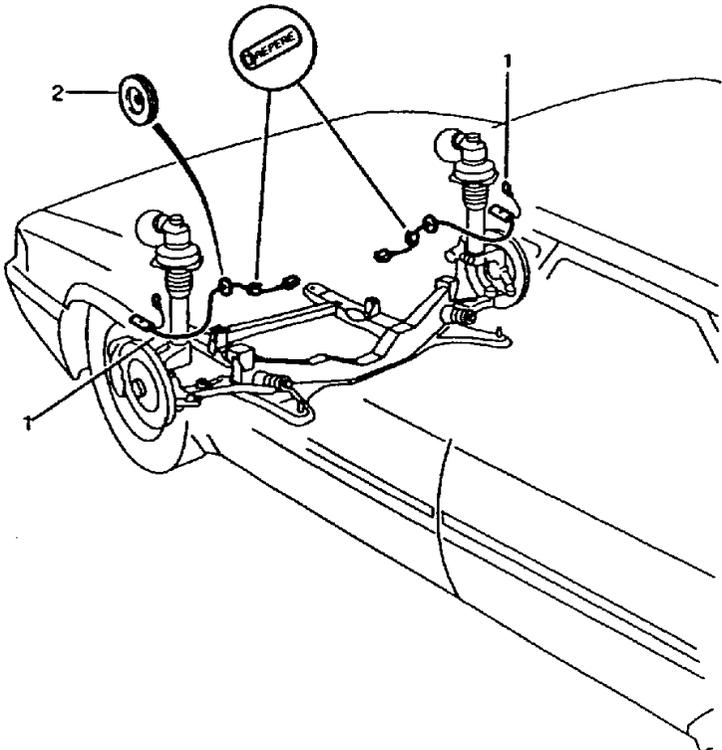
<p>30/01/98 GB C07 ↑ 1235 05 5013 02 PAGE 1</p>	<p>30/06/98 FAISCEAU ELECTROVANNE ANTIPOLLUTION</p>		
 <p>[11/96] D5013 020</p>	<p>1</p>	<p>96 056 155 01</p>	<p>ELECTRIC HARNES SURCHAUFFE CATALYSEUR</p>
<p>D5013020</p>			



Electrical Equipment *Wiring harness, ignition*

<p>30/01/98 GB C08 ↑ 1235 05 5014 01 PAGE 1</p>	<p>30/06/98 FAISCEAU ALLUMAGE</p>								
 <p style="text-align: center;">1</p> <p style="text-align: center;">[11/96] D5014010</p> <p style="text-align: right;">D5014010</p>		<p>1</p>	<table border="1"> <tr> <td data-bbox="1489 391 1713 478">95 598 782</td> <td data-bbox="1713 391 2083 478">01 IGN MOD HARNESS ALLUM TRANSISTORISE -SALOON 19 TRI -SALOON 19 TZI</td> </tr> <tr> <td data-bbox="1489 478 1713 590">96 040 244</td> <td data-bbox="1713 478 2083 590">01 IGNITION HARNES ALLUMAGE -ESTATE 19 TRI -ESTATE 19 TZI -GTI</td> </tr> <tr> <td data-bbox="1489 590 1713 702">96 008 800</td> <td data-bbox="1713 590 2083 702">01 IGN MOD HARNESS ALLUM TRANSISTORISE -GTI 16V</td> </tr> </table>	95 598 782	01 IGN MOD HARNESS ALLUM TRANSISTORISE -SALOON 19 TRI -SALOON 19 TZI	96 040 244	01 IGNITION HARNES ALLUMAGE -ESTATE 19 TRI -ESTATE 19 TZI -GTI	96 008 800	01 IGN MOD HARNESS ALLUM TRANSISTORISE -GTI 16V
95 598 782	01 IGN MOD HARNESS ALLUM TRANSISTORISE -SALOON 19 TRI -SALOON 19 TZI								
96 040 244	01 IGNITION HARNES ALLUMAGE -ESTATE 19 TRI -ESTATE 19 TZI -GTI								
96 008 800	01 IGN MOD HARNESS ALLUM TRANSISTORISE -GTI 16V								

Electrical Equipment *Wiring harness, brake*

30/01/98 GB C09 1235 05 5017 01 PAGE 1	30/06/98 FAISCEAU FREINS		
 <p style="text-align: right;">11/96 D5017010</p>	1	02	WEAR HARNESS USURE FREINS
	2	02	RUBBER GROMMET AV DIAM 2,5
D5017010			

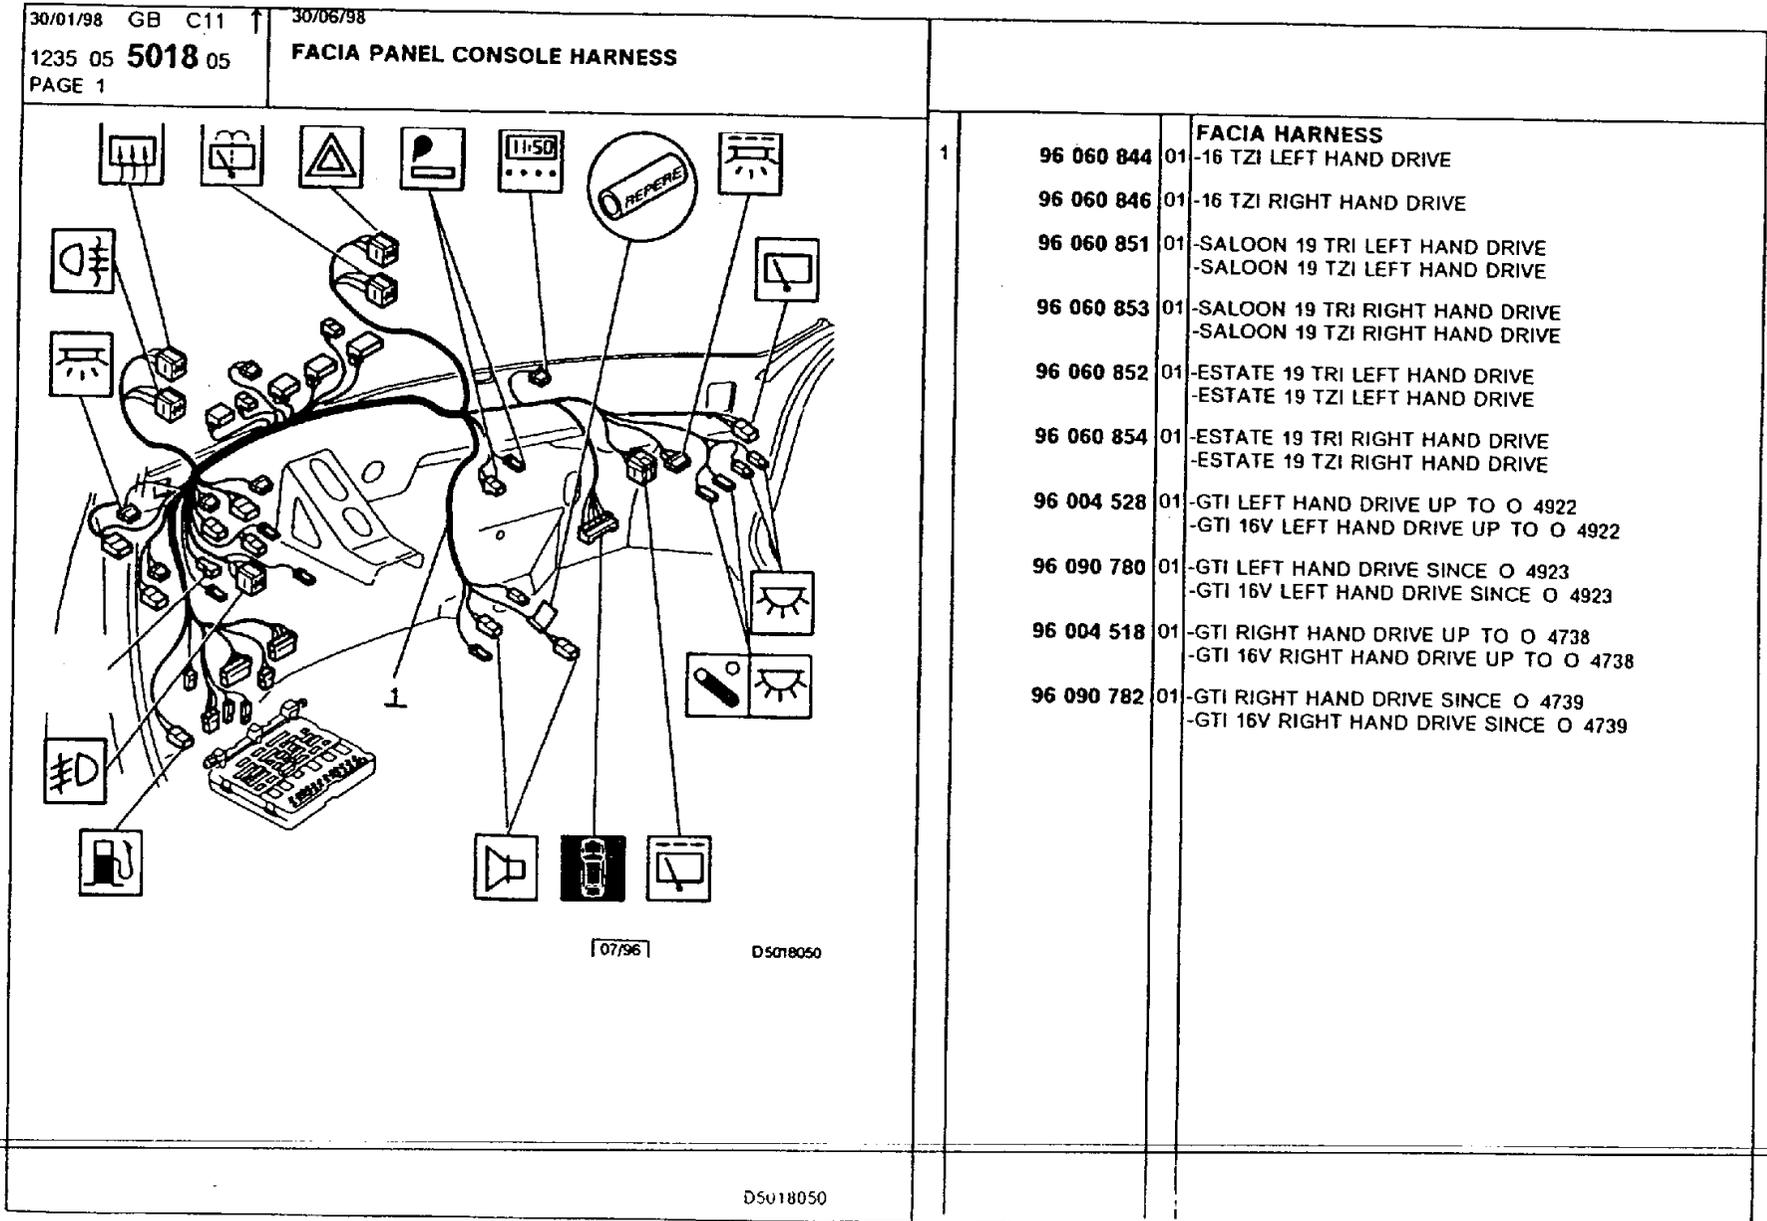


Electrical Equipment *Wiring harness, brake*

30/01/98 GB C10 ↑ 1235 05 5017 02 PAGE 1	30/06/98 FAISCEAU FREINS								
		1	<table border="1"> <tr> <td data-bbox="1375 421 1496 443">96 107 249</td> <td data-bbox="1496 421 1525 443">01</td> <td data-bbox="1525 395 2101 421">ABS HARNESS</td> </tr> <tr> <td data-bbox="1375 464 1496 486">96 007 661</td> <td data-bbox="1496 464 1525 486">01</td> <td data-bbox="1525 464 2101 512">PROLONGATEUR -RIGHT HAND DRIVE</td> </tr> </table>	96 107 249	01	ABS HARNESS	96 007 661	01	PROLONGATEUR -RIGHT HAND DRIVE
96 107 249	01	ABS HARNESS							
96 007 661	01	PROLONGATEUR -RIGHT HAND DRIVE							
D5017020									

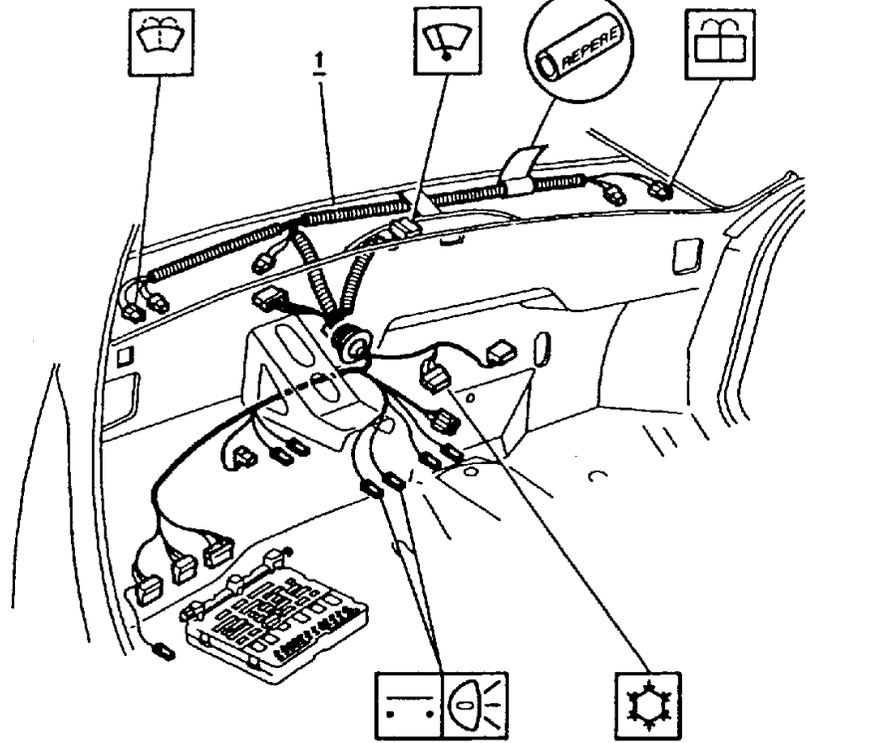


Electrical Equipment *Wiring harness, fascia panel console*





Electrical Equipment *Wiring harness, fascia panel console*

<p>30/01/98 GB C12 ↑ 1235 05 5018 40 PAGE 1</p>	<p>30/06/98 FACIA PANEL CONSOLE HARNESS</p>		
 <p style="text-align: center;">09/96 D5018400</p> <p style="text-align: right;">D5018400</p>	<p>1</p> <p>96 006 482 01</p> <p>96 019 021 01</p>	<p>WIPER HARNESS</p> <p>-LEFT HAND DRIVE</p> <p>-RIGHT HAND DRIVE</p>	

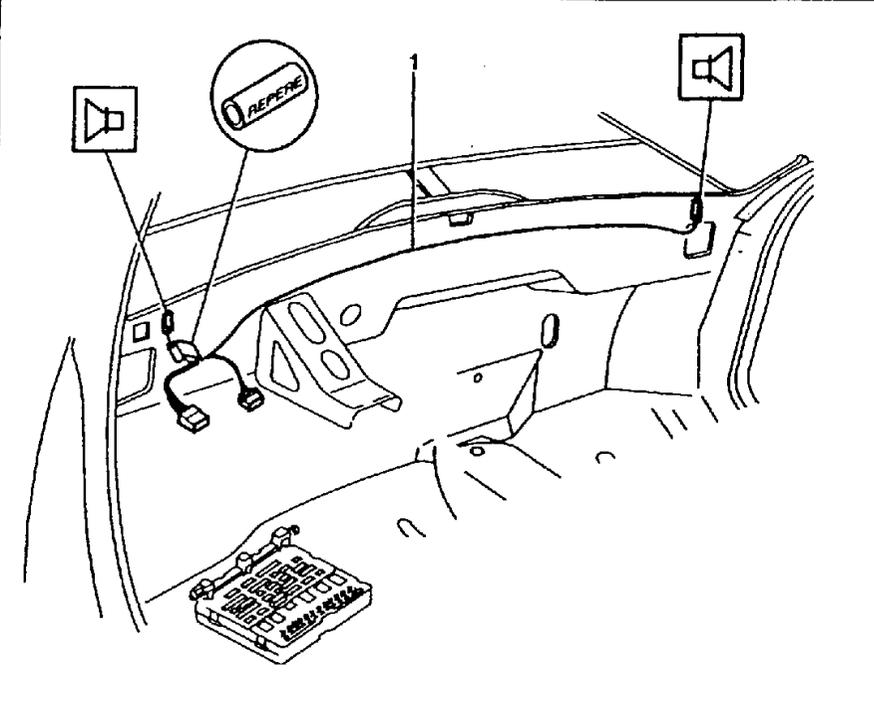


Electrical Equipment *Wiring harness, fascia panel console*

<p>30/01/98 GB C13 ↑ 30/06/98 1235 05 5018 50 PAGE 1</p>	<p>FACIA PANEL CONSOLE HARNESS</p>	
<p style="text-align: center;">09/96 DS018500</p>	<p>1 96 004 503</p>	<p>01 SWITCH HARNESS DE COMMUTEUR</p>
<p style="text-align: center;">DS018500</p>		



Electrical Equipment *Wiring harness, fascia panel console*

30/01/98 GB C14 ↑ 1235 05 5018 51 PAGE 1	30/06/98 FACIA PANEL CONSOLE HARNESS		
 <p data-bbox="918 1165 1164 1197">[09/98] D5018510</p> <p data-bbox="1075 1452 1164 1484">D5018510</p>	1	95 637 362	01 RADIO HARNESS AV

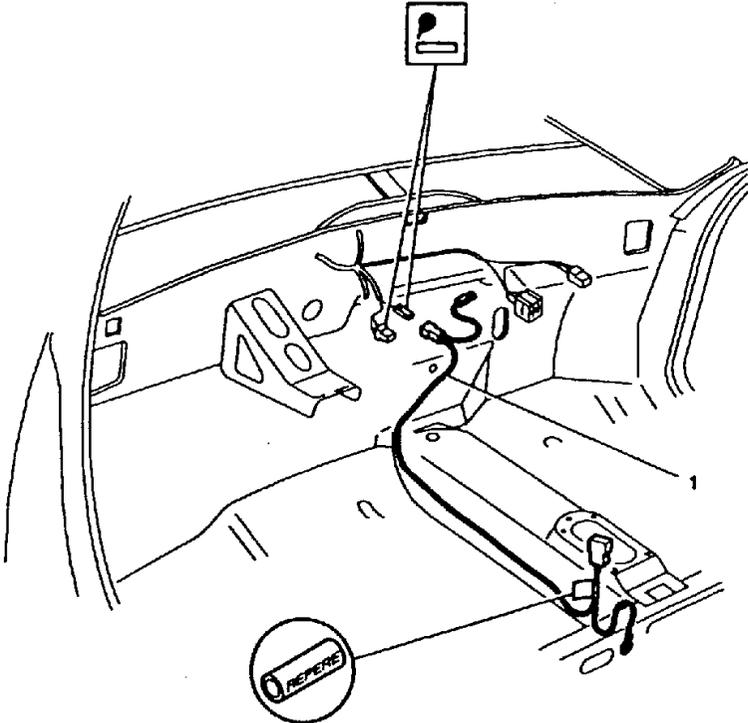


Electrical Equipment *Wiring harness, fascia panel console*

30/01/98 GB C15 ↑ 1235 05 5018 59 PAGE 1	30/06/98 FACIA PANEL CONSOLE HARNESS		
1 95 613 127 NFP	01 ELECTRIC HARNES MASSE BOIT INTER CON		



Electrical Equipment *Wiring harness, fascia panel console*

<p>30/01/98 GB D15 ↓ 1235 05 5018 60 PAGE 1</p>	<p>30/06/98 FACIA PANEL CONSOLE HARNESS</p>		
 <p data-bbox="974 1161 1146 1184">09/86 DS016 600</p> <p data-bbox="1079 1465 1169 1487">DS018600</p>		<p>1 95 638 993</p>	<p>01 SPEEDO HARNESS ECLAIREUR GRILLE</p>



Electrical Equipment *Wiring harness, interior lamps*

30/01/98 GB D14 1235 05 5021 02 PAGE 1	30/06/98 INTERIOR LAMP HARNESS														
<p style="text-align: right;">10/96 D502102C</p>		1	<table border="1"> <tr> <td>95 631 069</td> <td>01</td> <td>INT LAMP HARNES CDE INFRAROUGE -SALOON</td> </tr> <tr> <td>95 635 387</td> <td>01</td> <td>CDE INFRAROUGE -ESTATE</td> </tr> <tr> <td>NFP</td> <td></td> <td></td> </tr> <tr> <td>95 635 385</td> <td>01</td> <td>CDE INFRAROUGE -SUN-ROOF</td> </tr> </table>	95 631 069	01	INT LAMP HARNES CDE INFRAROUGE -SALOON	95 635 387	01	CDE INFRAROUGE -ESTATE	NFP			95 635 385	01	CDE INFRAROUGE -SUN-ROOF
95 631 069	01	INT LAMP HARNES CDE INFRAROUGE -SALOON													
95 635 387	01	CDE INFRAROUGE -ESTATE													
NFP															
95 635 385	01	CDE INFRAROUGE -SUN-ROOF													
D5021020															



Electrical Equipment *Wiring harness, doors*

<p>30/01/98 GB D13 1235 05 5023 01 PAGE 1</p>	<p>30/06/98 FAISCEAU PORTES</p>		
<p style="text-align: center;">09/98 D5023010</p> <p style="text-align: right;">D5023010</p>	<p>1</p>	<p>WINDOW HARNESS</p> <ul style="list-style-type: none"> 95 634 979 01 -16 TZI -19 TRI -19 TZI DRIVER SIDE 95 634 980 01 -GTI -GTI 16V DRIVER SIDE 95 634 981 01 PASSENGER SIDE 	



Electrical Equipment *Wiring harness, intermediate right lights*

30/01/98 GB D12 ↓ 30/06/98 1235 05 5024 05 PAGE 1	INTERMEDIATE RIGHT-LIGHT HARNESS																							
		<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" style="text-align: center;">INTERIOR HARNES</td> </tr> <tr> <td style="width: 50%; padding: 2px;">1 96 009 790</td> <td style="width: 50%; padding: 2px;">01 -16 TZI</td> </tr> <tr> <td style="padding: 2px;">RP 96 009 793</td> <td style="padding: 2px;">01 -19 TRI</td> </tr> <tr> <td></td> <td style="padding: 2px;">-19 TZI</td> </tr> <tr> <td style="padding: 2px;">96 009 784</td> <td style="padding: 2px;">01 -GTI UP TO O 5284</td> </tr> <tr> <td></td> <td style="padding: 2px;">-GTI 16V UP TO O 5284</td> </tr> <tr> <td style="padding: 2px;">96 133 222</td> <td style="padding: 2px;">01 -GTI SINCE O 5285</td> </tr> <tr> <td style="padding: 2px;">RP 96 133 221</td> <td style="padding: 2px;">01 -GTI 16V SINCE O 5285</td> </tr> <tr> <td style="padding: 2px;">96 009 792</td> <td style="padding: 2px;">01 UP TO O 4738</td> </tr> <tr> <td style="padding: 2px;">RP 96 009 795</td> <td style="padding: 2px;">01</td> </tr> <tr> <td style="padding: 2px;">96 061 046</td> <td style="padding: 2px;">01 SINCE O 4739</td> </tr> </table>	INTERIOR HARNES		1 96 009 790	01 -16 TZI	RP 96 009 793	01 -19 TRI		-19 TZI	96 009 784	01 -GTI UP TO O 5284		-GTI 16V UP TO O 5284	96 133 222	01 -GTI SINCE O 5285	RP 96 133 221	01 -GTI 16V SINCE O 5285	96 009 792	01 UP TO O 4738	RP 96 009 795	01	96 061 046	01 SINCE O 4739
INTERIOR HARNES																								
1 96 009 790	01 -16 TZI																							
RP 96 009 793	01 -19 TRI																							
	-19 TZI																							
96 009 784	01 -GTI UP TO O 5284																							
	-GTI 16V UP TO O 5284																							
96 133 222	01 -GTI SINCE O 5285																							
RP 96 133 221	01 -GTI 16V SINCE O 5285																							
96 009 792	01 UP TO O 4738																							
RP 96 009 795	01																							
96 061 046	01 SINCE O 4739																							
D5024050																								



Electrical Equipment *Wiring harness, intermediate right lights*

<p>30/01/98 GB D11 ↓ 1235 05 5024 30 PAGE 1</p>	<p>30/06/98 INTERMEDIATE RIGHT-LIGHT HARNESS</p>		
<p style="text-align: center;">11/96</p> <p style="text-align: right;">E5024300</p>	<p>1 95 635 418 01</p> <p>2 96 041 697 01</p>	<p>GAUGE HARNESS DE JAUGE CARBURANT</p> <p>PUMP HARNESS POMPE A CALCULATEUR</p>	

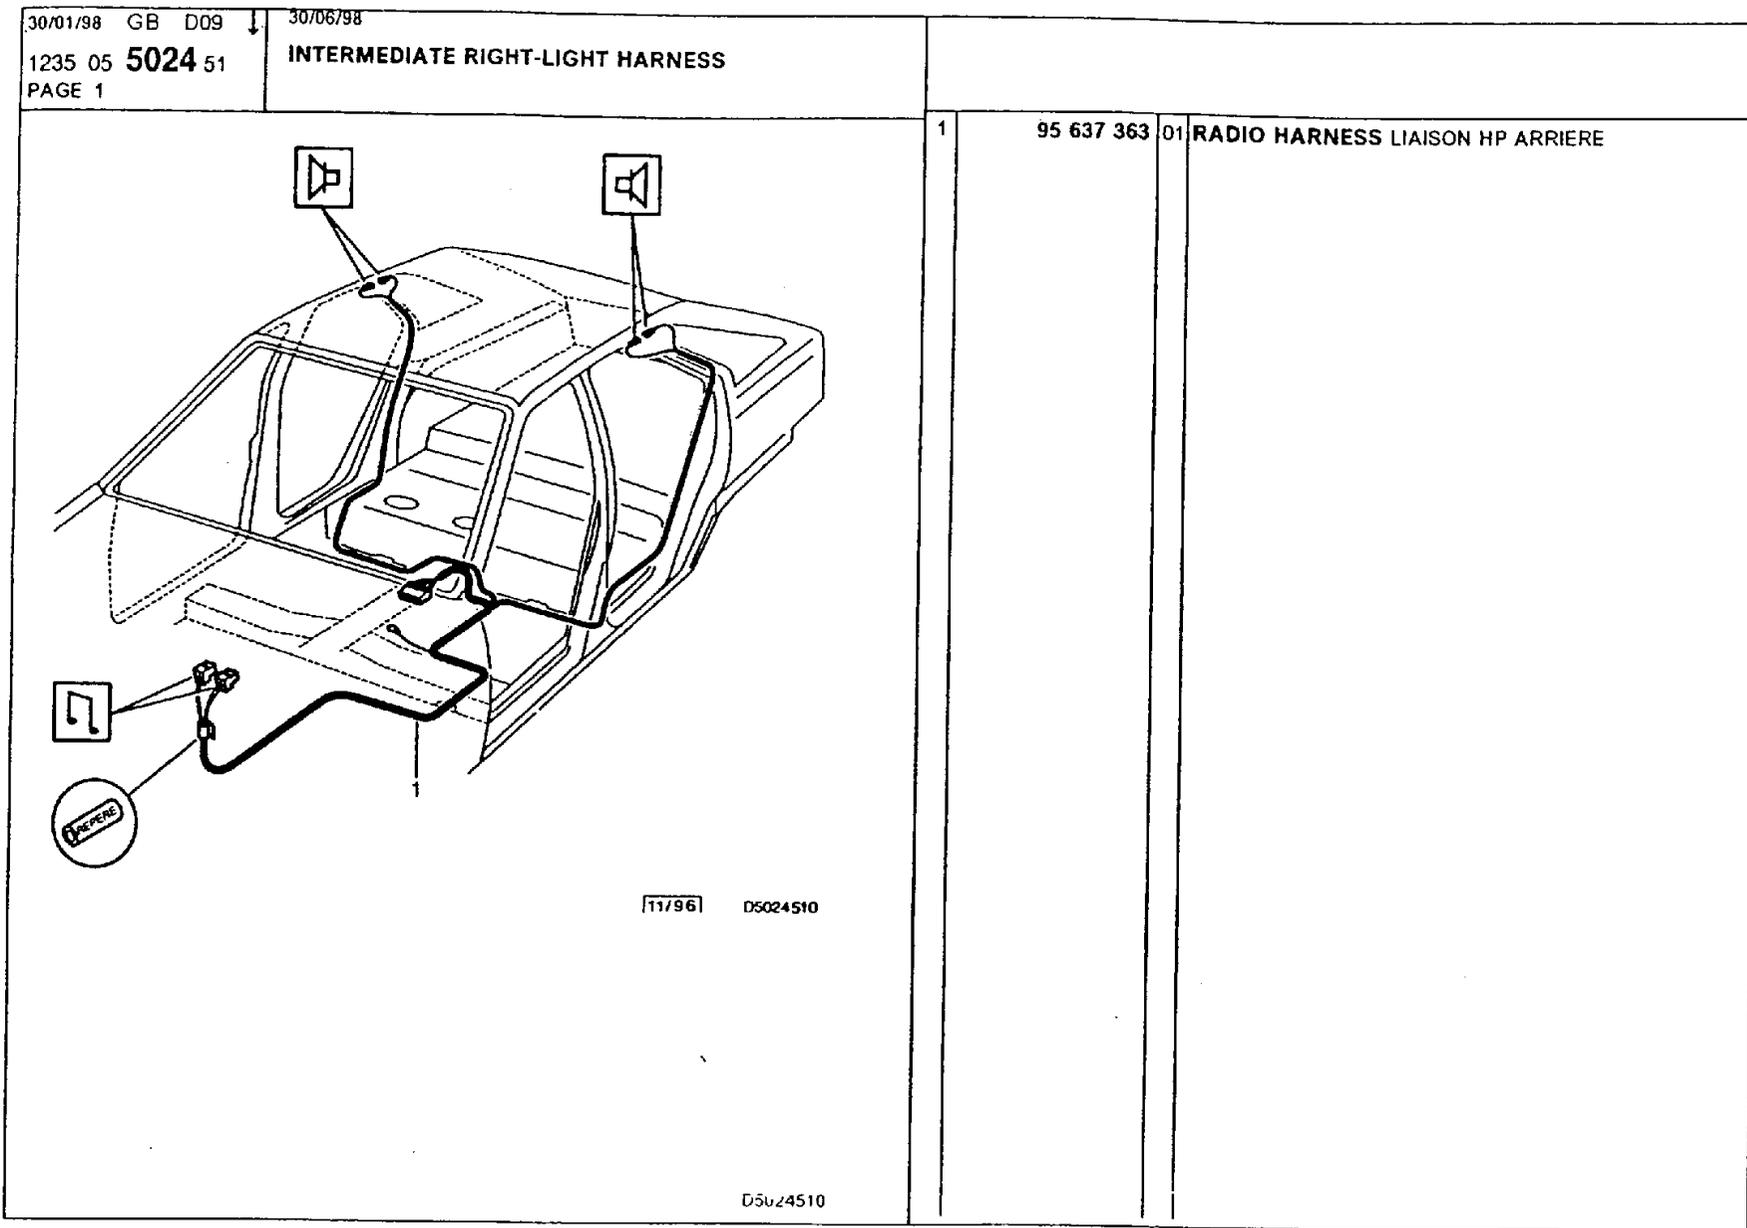


Electrical Equipment *Wiring harness, intermediate right lights*

<p>30/01/98 GB D10 ↓ 1235 05 5024 50 PAGE 1</p>	<p>30/06/98 INTERMEDIATE RIGHT-LIGHT HARNESS</p>		
		<p>1 95 635 338 01</p> <p>2 95 611 824 01</p> <p>96 004 520 01</p>	<p>REAR HARNESS</p> <p>LEFT -SALOON</p> <p>LEFT -ESTATE</p> <p>R/WIPER HARNESS RIGHT</p>
<p>DS024500</p>			



Electrical Equipment *Wiring harness, intermediate right lights*



Electrical Equipment *Wiring harness, rear lights*

<p>30/01/98 GB D08 ↓ 30/06/98 1235 05 5025 01 PAGE 1</p>	<p>REAR WIRING HARNESS</p>		
	<p>1 95 569 072 01 2 95 606 763 01 3 95 576 721 01 3 95 576 719 01 95 630 129 01 RP 96 016 837 01</p>	<p>RR LIGHT HARNES ENTRE FEUX -SALOON</p> <p>ENTRE FEUX -ESTATE</p> <p>TRUNK HARNESS ECLAIREUR COFFRE</p> <p>ELECTRIC HARNES MASSE DE FEUX -SALOON</p> <p>MASSE DE FEUX -ESTATE</p>	
<p>D5025010</p>			

Electrical Equipment *Wiring harness, tailgate*

<p>30/01/98 GB D07 ↓ 1235 05 5025 30 PAGE 1</p>	<p>30/06/98 REAR WIRING HARNESS</p>		
<p style="text-align: right;">11/96 D5025 300</p>	<p>1</p> <p>2</p> <p>3</p> <p>4</p>	<p>TLGATE HARNESS</p> <p>95 569 069 01 LEFT -SALOON</p> <p>95 633 353 01 LEFT -ESTATE</p> <p>95 631 070 01 RIGHT -SALOON</p> <p>95 637 329 01 RIGHT -ESTATE</p> <p>PROTECTOR</p> <p>95 576 230 01 LEFT AR</p> <p>95 576 229 01 RIGHT AR</p> <p>HARNESS SHEATH</p> <p>95 578 254 01 -SALOON</p> <p>95 637 763 01 FAISCEAU VOLET -ESTATE</p>	
<p>D5025300</p>			

Electrical Equipment *Connectors, clip holder*

<p>30/01/98 GB D06 ↓ 1235 05 5120 10 PAGE 1</p>	<p>30/06/98 CLIP HOLDER</p>																																																																																						
<p style="text-align: center;">03781 05120100</p>		<p>(A) - NATURAL (B) - WHITE (C) - BLUE (D) - GREY (E) - YELLOW (F) - CHESTNUT (G) - MALLOW (H) - BLACK (J) - ORANGE (K) - RED (L) - GREEN</p>	<table border="1"> <tr> <td>1</td> <td>95 556 374</td> <td>99</td> <td>ELEC CLIP-HOLDR (A) 1 VOIE DE 5</td> </tr> <tr> <td></td> <td>96 023 992</td> <td>99</td> <td>(A) 1 VOIE DE 6,35</td> </tr> <tr> <td></td> <td>95 551 034</td> <td>99</td> <td>(A) 1 VOIE DE 6,35</td> </tr> <tr> <td></td> <td>79 03 097 394</td> <td>99</td> <td>(A) 3 VOIES DE 6,35</td> </tr> <tr> <td></td> <td>RP 6542 33</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>79 03 097 996</td> <td>99</td> <td>BLADE-HOLDER 1 VOIE</td> </tr> <tr> <td></td> <td>95 579 815</td> <td>99</td> <td>ELEC CLIP-HOLDR 2 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 967</td> <td>99</td> <td>(B) 2 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 J8</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 579 817</td> <td>99</td> <td>3 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 13</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 972</td> <td>99</td> <td>(B) 3 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 F0</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 976</td> <td>99</td> <td>(B) 4 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 K1</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 979</td> <td>99</td> <td>(B) 5 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 981</td> <td>99</td> <td>(B) 6 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 K2</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 983</td> <td>99</td> <td>(B) 7 VOIES DE 5</td> </tr> <tr> <td></td> <td>92 525 009</td> <td>99</td> <td>(B) 8 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 K3</td> <td>01</td> <td></td> </tr> </table>	1	95 556 374	99	ELEC CLIP-HOLDR (A) 1 VOIE DE 5		96 023 992	99	(A) 1 VOIE DE 6,35		95 551 034	99	(A) 1 VOIE DE 6,35		79 03 097 394	99	(A) 3 VOIES DE 6,35		RP 6542 33	01			79 03 097 996	99	BLADE-HOLDER 1 VOIE		95 579 815	99	ELEC CLIP-HOLDR 2 VOIES DE 5		95 589 967	99	(B) 2 VOIES DE 5		RP 6542 J8	01			95 579 817	99	3 VOIES DE 5		RP 6542 13	01			95 589 972	99	(B) 3 VOIES DE 5		RP 6542 F0	01			95 589 976	99	(B) 4 VOIES DE 5		RP 6542 K1	01			95 589 979	99	(B) 5 VOIES DE 5		95 589 981	99	(B) 6 VOIES DE 5		RP 6542 K2	01			95 589 983	99	(B) 7 VOIES DE 5		92 525 009	99	(B) 8 VOIES DE 5		RP 6542 K3	01	
1	95 556 374	99	ELEC CLIP-HOLDR (A) 1 VOIE DE 5																																																																																				
	96 023 992	99	(A) 1 VOIE DE 6,35																																																																																				
	95 551 034	99	(A) 1 VOIE DE 6,35																																																																																				
	79 03 097 394	99	(A) 3 VOIES DE 6,35																																																																																				
	RP 6542 33	01																																																																																					
	79 03 097 996	99	BLADE-HOLDER 1 VOIE																																																																																				
	95 579 815	99	ELEC CLIP-HOLDR 2 VOIES DE 5																																																																																				
	95 589 967	99	(B) 2 VOIES DE 5																																																																																				
	RP 6542 J8	01																																																																																					
	95 579 817	99	3 VOIES DE 5																																																																																				
	RP 6542 13	01																																																																																					
	95 589 972	99	(B) 3 VOIES DE 5																																																																																				
	RP 6542 F0	01																																																																																					
	95 589 976	99	(B) 4 VOIES DE 5																																																																																				
	RP 6542 K1	01																																																																																					
	95 589 979	99	(B) 5 VOIES DE 5																																																																																				
	95 589 981	99	(B) 6 VOIES DE 5																																																																																				
	RP 6542 K2	01																																																																																					
	95 589 983	99	(B) 7 VOIES DE 5																																																																																				
	92 525 009	99	(B) 8 VOIES DE 5																																																																																				
	RP 6542 K3	01																																																																																					
<p style="text-align: right;">E5120100</p>		<p style="text-align: right;">.../...</p>																																																																																					

Electrical Equipment *Connectors, clip holder*

30/01/98 GB D05 1235 05 5120 10 PAGE 2	30/06/98 CLIP HOLDER																																																																																														
<p style="text-align: center;">13/11 05120100</p>		(A) - NATURAL (B) - WHITE (C) - BLUE (D) - GREY (E) - YELLOW (F) - CHESTNUT (G) - MALLOW (H) - BLACK (J) - ORANGE (K) - RED (L) - GREEN	<table border="1"> <tr> <td colspan="2"></td> <td colspan="2" style="text-align: center;">ELEC CLIP-HOLDR</td> </tr> <tr> <td>1</td> <td>95 579 813</td> <td>99</td> <td>(B) 10 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 W2</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 985</td> <td>99</td> <td>(B) 10 VOIES DE 5</td> </tr> <tr> <td></td> <td>79 03 097 507</td> <td>99</td> <td>(B)</td> </tr> <tr> <td></td> <td>RP 6542 42</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 971</td> <td>99</td> <td>(C) 3 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 975</td> <td>99</td> <td>(C) 4 VOIES DE 5</td> </tr> <tr> <td></td> <td>96 034 632</td> <td>99</td> <td>(D)H3 4 VOIES</td> </tr> <tr> <td></td> <td>95 589 965</td> <td>99</td> <td>(E) 2 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 E2</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 974</td> <td>99</td> <td>(E) 4 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 978</td> <td>99</td> <td>(E) 5 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 V2</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>92 525 011</td> <td>99</td> <td>(E) 6 VOIES DE 5</td> </tr> <tr> <td></td> <td>92 525 010</td> <td>99</td> <td>(E) 10 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 964</td> <td>99</td> <td>(F) 2 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 J9</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 579 681</td> <td>99</td> <td>3 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 968</td> <td>99</td> <td>(F) 3 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 973</td> <td>99</td> <td>(F) 4 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 977</td> <td>99</td> <td>(F) 5 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 E3</td> <td>01</td> <td></td> </tr> </table>			ELEC CLIP-HOLDR		1	95 579 813	99	(B) 10 VOIES DE 5		RP 6542 W2	01			95 589 985	99	(B) 10 VOIES DE 5		79 03 097 507	99	(B)		RP 6542 42	01			95 589 971	99	(C) 3 VOIES DE 5		95 589 975	99	(C) 4 VOIES DE 5		96 034 632	99	(D)H3 4 VOIES		95 589 965	99	(E) 2 VOIES DE 5		RP 6542 E2	01			95 589 974	99	(E) 4 VOIES DE 5		95 589 978	99	(E) 5 VOIES DE 5		RP 6542 V2	01			92 525 011	99	(E) 6 VOIES DE 5		92 525 010	99	(E) 10 VOIES DE 5		95 589 964	99	(F) 2 VOIES DE 5		RP 6542 J9	01			95 579 681	99	3 VOIES DE 5		95 589 968	99	(F) 3 VOIES DE 5		95 589 973	99	(F) 4 VOIES DE 5		95 589 977	99	(F) 5 VOIES DE 5		RP 6542 E3	01	
		ELEC CLIP-HOLDR																																																																																													
1	95 579 813	99	(B) 10 VOIES DE 5																																																																																												
	RP 6542 W2	01																																																																																													
	95 589 985	99	(B) 10 VOIES DE 5																																																																																												
	79 03 097 507	99	(B)																																																																																												
	RP 6542 42	01																																																																																													
	95 589 971	99	(C) 3 VOIES DE 5																																																																																												
	95 589 975	99	(C) 4 VOIES DE 5																																																																																												
	96 034 632	99	(D)H3 4 VOIES																																																																																												
	95 589 965	99	(E) 2 VOIES DE 5																																																																																												
	RP 6542 E2	01																																																																																													
	95 589 974	99	(E) 4 VOIES DE 5																																																																																												
	95 589 978	99	(E) 5 VOIES DE 5																																																																																												
	RP 6542 V2	01																																																																																													
	92 525 011	99	(E) 6 VOIES DE 5																																																																																												
	92 525 010	99	(E) 10 VOIES DE 5																																																																																												
	95 589 964	99	(F) 2 VOIES DE 5																																																																																												
	RP 6542 J9	01																																																																																													
	95 579 681	99	3 VOIES DE 5																																																																																												
	95 589 968	99	(F) 3 VOIES DE 5																																																																																												
	95 589 973	99	(F) 4 VOIES DE 5																																																																																												
	95 589 977	99	(F) 5 VOIES DE 5																																																																																												
	RP 6542 E3	01																																																																																													

E5120100

.../...

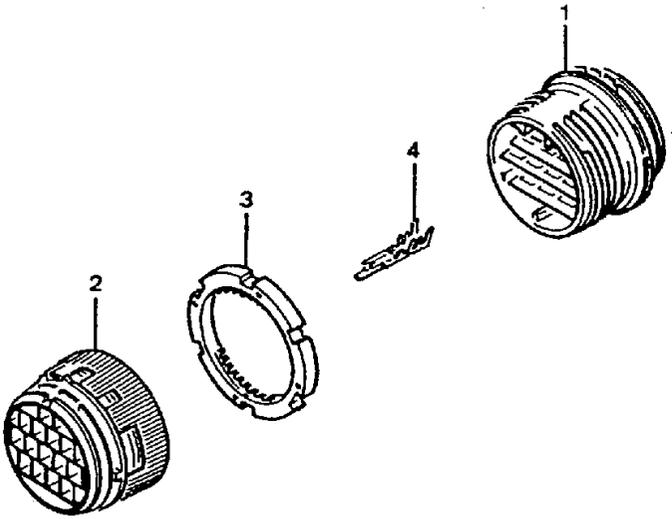
Electrical Equipment *Connectors, clip holder*

<p>30/01/98 GB D04 ↓ 1235 05 5120 10 PAGE 3</p>	<p>30/06/98 CLIP HOLDER</p>		
		<p>(A) - NATURAL (B) - WHITE (C) - BLUE (D) - GREY (E) - YELLOW (F) - CHESTNUT (G) - MALLOW (H) - BLACK (J) - ORANGE (K) - RED (L) - GREEN</p>	
<p>ES120100</p>		<p>1 95 589 980 RP 6542 V4 01 95 589 982 RP 6542 G7 01 95 589 984 95 551 035 NFP 5 451 681 79 03 097 511 79 03 097 514 RP 6541 84 01 95 589 970 95 589 966 RP 6542 K0 01 95 589 969 79 03 097 395 92 550 279 RP 6542 49 01 92 550 292 RP 6542 06 01 92 550 293 RP 6542 47 01 92 550 280</p>	<p>ELEC CLIP-HOLDR (F) 6 VOIES DE 5 (F) 7 VOIES DE 5 (F) 10 VOIES 5 (H) 1 VOIE DE 6,35 (H) 2 VOIES DE 9,5 (H) 25 VOIES DE 5 (H) 8 VOIES 2X4 (J)3 VOIES DE 5 (K) 2 VOIES DE 5 (K) 3 VOIES DE 5 (L) 4 VOIES DE 5 (C) 3 VOIES DE 5 4 VOIES DE 5 (E) 2 VOIES DE 5 (F) 5 VOIES DE 5</p>

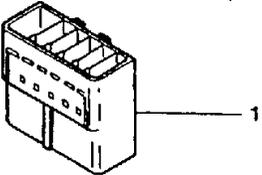
Electrical Equipment *Connectors, clip holder*

<p>30/01/98 GB D03 1235 05 5120 10 PAGE 4</p>	<p>30706798 CLIP HOLDER</p>																																										
<p style="text-align: center;">14/7/91 D5120100</p>		<p>(A) - NATURAL (B) - WHITE (C) - BLUE (D) - GREY (E) - YELLOW (F) - CHESTNUT (G) - MALLOW (H) - BLACK (J) - ORANGE (K) - RED (L) - GREEN</p>	<table border="1"> <tr> <td>1</td> <td>92 550 274 RP 6542 48</td> <td>99 01</td> <td>ELEC CLIP-HOLDR (K) 3 VOIES DE 5</td> </tr> <tr> <td></td> <td>92 550 132 NFP</td> <td>99</td> <td>(L) 15 VOIES DE 3</td> </tr> <tr> <td>2</td> <td>79 03 097 529</td> <td>99</td> <td>(F) 1 VOIE DE 6,35</td> </tr> <tr> <td></td> <td>79 03 097 526</td> <td>99</td> <td>(L) 1 VOIE DE 6,35</td> </tr> <tr> <td></td> <td>79 03 097 525</td> <td>99</td> <td>(H) 1 VOIE DE 6,35</td> </tr> <tr> <td>3</td> <td>95 499 037</td> <td>99</td> <td>(F) 7 VOIES DE 5</td> </tr> <tr> <td>4</td> <td>92 550 303 NFP</td> <td>01</td> <td>15 VOIES DE 2,8</td> </tr> <tr> <td>5</td> <td>95 559 028</td> <td>99</td> <td>(A) 5 VOIES DE 6,3</td> </tr> <tr> <td>6</td> <td>95 623 770 NFP</td> <td>99</td> <td>CONNECTOR (B) 6 VOIES DE 5</td> </tr> <tr> <td>22</td> <td>95 600 095</td> <td>99</td> <td>ELEC CLIP-HOLDR (E) 3 VOIES DE 5</td> </tr> </table>	1	92 550 274 RP 6542 48	99 01	ELEC CLIP-HOLDR (K) 3 VOIES DE 5		92 550 132 NFP	99	(L) 15 VOIES DE 3	2	79 03 097 529	99	(F) 1 VOIE DE 6,35		79 03 097 526	99	(L) 1 VOIE DE 6,35		79 03 097 525	99	(H) 1 VOIE DE 6,35	3	95 499 037	99	(F) 7 VOIES DE 5	4	92 550 303 NFP	01	15 VOIES DE 2,8	5	95 559 028	99	(A) 5 VOIES DE 6,3	6	95 623 770 NFP	99	CONNECTOR (B) 6 VOIES DE 5	22	95 600 095	99	ELEC CLIP-HOLDR (E) 3 VOIES DE 5
1	92 550 274 RP 6542 48	99 01	ELEC CLIP-HOLDR (K) 3 VOIES DE 5																																								
	92 550 132 NFP	99	(L) 15 VOIES DE 3																																								
2	79 03 097 529	99	(F) 1 VOIE DE 6,35																																								
	79 03 097 526	99	(L) 1 VOIE DE 6,35																																								
	79 03 097 525	99	(H) 1 VOIE DE 6,35																																								
3	95 499 037	99	(F) 7 VOIES DE 5																																								
4	92 550 303 NFP	01	15 VOIES DE 2,8																																								
5	95 559 028	99	(A) 5 VOIES DE 6,3																																								
6	95 623 770 NFP	99	CONNECTOR (B) 6 VOIES DE 5																																								
22	95 600 095	99	ELEC CLIP-HOLDR (E) 3 VOIES DE 5																																								
<p style="text-align: right;">E5120100</p>																																											

Electrical Equipment Connectors, clip holder

<p>30/01/98 GB D02 1235 05 5120 40 PAGE 1</p>	<p>30/06/98 CLIP HOLDER</p>		
 <p style="text-align: center;">12/93</p>		<p>1 96 028 623 RP 6542 R0</p> <p>96 028 621 RP 6542 CX</p> <p>2 96 028 627 RP 6542 R3</p> <p>96 028 622</p> <p>3 96 028 643 RP 6500 68</p> <p>96 028 642 RP 1255 25</p> <p>4 96 033 410</p>	<p>ELEC CLIP-HOLDR (H) 14 VOIES DE 3</p> <p>(H) 10 VOIES DE 3</p> <p>(H) 14 VOIES DE 3</p> <p>(H) 10 VOIES DE 3</p> <p>PLASTIC NUT (CLIP HOLDER 14 WAYS)</p> <p>(CLIP HOLDER 10 WAYS)</p> <p>HARNESS CLIP A=2,8B=2,5MM2</p>
<p>E5120400</p>			

Electrical Equipment *Connectors, tongue holder*

<p>30/01/98 GB D01 1235 05 5123 10 PAGE 1</p>	<p>30/06/98 TONGUE HOLDER</p>																																																																						
<div style="text-align: center;">  </div> <p style="text-align: center;">1230 02/88 5-512-11</p> <p style="text-align: right;">E5123100</p>		<p>(A) - NATURAL (B) - WHITE (C) - BLUE (D) - GREY (E) - YELLOW (F) - CHESTNUT (G) - MALLOW (H) - BLACK (J) - ORANGE (K) - RED (L) - GREEN</p>	<table border="1"> <tr> <td data-bbox="1267 660 1491 692">1</td> <td data-bbox="1491 660 1525 692">95 558 841</td> <td data-bbox="1525 660 1559 692">99</td> <td data-bbox="1559 660 2101 692">BLADE-HOLDER (A) 1 VOIE DE 6,35</td> </tr> <tr> <td></td> <td>95 589 988</td> <td>99</td> <td>(B) 2 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 Q4</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 991</td> <td>99</td> <td>(B) 3 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 600 098</td> <td>99</td> <td>(B) 5 VOIES DE 5</td> </tr> <tr> <td></td> <td>92 525 012</td> <td>99</td> <td>(B) 8 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 79 05 521 693</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 987</td> <td>99</td> <td>(E) 2 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 600 097</td> <td>99</td> <td>(E) 3 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 600 096</td> <td>99</td> <td>(E) 6 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 600 099</td> <td>99</td> <td>(E) 10 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 986</td> <td>99</td> <td>(F) 2 VOIES DE 5</td> </tr> <tr> <td></td> <td>RP 6542 VA</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td>95 589 989</td> <td>99</td> <td>(F) 3 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 992</td> <td>99</td> <td>(F) 4 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 993</td> <td>99</td> <td>(F) 7 VOIES DE 5</td> </tr> <tr> <td></td> <td>95 589 990</td> <td>99</td> <td>(L) 3 VOIES DE 5</td> </tr> </table>	1	95 558 841	99	BLADE-HOLDER (A) 1 VOIE DE 6,35		95 589 988	99	(B) 2 VOIES DE 5		RP 6542 Q4	01			95 589 991	99	(B) 3 VOIES DE 5		95 600 098	99	(B) 5 VOIES DE 5		92 525 012	99	(B) 8 VOIES DE 5		RP 79 05 521 693	01			95 589 987	99	(E) 2 VOIES DE 5		95 600 097	99	(E) 3 VOIES DE 5		95 600 096	99	(E) 6 VOIES DE 5		95 600 099	99	(E) 10 VOIES DE 5		95 589 986	99	(F) 2 VOIES DE 5		RP 6542 VA	01			95 589 989	99	(F) 3 VOIES DE 5		95 589 992	99	(F) 4 VOIES DE 5		95 589 993	99	(F) 7 VOIES DE 5		95 589 990	99	(L) 3 VOIES DE 5
1	95 558 841	99	BLADE-HOLDER (A) 1 VOIE DE 6,35																																																																				
	95 589 988	99	(B) 2 VOIES DE 5																																																																				
	RP 6542 Q4	01																																																																					
	95 589 991	99	(B) 3 VOIES DE 5																																																																				
	95 600 098	99	(B) 5 VOIES DE 5																																																																				
	92 525 012	99	(B) 8 VOIES DE 5																																																																				
	RP 79 05 521 693	01																																																																					
	95 589 987	99	(E) 2 VOIES DE 5																																																																				
	95 600 097	99	(E) 3 VOIES DE 5																																																																				
	95 600 096	99	(E) 6 VOIES DE 5																																																																				
	95 600 099	99	(E) 10 VOIES DE 5																																																																				
	95 589 986	99	(F) 2 VOIES DE 5																																																																				
	RP 6542 VA	01																																																																					
	95 589 989	99	(F) 3 VOIES DE 5																																																																				
	95 589 992	99	(F) 4 VOIES DE 5																																																																				
	95 589 993	99	(F) 7 VOIES DE 5																																																																				
	95 589 990	99	(L) 3 VOIES DE 5																																																																				

Electrical Equipment *Connectors, clips, tongues*

30/01/98 GB E01 ↑ 1235 05 5125 10 PAGE 1	30/06/98 CLIPS-TONGUES-COVERINGS-ADAPTERS		
		1 DX 511 99 92 550 104 RP 6542 28 2 79 03 097 318 RP 6542 FH 3 79 03 097 523 92 550 096 RP 6542 67 4 79 03 097 450 RP 6541 89 5 5 412 143 6 79 03 097 391 RP 6542 V5 7 5 407 094*200 NFP 8 96 057 716	99 HARNESS CLIP A=6,35 AVEC ERGOT WITH LUG 99 A=6,35 01 99 A=5 B=2 A 4 MM2 01 LOCKING 99 A=6,35 FLAG 99 A=3 01 99 CARRE 0,6 01 SQUARE 99 HARNESS BLADE A=6,35 LON 8 MALE 99 A=5 01 LOCKING 99 SOCKET TOOL 6,35 99 CONNECTOR COVER DE CONNEXIONS
E5125100			

Electrical Equipment *Wiring securing*

<p>30/01/98 GB E02 ↑ 1235 05 5126 10 PAGE 1</p>	<p>30/06/98 WIRING SECURING</p>	
<p style="text-align: right;">E 5126100</p>	<p>1 95 576 230 01 95 576 229 01 2 95 576 246 01 3 79 03 073 024 01 RP 1662 01 01 95 595 408 01 95 578 250 01 4 79 03 077 143 01 RP 6995 43 01 5 95 580 039 01 6 95 578 254 01 7 95 578 252 02 96 011 394 02 8 95 592 024 01 RP 6542 N9 01 95 649 416 01 RP 6542 97 01 95 649 417 01 RP 6542 98 01 9 26 189 629 01 79 03 079 168 04 RP 6992 16 01 10 95 612 506 01</p>	<p>PROTECTOR LEFT AR RIGHT AR HARNES CLAMP GROMMET 1T 3,5X10 DIAM 41 DIAM 60 CLIP 1T 12 L 20,5X11 HARNES SHEATH LEVE-GLACE AR REAR WINDOW LIFTER LEVE-GLACE AV FRONT WINDOW LIFTER DIAM 9 LONG 180 SHEATH DIAM 18,L 2M DIAM 24- LON 2M CLIP 1T 20 L25X26 AUTO COLLANTE PIN</p>
<p>E5126100</p>		<p>.../...</p>

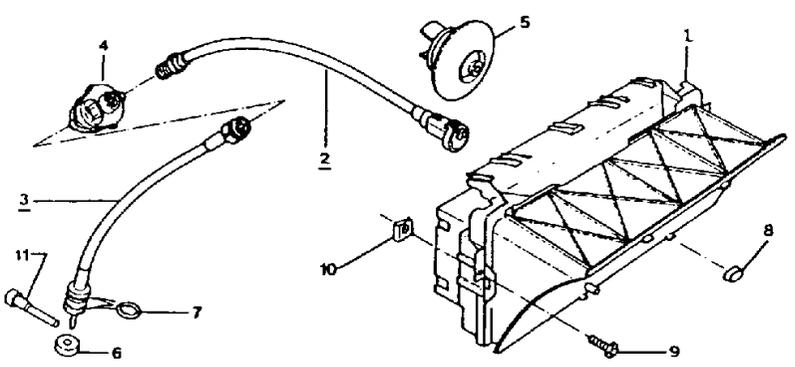
Electrical Equipment *Wiring securing*

<p>30/01/98 GB E03 ↑ 1235 05 5126 10 PAGE 2</p>	<p>30/06/98 WIRING SECURING</p>		
	<p>11 79 03 077 166 RP 6995 05</p> <p>12 95 637 592</p> <p>13 95 637 763</p> <p>14 96 042 790</p> <p>15 21 435 009</p> <p>16 95 639 221</p> <p>17 92 533 083 RP 6542 94</p> <p>18 96 013 211</p> <p>19 96 013 212</p> <p>20 5 414 554</p> <p>21 95 637 726</p> <p>96 086 987</p> <p>96 061 501</p>	<p>02 CLIP 01</p> <p>06 HARNESS CLIP E 10 L 12</p> <p>01 HARNESS SHEATH FAISCEAU VOILET TAILGATE HARNESS</p> <p>01 FAISCEAU TB DASHBOARD HARNESS</p> <p>02 RUBBER GROMMET AV DIAM 2.5</p> <p>01 STRAP</p> <p>99 EARTH CONTACT 10 LANG 5X0.8 01</p> <p>99 RELAY PROTECTOR DE RELAIS 130X70</p> <p>99 DE RELAIS 180X160</p> <p>01 GROMMET</p> <p>01 SOCKET USURE DE FREIN BRAKE WEAR</p> <p>01 CONNECTR BRACKT CONNECTEURS</p> <p>99 CLIP L 51X27 H34</p>	
<p>E5126100</p>			

Electrical Equipment *Lamp kit*

<p>30/01/98 GB E05 ↑ 30/05/98 1235 05 5127 10 PAGE 1</p>	<p>LAMP KIT</p>	
<p style="text-align: center;">[05/92]</p>	<p>1 ZC 9875 634 U RP ZC 9885 044 U</p> <p>2 26 146 849 RP 6216 43</p> <p>3 79 03 097 307 RP 6216 33</p> <p>4 25 928 009 RP 6216 28</p> <p>5 25 908 009 RP 6216 25</p> <p>6 25 919 009 RP 6216 26</p> <p>7 25 903 009 RP 6216 37</p> <p>26 101 009 RP 6216 29</p> <p>9 ZC 9614 680 U RP 6216 34</p> <p>79 03 097 003 RP 6216 48</p> <p>10 94 06 371 408 NFP</p> <p>11 25 926 009 RP 6216 27</p>	<p>01 BULB KIT 01 HEADLIGHT LAMP 02 H4 01 FOG LAMP (FRONT) 02 LAMP 21-5W 01 FOG LAMP (REAR) + STOP LIGHT LAMP 04 4W 01 FRONT LIGHT + SIDE FLASH UNIT 04 5W 01 REAR LAMP + LICEN PLATE LAMP PILOT LAMP 99 7W SPOT INT 01 CEILING LAMP 01 5W 01 ECLAIREUR DE COFFRE + BOITE A GANTS LAMP 99 3W 01 HEATING CONTROL LAMP + CHARGING CONTROL LAMP 99 INSTRUMENT PANEL LAMP + AUTOMATIC GEARBOX CONTROL LIGHT 02 0,36W WINDOW LIFTER SWITCH 04 LAMP 21W 01 DIRECTION INDICATOR (FRONT AND REAR)</p>
<p>E5127100</p>		

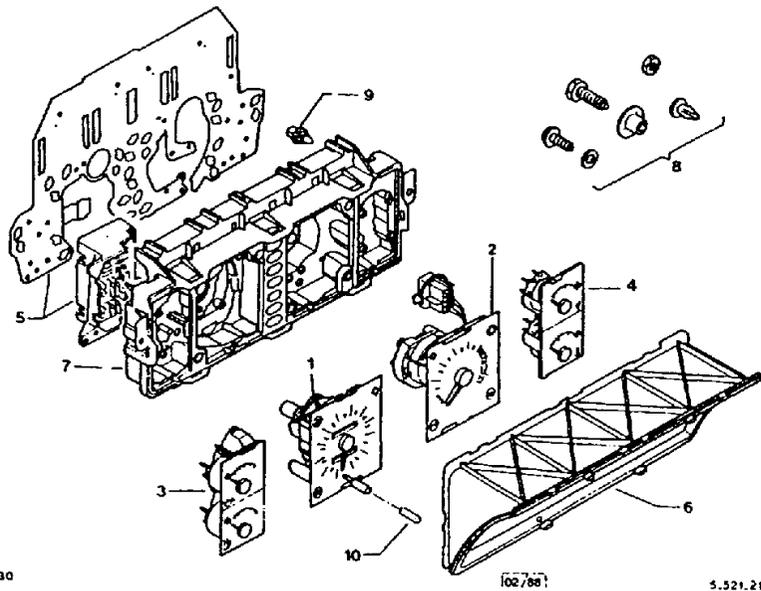
Electrical Equipment *Speedo cable*

30/01/98 GB E06 ↑ 1235 05 5212 10 PAGE 1	30/06/98 INSTRUMENT PANEL - SPEEDOMETER CABLE		
 <p style="text-align: center;">E5212100</p>		1 96 085 890 NFP 95 631 645 NFP 96 077 191 NFP 96 077 192 NFP 2 95 600 677 96 027 855 3 96 073 325 95 496 555 4 96 046 743 5 95 577 957 6 97 506 603 RP 2644 04 7 00 88 910 200 RP 6988 06 79 03 065 165 8 79 030 880 80 RP 8209 10 9 79 03 016 151 RP 6910 89	INSTRUM CLUSTER 01 -16 TZI 01 -19 TRI -19 TZI 01 -GTI 01 -GTI 16V 01 COTE COMPTEUR -LEFT HAND DRIVE SPPEEDOMETER SIDE 01 LON 1050 -RIGHT HAND DRIVE SPEEDOMETER SIDE 01 LON 485 COTE BV GEARBOX SIDE 01 LON 570 - COTE BV -GTI 16V LEFT HAND DRIVE GEARBOX SIDE 01 SPEED SENSOR GROMMET 01 01 02 RING-SEAL COTE BV 01 01 SENSOR SEAL DE CAPTEUR 04 FIXING STOP 01 02 CAPSCREW DIAM 4,2X19 01
E5212100		.../...	

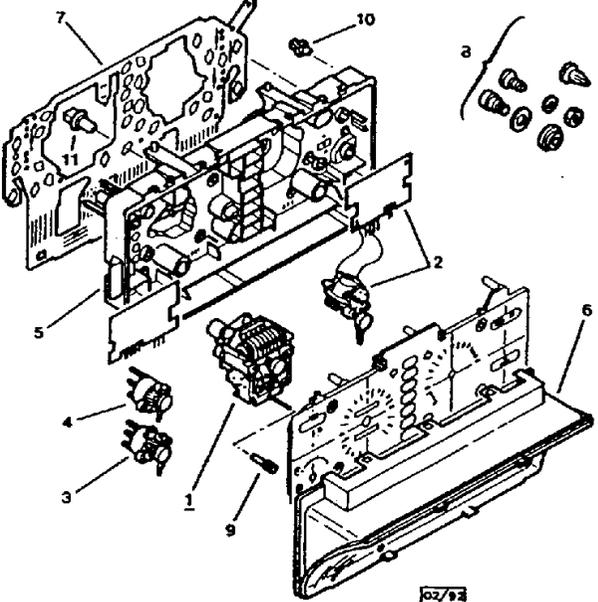
Electrical Equipment *Speedo cable*

<p>30/01/98 GB E07 ↑ 1235 05 5212 10 PAGE 2</p>	<p>30/06/98 INSTRUMENT PANEL - SPEEDOMETER CABLE</p>		
<p style="text-align: center;">[02/92] E 5212100</p>		<p>10 79 03 046 048</p> <p>11 05 22 395 100 RP 2650 07</p>	<p>02 SPEED NUT 4,2X11,8-9</p> <p>01 STOP PIN</p> <p>01</p>
<p style="text-align: right;">E5212100</p>			

Electrical Equipment *Instrument panel*

<p>30/01/98 GB E09 ↑ 1235 05 5213 11 PAGE 1</p>	<p>30/06/98 INSTRUMENT PANEL-CHECKING APPARATUS</p>	<p>VEGLIA GTI GTI 16V</p>	
		<p>1 6113 VH 2 95 656 434 3 95 659 478 4 95 656 533 5 95 618 765 6 95 618 766 7 95 618 767 8 95 618 758 9 75 470 822 10 95 619 575</p>	<p>01 SPEEDOMETER 01 REVLTN COUNTER CIRCUIT 47 NF -GTI UP TO O 4952 01 CIRCUIT 10 NF -GTI SINCE O 4953 01 -GTI 16V 01 GAUGE INDICATOR DE NIVEAUX 01 TEMP GAUGE WTR DE TEMPERATURES 01 PRINTED CIRCUIT POCLETTE ENS 01 INSTRUMT VISOR 01 CLUSTER HOUSING AR 01 FIXING KIT 99 BULB HOLDER 01 BUTTON</p>
		<p>E5213110</p>	

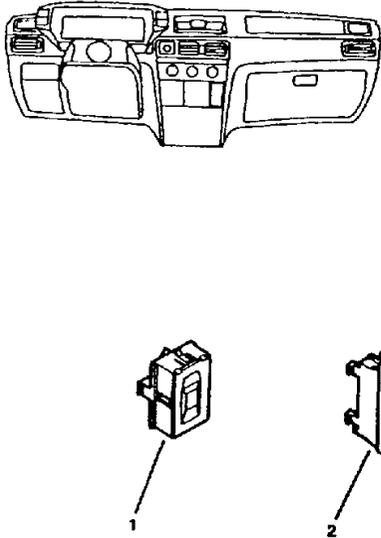
Electrical Equipment *Instrument panel*

30/01/98 GB E10 ↑ 1235 05 5213 12 PAGE 1	30/06/98 INSTRUMENT PANEL-CHECKING APPARATUS	JAEGER 16 TZI 19 TRI 19 TZI																																											
 <p style="text-align: right;">E5213120</p>		1 2 3 4 5 6 7 8 9 10 11	<table border="1"> <tr> <td>95 619 405</td> <td>01</td> <td>SPEEDOMETER</td> </tr> <tr> <td>95 619 407</td> <td>01</td> <td>REVLTN COUNTER</td> </tr> <tr> <td>95 619 409</td> <td>01</td> <td>GAUGE INDICATOR DE NIVEAU CARBURANT</td> </tr> <tr> <td>95 619 411</td> <td>01</td> <td>INDICATOR DE NIVEAU D'HUILE OIL LEVEL (WITH PRINTED CIRCUIT)</td> </tr> <tr> <td>95 619 416</td> <td>01</td> <td>CLUSTER HOUSING</td> </tr> <tr> <td>95 619 418</td> <td>01</td> <td>INSTRUMT VISOR</td> </tr> <tr> <td>95 619 420</td> <td>01</td> <td>PRINTED CIRCUIT</td> </tr> <tr> <td>95 619 421</td> <td>01</td> <td>FIXING KIT</td> </tr> <tr> <td>95 619 572</td> <td>01</td> <td>BUTTON</td> </tr> <tr> <td></td> <td></td> <td>BULB HOLDER</td> </tr> <tr> <td>75 470 822</td> <td>99</td> <td></td> </tr> <tr> <td>RP 75 467 140</td> <td>01</td> <td></td> </tr> <tr> <td>DX 9521 299 A</td> <td>01</td> <td>CHARGING CONTROL</td> </tr> <tr> <td>RP 6112 16</td> <td>01</td> <td></td> </tr> </table>	95 619 405	01	SPEEDOMETER	95 619 407	01	REVLTN COUNTER	95 619 409	01	GAUGE INDICATOR DE NIVEAU CARBURANT	95 619 411	01	INDICATOR DE NIVEAU D'HUILE OIL LEVEL (WITH PRINTED CIRCUIT)	95 619 416	01	CLUSTER HOUSING	95 619 418	01	INSTRUMT VISOR	95 619 420	01	PRINTED CIRCUIT	95 619 421	01	FIXING KIT	95 619 572	01	BUTTON			BULB HOLDER	75 470 822	99		RP 75 467 140	01		DX 9521 299 A	01	CHARGING CONTROL	RP 6112 16	01	
95 619 405	01	SPEEDOMETER																																											
95 619 407	01	REVLTN COUNTER																																											
95 619 409	01	GAUGE INDICATOR DE NIVEAU CARBURANT																																											
95 619 411	01	INDICATOR DE NIVEAU D'HUILE OIL LEVEL (WITH PRINTED CIRCUIT)																																											
95 619 416	01	CLUSTER HOUSING																																											
95 619 418	01	INSTRUMT VISOR																																											
95 619 420	01	PRINTED CIRCUIT																																											
95 619 421	01	FIXING KIT																																											
95 619 572	01	BUTTON																																											
		BULB HOLDER																																											
75 470 822	99																																												
RP 75 467 140	01																																												
DX 9521 299 A	01	CHARGING CONTROL																																											
RP 6112 16	01																																												




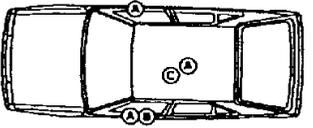
Electrical Equipment *Instrument panel*

30/01/98 GB E11 ↑ 1235 05 5213 13 PAGE 1	30/06/98 INSTRUMENT PANEL-CHECKING APPARATUS	JAEGER GTI		
<p style="text-align: center;">1230 5.521.31</p>	1	95 619 405	01	SPEEDOMETER
	2	95 619 407	01	REVLTN COUNTER
	3	95 619 409	01	GAUGE INDICATOR DE NIVEAU CARBURANT
	4	95 619 412	01	OIL PRESS GAUGE PRESS + NIVEAU HUILE OIL PRESSURE AND LEVEL
	5	95 619 413	01	TEMP GAUGE WTR TEMPERATURE D EAU WATER TEMPERATURE
	6	95 619 414	01	OIL TEMP GAUGE TEMPERATURE D HUILE OIL TEMPERATURE
	7	95 619 416	01	CLUSTER HOUSING
	8	95 619 418	01	INSTRUMT VISOR
	9	95 619 420	01	PRINTED CIRCUIT
	10	95 619 421	01	FIXING KIT
	11	95 619 572	01	BUTTON
	12	75 470 822	20	BULB HOLDER
		RP 75 467 140	01	
13	DX 9521 299 A	01	CHARGING CONTROL	
	RP 6112 16	01		
E5213130				

Electrical Equipment *Doors open indicator*

30/01/98 GB E12 ↑ 1235 05 5218 10 PAGE 1	30/06/98 DOOR INDICATOR ON DASHBOARD		
 <p style="text-align: center;">E52/8100 E5218100</p> <p style="text-align: right;">E52/8100</p>		1 95 631 539 2 95 631 254 CH 95 631 254 FTR RP 95 631 254 TR 95 631 254 FXX RP 95 631 254 XX 95 631 254 FLE RP 95 631 254 LE	01 INDICATOR 01 CONTROL FACIA 01 01 01 01 01 01

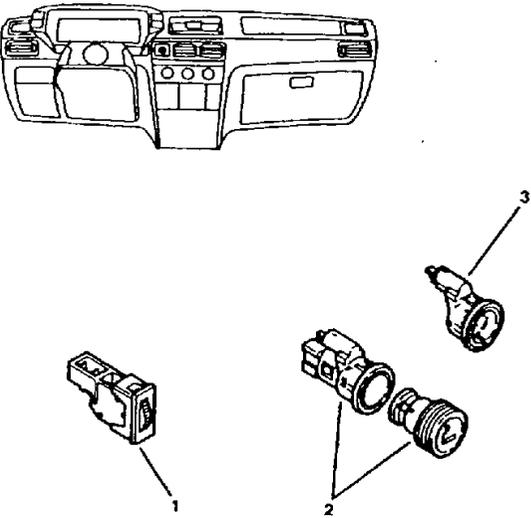
Electrical Equipment *Switches, window regulator*

30/01/98 GB E13 ↑ 1235 05 5219 10 PAGE 1	30/06/98 SWITCH		
<p>(A)  1</p> <p>(C)  3</p>	<p>(B)  2</p>	<p>1 97 513 687 03 RP 6553 72 01</p> <p>96 048 371 03 RP 6553 72 01</p> <p>2 95 635 064 01</p> <p>3 95 495 141 02</p>	<p>CONTROL SWITCH DE LEVE VITRE FRONT WINDOW LIFTER</p> <p>IMPULSIONNEL -GTI -GTI 16V ONE-TOUCH OPERATION ON DRIVER'S WINDOW</p> <p>REAR WINDOW LIFTER</p>
<p></p> <p>02/97 E 5219100</p>			
<p>E5219100</p>			

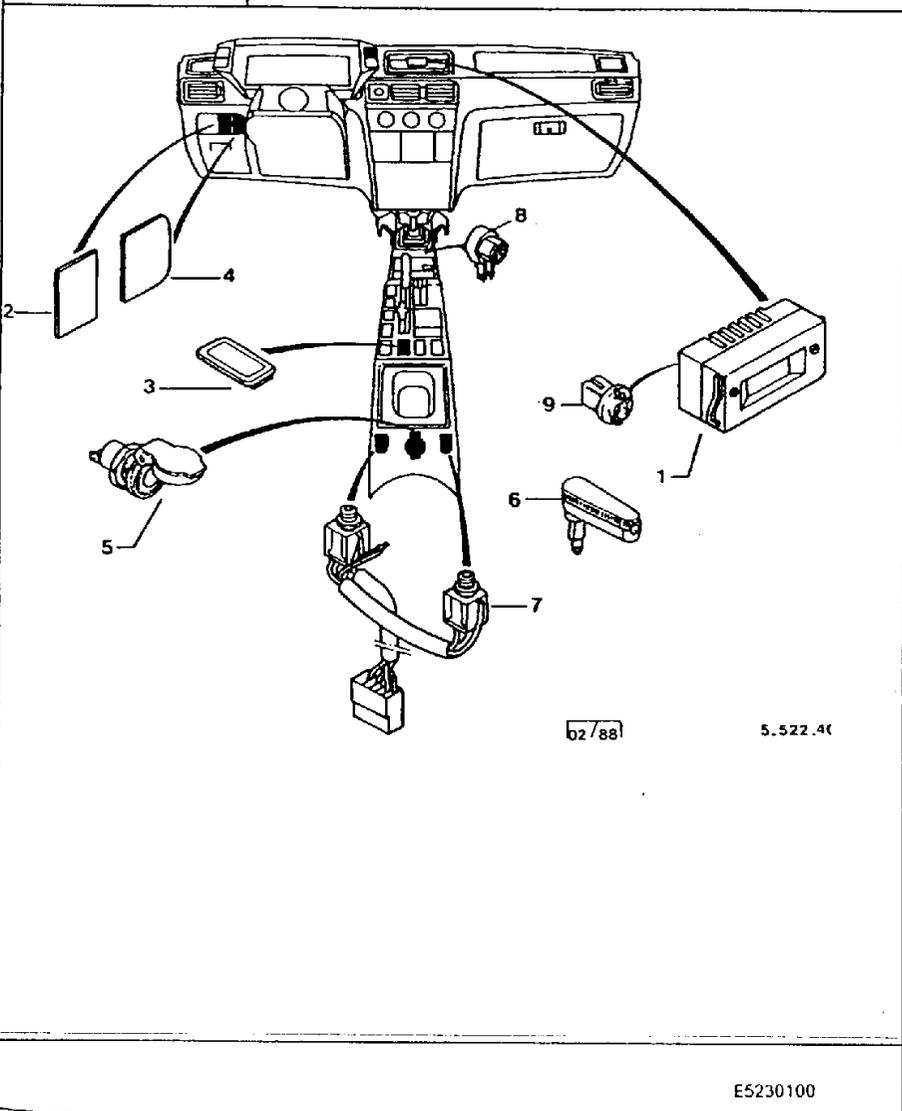
Electrical Equipment *Switches, instrument panel*

<p>30/01/98 GB E15 ↑ 1235 05 5222 10 PAGE 2</p>	<p>30/06/98 INSTRUMENT PANEL-SWITCHES</p>		
<p>[02/95] 05222100</p>		<p>6 95 634 839 FLE 01 RP 6552 NZ 01 95 634 839 TR 01 95 634 839 FXX 01 RP 6239 G2 01</p> <p>7 95 634 831 FCH 01 AR RP 6552 NX 01 95 634 831 FLE 01 AR RP 95 634 831 LE 01 95 634 831 TR 01 AR 95 634 831 FXX 01 AR RP 6239 G0 01</p>	<p>TAILGATE SWITCH</p> <p>FOG SWITCH</p>
<p>05222100</p>			

Electrical Equipment *Instrument panel accessories*

<p>30/01/98 GB F15 ↓ 1235 05 5223 10 PAGE 1</p>	<p>30/06/98 ACCESSORIES F. INSTRUMENT PANEL</p>		
 <p style="text-align: right;">E 5223 100</p>		<p>1 95 495 578 RP 6552 31</p> <p>2 97 530 475 RP 8227 48</p> <p>3 95 618 416</p>	<p>01 LIGHT RHEOSTAT 01</p> <p>01 CIGAR-LIGHTER 01</p> <p>01 CIGAR LIGHTING</p>

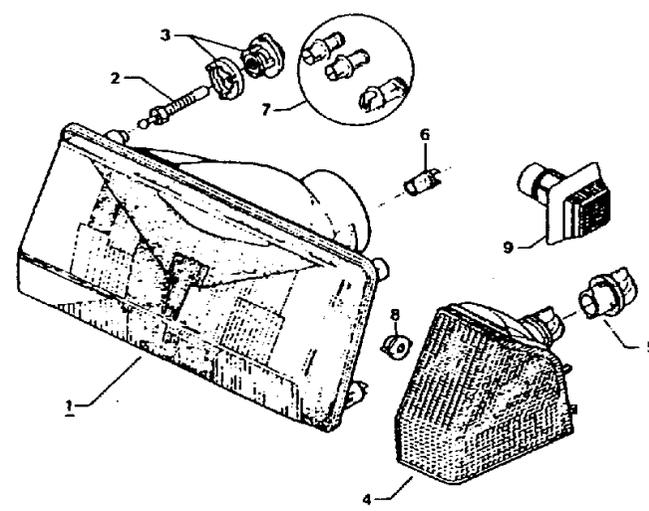
Electrical Equipment *Instrument panel and console accessories*

30/01/98 GB F14 ↓ 1235 05 5230 10 PAGE 1	30/06/98 INSTRUMENT PANEL AND CONSOLE ACCESSORIES		
 <p style="text-align: center;">02/88 5.522.40</p>		1 92 556 913 FXX RP 6155 J9 2 95 634 878 FCH NFP 95 634 878 FLE RP 95 634 878 LE 95 634 878 TR 95 634 878 FXX RP 95 634 878 XX 3 95 571 233 4 95 634 879 FCH RP 95 634 879 CH 95 634 879 FLE RP 95 634 879 LE 95 634 879 TR 95 634 879 FXX RP 95 634 879 XX 5 96 008 638 6 ZC 9865 891 U NFP 7 95 578 580 NFP 8 79 20 035 259 RP 8235 11 9 75 467 140	01 WATCH 01 01 SWITCH PLUG -16 TZI -19 TRI -19 TZI 01 -16 TZI 01 -19 TRI -19 TZI 01 -16 TZI -19 TRI -19 TZI 01 -16 TZI -19 TRI -19 TZI 99 01 PLUG 01 01 01 01 01 01 01 ACC POWER LEAD FEMELLE 01 PRISE MALE 12V 01 HDPHONE PICK-UP DIAM 6,35 01 BULB HOLDER 01 AUTOMATIC GEARBOX CONTROL LIGHT 01 BOLF-HOLDER WATCH
E5230100			

Electrical Equipment Battery

<p>30/01/98 GB F13 1235 05 5310 10 PAGE 1</p>	<p>30/06/98 BATTERY</p>		
<p>[02/95] 85310100</p> <p>E5310100</p>	<p>1 ZC 9865 482 U NFP</p> <p>2 95 576 423</p> <p>3 95 593 947</p> <p>96 091 774</p> <p>95 585 851 RP 96 085 588</p> <p>96 085 588</p> <p>4 95 569 042</p> <p>5 95 581 404</p> <p>6 79 05 026 810</p> <p>7 26 162 709</p> <p>8 92 556 346 RP 5644 07</p>	<p>01 DRY BATTERY 70 AH SANS ENTRETIEN</p> <p>01 BATTERY TRAY L 272 X 184</p> <p>01 POSITIVE CABLE LONG 820 -EXCEPT GTI 16V UP TO O 4982</p> <p>01 LON 800 -EXCEPT GTI 16V SINCE O 4983</p> <p>01 LONG 720 -GTI 16V UP TO O 4982</p> <p>01 LON 720 -GTI 16V SINCE O 4983</p> <p>01 NEGATIVE CABLE LONG 500</p> <p>01 FIXING FLANGE</p> <p>01 WATER PIPE</p> <p>01 STUD 8X125-65-36-20-11</p> <p>01 BATT PROTECTOR</p>	

Electrical Equipment *Lighting, front*

<p>30/01/98 GB F12 ↓ 1235 05 5410 10 PAGE 1</p>	<p>30/06/98 FRONT LIGHTING</p>		
 <p style="text-align: center;">[02/92] ES410100</p>		<p>1 95 587 064 01 95 587 063 01 2 95 637 354 06 3 95 619 445 06 4 95 619 034 01 95 619 656 01 95 619 035 01 95 619 657 01 5 95 616 037 02 95 619 658 02 6 95 619 444 02 95 654 100 02 7 95 598 511 02 8 5 484 036 02 9 96 041 035 02 RP 6325 59 01</p>	<p>HEADLIGHT LEFT</p> <p>RIGHT CIBIE</p> <p>ADJUSTMT SCREW LONG:75</p> <p>FIXING RING SEIMA</p> <p>FRONT LIGHT LH SEIMA</p> <p>CIBIE</p> <p>FRONT LIGHT RH SEIMA</p> <p>CIBIE</p> <p>BULB-HOLDER</p> <p>CIBIE</p> <p>SOCKET UP TO O 4679</p> <p>LAMP SLEEVE DE VEILLEUSE CIBIE SINCE O 4680</p> <p>MOUNTING ASSY CIBIE</p> <p>FLY NUT 6X100-11</p> <p>SIDE FLASH-UNIT</p>
<p style="text-align: center;">ES410100</p>			



Electrical Equipment *Fog lights, front*

<p>30/01/98 GB F11 ↓ 1235 05 5411 10 PAGE 1</p>	<p>30/06/98 FRONT LIGHTING - FOG LIGHTS</p>		
<p style="text-align: center;">02/88 5-541-20</p> <p style="text-align: right;">ES411100</p>		<p>1 95 624 929 02</p> <p>2 95 615 150 02</p> <p>3 95 615 149 02</p> <p>4 95 632 026 01</p> <p>5 79 03 046 036 04</p> <p>6 95 618 296 02</p>	<p>FOG HEADLIGHT BLANC SIEM UP TO O 5347 WHITE</p> <p>JAUNE SIEM SINCE O 5348 YELLOW</p> <p>LAMP CAP</p> <p>HEADLIGHT CAP</p> <p>HDLIGHT HOUSING LEFT</p> <p>RIGHT</p> <p>SPEED NUT 5X80-20,4-14</p> <p>MOUNTING ASSY</p>

Electrical Equipment *Lighting, rear*

<p>30/01/98 GB F10 ↓ 1235 05 5440 10 PAGE 1</p>	<p>30/06/98 REAR LIGHTING</p>	<p>SALOON</p>																																								
		<p>FOR THE SUPPLIERS SEIMA AND FRANKANI, THE KEY NUMBER 2 IS NOT DETAILED UNTIL THE ORGANIZATION NUMBER 4679</p> <table border="1"> <tr> <td data-bbox="1254 462 1478 526">1</td> <td data-bbox="1478 462 1702 526">95 656 447</td> <td data-bbox="1702 462 1926 526">01 TAIL-LIGHT LH LEFT -EXCEPT GTI 16V UP TO O 4679</td> </tr> <tr> <td></td> <td data-bbox="1478 526 1702 590">95 656 446</td> <td data-bbox="1702 526 1926 590">01 TAIL-LIGHT RH RIGHT -EXCEPT GTI 16V UP TO O 4679</td> </tr> <tr> <td></td> <td colspan="2" data-bbox="1478 590 1926 622" style="text-align: center;">TAIL-LIGHT LENS</td> </tr> <tr> <td data-bbox="1254 622 1478 702">2</td> <td data-bbox="1478 622 1702 702">95 616 747 RP 95 656 447</td> <td data-bbox="1702 622 1926 702">01 LEFT GEMO TEXTON UP TO O 4679</td> </tr> <tr> <td></td> <td data-bbox="1478 702 1702 782">95 616 746 RP 95 656 446</td> <td data-bbox="1702 702 1926 782">01 RIGHT GEMO TEXTON UP TO O 4679</td> </tr> <tr> <td></td> <td data-bbox="1478 782 1702 861">95 653 961</td> <td data-bbox="1702 782 1926 861">01 LEFT -GTI 16V SINCE O 4680</td> </tr> <tr> <td></td> <td data-bbox="1478 861 1702 941">95 653 962</td> <td data-bbox="1702 861 1926 941">01 RIGHT -GTI 16V SINCE O 4680</td> </tr> <tr> <td></td> <td colspan="2" data-bbox="1478 941 1926 973" style="text-align: center;">BULB-HOLDER</td> </tr> <tr> <td data-bbox="1254 973 1478 1053">3</td> <td data-bbox="1478 973 1702 1053">95 619 036</td> <td data-bbox="1702 973 1926 1053">01 LEFT SEIMA UP TO O 4679</td> </tr> <tr> <td></td> <td data-bbox="1478 1053 1702 1133">95 619 037</td> <td data-bbox="1702 1053 1926 1133">01 LEFT FRANKANI UP TO O 4679</td> </tr> <tr> <td></td> <td data-bbox="1478 1133 1702 1212">95 624 982 LISTE 9401</td> <td data-bbox="1702 1133 1926 1212">01 LEFT GEMO TEXTON UP TO O 4679</td> </tr> <tr> <td></td> <td data-bbox="1478 1212 1702 1292">95 653 963</td> <td data-bbox="1702 1212 1926 1292">01 LEFT -GTI 16V SINCE O 4680</td> </tr> <tr> <td></td> <td data-bbox="1478 1292 1702 1372">95 587 053</td> <td data-bbox="1702 1292 1926 1372">01 RIGHT SEIMA UP TO O 4679</td> </tr> </table>		1	95 656 447	01 TAIL-LIGHT LH LEFT -EXCEPT GTI 16V UP TO O 4679		95 656 446	01 TAIL-LIGHT RH RIGHT -EXCEPT GTI 16V UP TO O 4679		TAIL-LIGHT LENS		2	95 616 747 RP 95 656 447	01 LEFT GEMO TEXTON UP TO O 4679		95 616 746 RP 95 656 446	01 RIGHT GEMO TEXTON UP TO O 4679		95 653 961	01 LEFT -GTI 16V SINCE O 4680		95 653 962	01 RIGHT -GTI 16V SINCE O 4680		BULB-HOLDER		3	95 619 036	01 LEFT SEIMA UP TO O 4679		95 619 037	01 LEFT FRANKANI UP TO O 4679		95 624 982 LISTE 9401	01 LEFT GEMO TEXTON UP TO O 4679		95 653 963	01 LEFT -GTI 16V SINCE O 4680		95 587 053	01 RIGHT SEIMA UP TO O 4679
1	95 656 447	01 TAIL-LIGHT LH LEFT -EXCEPT GTI 16V UP TO O 4679																																								
	95 656 446	01 TAIL-LIGHT RH RIGHT -EXCEPT GTI 16V UP TO O 4679																																								
	TAIL-LIGHT LENS																																									
2	95 616 747 RP 95 656 447	01 LEFT GEMO TEXTON UP TO O 4679																																								
	95 616 746 RP 95 656 446	01 RIGHT GEMO TEXTON UP TO O 4679																																								
	95 653 961	01 LEFT -GTI 16V SINCE O 4680																																								
	95 653 962	01 RIGHT -GTI 16V SINCE O 4680																																								
	BULB-HOLDER																																									
3	95 619 036	01 LEFT SEIMA UP TO O 4679																																								
	95 619 037	01 LEFT FRANKANI UP TO O 4679																																								
	95 624 982 LISTE 9401	01 LEFT GEMO TEXTON UP TO O 4679																																								
	95 653 963	01 LEFT -GTI 16V SINCE O 4680																																								
	95 587 053	01 RIGHT SEIMA UP TO O 4679																																								
<p>E5440100</p>		<p>.../...</p>																																								

Electrical Equipment *Lighting, rear*

<p>30/01/98 GB F09 ↓ 1235 05 5440 10 PAGE 2</p>	<p>30/06/98 REAR LIGHTING</p>	<p>SALOON</p>	
		<p>FOR THE SUPPLIERS SEIMA AND FRANKANI, THE KEY NUMBER 2 IS NOT DETAILED UNTIL THE ORGANIZATION NUMBER 4679</p>	
<p>3 95 587 060</p>	<p>01</p>	<p>BULB-HOLDER RIGHT FRANKANI UP TO O 4679</p>	
<p>95 616 748 LISTE 9401</p>	<p>01</p>	<p>RIGHT GEMO TEXTON UP TO O 4679</p>	
<p>95 653 964</p>	<p>01</p>	<p>RIGHT -GTI 16V SINCE O 4680</p>	
<p>4 95 587 055</p>	<p>02</p>	<p>TAIL-LIGHT SEAL SEIMA</p>	
<p>95 616 750</p>	<p>02</p>	<p>GEMO TEXTON</p>	
<p>5 95 494 778</p>	<p>01</p>	<p>LICEN PLAT LAMP DE PLAQUE</p>	
<p>6 5 446 067</p>	<p>01</p>	<p>LAMP SEAL</p>	
<p>E5440100</p>			

Electrical Equipment *Lighting, rear*

<p>30/01/98 GB F08 ↓ 1235 05 5440 20 PAGE 1</p>	<p>30/06/98 REAR LIGHTING</p>	<p>ESTATE</p>	
<p style="text-align: center;">D 5440 130</p>		<p>1 2 3 4 5</p>	<p>95 616 751 01 TAIL-LIGHT LENS LEFT 95 616 752 01 RIGHT</p> <p>95 616 753 01 BULB-HOLDER LEFT 95 616 754 01 RIGHT</p> <p>92 554 037 02 LICEN PLAT LAMP DE PLAQUE RP 6340 98 01</p> <p>95 630 109 02 LAMP BRACKET ECLAIREUR</p> <p>95 499 066 02 SPEED NUT DIAM 4,8</p>
<p>E5440200</p>			



Electrical Equipment *Lighting, interior*

30/01/98 GB F07 1235 05 5450 10 PAGE 1	30/06/98 INTERIOR LIGHTING	EXCEPT SUN-ROOF	
		1 2 3 4 5 6	95 495 449 01 95 495 448 01 95 608 695 FXX 01 RP 6362 92 01 95 495 163 CT 01 95 495 163 LG 01 95 495 163 FTL 01 RP 95 495 163 TL 01 92 530 169 CH 01 92 530 169 TR 01 73 70 667 000 01 RP 6339 18 01 79 20 072 498 01 RP 6362 34 01

Electrical Equipment *Lighting, sunroof*

30/01/98 GB F06 ↓ 1235 05 5454 10 PAGE 1	30/08/98 ADJUSTING CEILING LIGHTS	SUN-ROOF	
<p style="text-align: center;">02/BB1 05454100</p>		1 95 638 338 CT 01 95 638 338 TL 01 95 638 338 FLG 01 RP 95 638 338 LG 01 2 95 592 409 02 RP 95 592 409 XX 01 3 95 496 837 02 RP 95 496 837 XX 01 4 95 496 482 01 5 79 20 007 434 02 RP 1537 07 01 6 79 03 016 256 02 RP 79 03 016 414 01 7 79 03 081 073 02 RP 6992 G2 01	LAMP BRACKET CARD READER RF LAMP SWITCH LECTEUR DE CARTE SWITCH TOIT OUVRANT -SUN-ROOF SUPPORT SHIM 30X50X4 TAPPING SCREW FB4-8X19 RETAINING CLIP DIAM 4,2
E5454100			

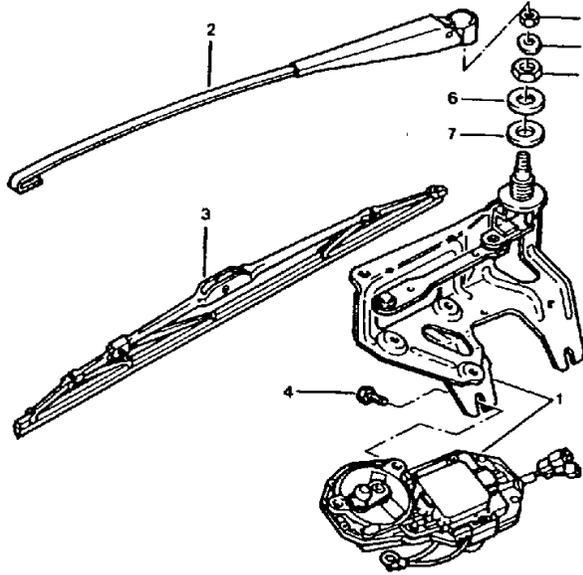
Electrical Equipment *Switches, lighting*

<p>30/01/98 GB F05 1235 05 5455 10 PAGE 1</p>	<p>30/06/98 SWITCH</p>																																	
	<table border="1"> <tr> <td>1</td> <td>95 496 232</td> <td>01 CONTACT SWITCH UP TO O 4982 HANDBRAKE</td> </tr> <tr> <td></td> <td>96 031 935 RP 6339 18</td> <td>01 SWITCH SINCE O 4983 HANDBRAKE</td> </tr> <tr> <td>2</td> <td>95 495 143</td> <td>02 CONTACT SWITCH BONNET AND BOOT LIGHTING</td> </tr> <tr> <td>3</td> <td>95 493 782 RP 6366 78</td> <td>02 LIGHT SWITCH PORTE 01 DOOR</td> </tr> <tr> <td>4</td> <td>79 10 033 931 RP 4534 02</td> <td>01 CONTACT SWITCH 01 STOP</td> </tr> <tr> <td>5</td> <td>95 598 948</td> <td>01 UNLOCKING BOOT</td> </tr> <tr> <td>6</td> <td>96 018 108 RP 2257 41</td> <td>01 -BVM 01</td> </tr> <tr> <td></td> <td>95 619 640 RP 2257 29</td> <td>01 SWITCH 01 -BVA</td> </tr> <tr> <td>7</td> <td>95 609 558</td> <td>01 MECHAN BRACKET</td> </tr> <tr> <td>8</td> <td>96 008 275</td> <td>04 DOOR SWITCH CAP</td> </tr> <tr> <td>9</td> <td>79 03 016 282 RP 6912 22</td> <td>04 SCREW CBLX 4,8-9,5 01</td> </tr> </table>	1	95 496 232	01 CONTACT SWITCH UP TO O 4982 HANDBRAKE		96 031 935 RP 6339 18	01 SWITCH SINCE O 4983 HANDBRAKE	2	95 495 143	02 CONTACT SWITCH BONNET AND BOOT LIGHTING	3	95 493 782 RP 6366 78	02 LIGHT SWITCH PORTE 01 DOOR	4	79 10 033 931 RP 4534 02	01 CONTACT SWITCH 01 STOP	5	95 598 948	01 UNLOCKING BOOT	6	96 018 108 RP 2257 41	01 -BVM 01		95 619 640 RP 2257 29	01 SWITCH 01 -BVA	7	95 609 558	01 MECHAN BRACKET	8	96 008 275	04 DOOR SWITCH CAP	9	79 03 016 282 RP 6912 22	04 SCREW CBLX 4,8-9,5 01
1	95 496 232	01 CONTACT SWITCH UP TO O 4982 HANDBRAKE																																
	96 031 935 RP 6339 18	01 SWITCH SINCE O 4983 HANDBRAKE																																
2	95 495 143	02 CONTACT SWITCH BONNET AND BOOT LIGHTING																																
3	95 493 782 RP 6366 78	02 LIGHT SWITCH PORTE 01 DOOR																																
4	79 10 033 931 RP 4534 02	01 CONTACT SWITCH 01 STOP																																
5	95 598 948	01 UNLOCKING BOOT																																
6	96 018 108 RP 2257 41	01 -BVM 01																																
	95 619 640 RP 2257 29	01 SWITCH 01 -BVA																																
7	95 609 558	01 MECHAN BRACKET																																
8	96 008 275	04 DOOR SWITCH CAP																																
9	79 03 016 282 RP 6912 22	04 SCREW CBLX 4,8-9,5 01																																

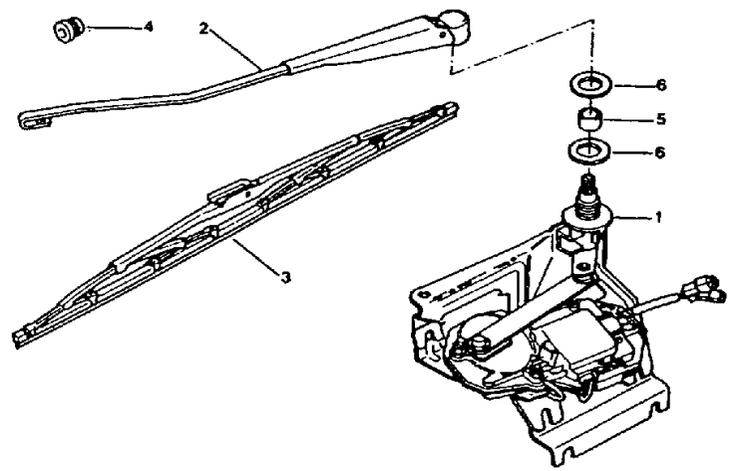
Electrical Equipment *Window wiper, front*

<p>30/01/98 GB F04 ↓ 1235 05 5611 10 PAGE 1</p>	<p>30/06/98 FRONT WINDOW WIPER</p>	<p>1 POS: VALEO - 2 POS: FEMSA - BOSCH</p>	
		<p>1 95 494 828 01 95 623 204 01 2 95 589 140 01 95 623 205 01 3 95 589 141 01 4 95 589 142 01 5 ZC 9865 985 U 01 RP 6426 A3 01 6 79 03 201 021 01 RP 6915 69 01 7 95 640 525 01 8 95 586 648 01 9 79 03 076 150 04 10 79 03 201 150 03 RP 6917 03 01 11 79 03 061 125 01 12 79 03 058 041 03 RP 6962 89 01 13 79 03 232 017 01 RP 6932 38 01 14 95 567 943 01 15 95 623 767 01</p>	<p>WIPER MOTOR 1 POS 2POS FOR "BOSCH" ORDER IN ADDITION 95623205 WIPER DRIVE 1POS 2POS FOR "BOSCH" ORDER IN ADDITION 95623204 WDW WIPER HANDL BLADE-HOLDER WIND WIPR BLADE LONG 510 CAPSCREW 6X1,00-16 COWL DEFLECTOR SHIM DIAM 50X28 EP 5 CLIP PINC E2,5 L13X8,5 CAPSCREW DIAM 8X1,25 - 20 SEAL WASHER 8,2X24X0,4 SPRING WASHER DIAM 8X22 HEXAGONAL NUT 8X1,25-6,5 PLASTIC NUT 26X2,00 RUBBER BUFFER CAOUTCHOUC</p>
<p>E5611100</p>			

Electrical Equipment *Window wiper, rear*

30/01/98 GB F03 1235 05 5612 10 PAGE 1	30706798 REAR WINDOW WIPER	SALOON	
 <p style="text-align: center;">E5612100</p>		1 95 614 616 2 95 619 669 3 ZC 9865 985 U RP 6426 A3 ZC 9875 268 U RP 6426 C7 4 79 03 101 392 5 79 03 057 005 RP 6962 13 6 95 624 275 7 75 526 214 8 79 03 232 017 RP 6932 38 9 79 03 032 232	01 WIPER ARMS ASSY AR 01 BLADE-HOLDER 01 WIND WIPR BLADE 01 LONG 510 01 LONG 500 03 WASHER-SCREW 6X1,00-16 01 FLEXIBLE WASHER DIAM 8X14 01 01 PLAIN WASHER 16X30-1,5 01 SEAL WASHER 26 X 18 01 HEXAGONAL NUT 01 8X1,25-6,5 01 16X100-8

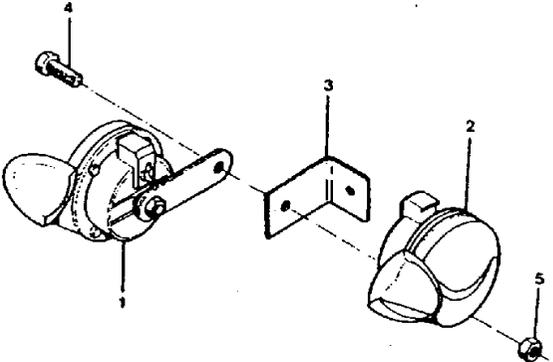
Electrical Equipment *Window wiper, rear*

30/01/98 GB F02 ↓ 1235 05 5612 20 PAGE 1	30/06/98 REAR WINDOW WIPER	ESTATE	
 <p style="text-align: center;">02/88 05612130</p>		1 95 633 171 2 95 635 437 3 ZC 9865 985 U RP 6426 A3 ZC 9875 268 U RP 6426 C7 4 95 611 488 5 95 613 177 6 95 630 113	01 WIPER ARMS ASSY 01 BLADE-HOLDER 01 WIND WIPR BLADE 01 LONG 510 01 01 LONG 500 01 01 GROMMET 01 MOTOR SPACER DIAM 20X DIAM 16X5,6 01 SEAL WASHER DIAM 32X20,2X1
		E5612200	

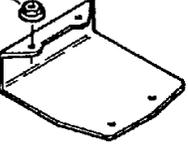

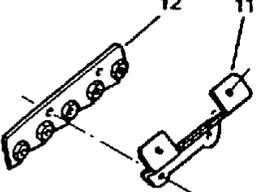
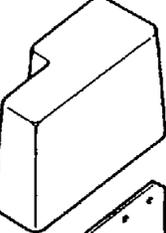
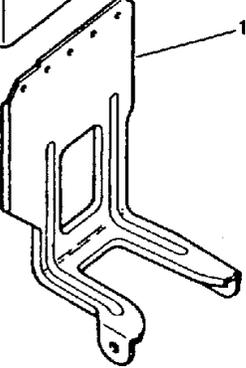

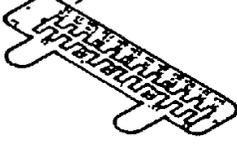
Electrical Equipment *Window washer, front*

<p>30/01/98 GB F01 1235 05 5641 10 PAGE 1</p>	<p>30/06/98 FRONT WINDSCREEN WASCHER</p>																																																	
	<table border="1"> <tr> <td>1</td> <td>97 518 987 RP 6434 46</td> <td>01 01</td> <td>WDW WASHER PUMP</td> </tr> <tr> <td>2</td> <td>95 633 058</td> <td>01</td> <td>TANK</td> </tr> <tr> <td>3</td> <td>95 610 342</td> <td>01</td> <td>FLANGE</td> </tr> <tr> <td>4</td> <td>97 518 936 RP 6432 30</td> <td>01 01</td> <td>PLUG</td> </tr> <tr> <td>5</td> <td>95 499 014</td> <td>01</td> <td>PIPE D 3,5X6,5-3500</td> </tr> <tr> <td>6</td> <td>95 495 714</td> <td>01</td> <td>SPRAYING RAMP</td> </tr> <tr> <td>7</td> <td>97 511 123 RP 6434 45</td> <td>01 01</td> <td>WASH PUMP SEAL DIAM 21</td> </tr> <tr> <td>8</td> <td>92 553 495 RP 6433 70</td> <td>01 01</td> <td>VALVE -RIGHT HAND DRIVE</td> </tr> <tr> <td>9</td> <td>79 03 078 024 RP 6986 79</td> <td>01 01</td> <td>CLIP 1T 6,2</td> </tr> <tr> <td>10</td> <td>24 325 039 RP 6921 81</td> <td>01 01</td> <td>CAPSCREW 6X100-25</td> </tr> <tr> <td>11</td> <td>95 623 758 RP 79 03 058 063</td> <td>01 01</td> <td>WASHER DIAM 6X18</td> </tr> <tr> <td>12</td> <td>26 158 889 RP 79 03 044 001</td> <td>01 01</td> <td>CAGED NUT 6X10015,5-13,7-6</td> </tr> </table>	1	97 518 987 RP 6434 46	01 01	WDW WASHER PUMP	2	95 633 058	01	TANK	3	95 610 342	01	FLANGE	4	97 518 936 RP 6432 30	01 01	PLUG	5	95 499 014	01	PIPE D 3,5X6,5-3500	6	95 495 714	01	SPRAYING RAMP	7	97 511 123 RP 6434 45	01 01	WASH PUMP SEAL DIAM 21	8	92 553 495 RP 6433 70	01 01	VALVE -RIGHT HAND DRIVE	9	79 03 078 024 RP 6986 79	01 01	CLIP 1T 6,2	10	24 325 039 RP 6921 81	01 01	CAPSCREW 6X100-25	11	95 623 758 RP 79 03 058 063	01 01	WASHER DIAM 6X18	12	26 158 889 RP 79 03 044 001	01 01	CAGED NUT 6X10015,5-13,7-6	
1	97 518 987 RP 6434 46	01 01	WDW WASHER PUMP																																															
2	95 633 058	01	TANK																																															
3	95 610 342	01	FLANGE																																															
4	97 518 936 RP 6432 30	01 01	PLUG																																															
5	95 499 014	01	PIPE D 3,5X6,5-3500																																															
6	95 495 714	01	SPRAYING RAMP																																															
7	97 511 123 RP 6434 45	01 01	WASH PUMP SEAL DIAM 21																																															
8	92 553 495 RP 6433 70	01 01	VALVE -RIGHT HAND DRIVE																																															
9	79 03 078 024 RP 6986 79	01 01	CLIP 1T 6,2																																															
10	24 325 039 RP 6921 81	01 01	CAPSCREW 6X100-25																																															
11	95 623 758 RP 79 03 058 063	01 01	WASHER DIAM 6X18																																															
12	26 158 889 RP 79 03 044 001	01 01	CAGED NUT 6X10015,5-13,7-6																																															
<p>E5641100</p>																																																		

Electrical Equipment *Horn*

<p>30/01/98 GB G02 ↑ 30/06/98 1235 05 5710 10 PAGE 1</p>	<p>HORN</p>		
 <p style="text-align: center;">E5710100</p> <p style="text-align: right;">E5710100</p>	<p>1 97 519 934 RP 6236 80</p> <p>2 97 519 943 RP 6236 81</p> <p>3 95 640 714</p> <p>4 79 03 201 151 RP 5804 08</p> <p>5 79 03 232 017 RP 6932 38</p>	<p>01 01 02 04 04</p>	<p><i>HORN</i> AIGU HIGH</p> <p>GRAVE LOW</p> <p>HORN BRACKET</p> <p>CAPSCREW DIAM8X1,25-25</p> <p>HEXAGONAL NUT 8X1,25-6,5</p>

Electrical Equipment *Relays, fuses*

30/01/98 GB G03 ↑ 30/06/98		1235 05 6145 10		RELAYS - FUSES	
PAGE 1					
1		16		14	
2		12		11	
3		15		13	
4		8		9	
5		7			
6					
		E 6145100			
1	92 535 967 RP 6323 21	01	FLASHER UNIT		
2	97 534 988 RP 6555 35	01	WIPER DELAY		
3	79 05 522 210 RP 6555 33	01	ELECTRIC RELAY 4 FICHES MULTIFUNCTION		
4	79 05 522 220 RP 6555 88	01	5 FICHES -16 TZI -ESTATE 19 TRI -ESTATE 19 TZI -GTI -GTI 16V FUEL CONTROL RELAY		
5	96 075 406 RP 1929 49	01	RELAY DOUBLE -16 TZI SINCE O 5348 INJECTION CONTROL RELAY		
	91 541 882 RP 1452 05	01	COMMANDE INJECTION -SALOON 19 TRI -SALOON 19 TZI INJECTION CONTROL RELAY		
	96 011 361 RP 6555 48	01	ELECTRIC RELAY CALCULATEUR -ESTATE 19 TRI -ESTATE 19 TZI -GTI -GTI 16V INJECTION CONTROL RELAY		
6	5 407 175	01	FLASHER UNIT TEMP D'EAU WATER TEMPERATURE		
7	95 582 951	01	FUSE LOC PLATE		
8			FUSE		
	79 05 521 015	99	5 A		
	79 05 521 035	99	10 A		
	79 05 521 055	99	20 A		
	79 05 521 065	99	25 A		
			.../...		

Electrical Equipment *Relays, fuses*

30/01/98 GB G04 ↑ 1235 05 6145 10 PAGE 2	30/06/98 RELAYS - FUSES		
		8 79 05 521 075 9 79 20 037 454 RP 6555 QG 10 95 596 596 NFP 11 95 632 357 12 95 587 390 13 95 635 084 14 95 638 768 15 95 635 079 95 638 766 16 79 03 239 002 NFP	99 30 A 01 HARNESS DIODE ALIMENT ANTI RESAUT 01 -WITH ABS BRAKES ANTI FLY OVER RELAY BRACKET 01 01 01 01 01 -GTI 16V RELAY PROTECTOR 01 -EXCEPT GTI 16V 01 -GTI 16V 02 NUT WITH BASE
[12/92] E 6145 100 E6145100			

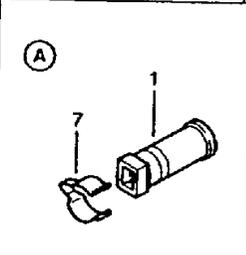
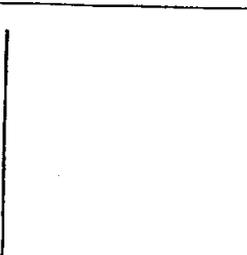
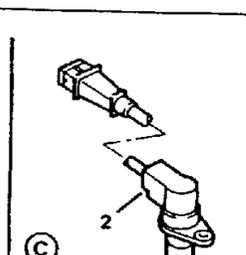
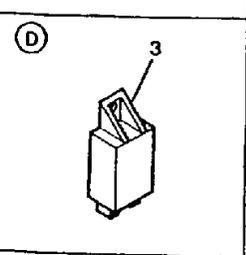
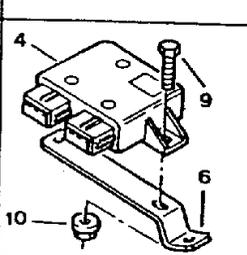
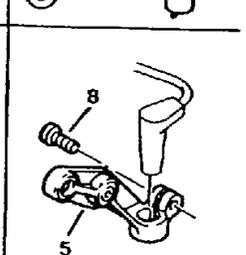
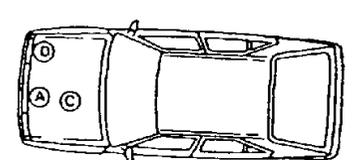
Electrical Equipment Mainboard

<p>30/01/98 GB G05 ↑ 30/06/98 1235 05 6156 10 PAGE 1</p>	<p>CHECKING STAND AND HOUSING</p>																																																																	
<p style="text-align: center;">"05.6145.10"</p> <p style="text-align: center;">06/92 D6156100</p>	<table border="1"> <tr> <td>1</td> <td>95 639 671</td> <td>01</td> <td>FUSE-BOX</td> </tr> <tr> <td></td> <td>95 639 672</td> <td>01</td> <td>-WITH ABS BRAKES</td> </tr> <tr> <td></td> <td>RP 6500 12</td> <td>01</td> <td></td> </tr> <tr> <td>2</td> <td>96 035 929</td> <td>01</td> <td>SHUNT BOX</td> </tr> <tr> <td>3</td> <td>95 635 752</td> <td>01</td> <td>RETAINER BAR</td> </tr> <tr> <td>4</td> <td>95 593 200</td> <td>01</td> <td>FUSE BOX COVER</td> </tr> <tr> <td></td> <td>RP 6500 01</td> <td>01</td> <td></td> </tr> <tr> <td>5</td> <td>95 634 666</td> <td>01</td> <td>BOX BRACKET</td> </tr> <tr> <td>6</td> <td>95 639 587</td> <td>01</td> <td>LOCKING</td> </tr> <tr> <td></td> <td>RP 8221 54</td> <td>01</td> <td></td> </tr> <tr> <td>7</td> <td>26 131 869</td> <td>01</td> <td>PLAIN WASHER 5X20-1,5</td> </tr> <tr> <td></td> <td>RP 6949 10</td> <td>01</td> <td></td> </tr> <tr> <td>8</td> <td>26 131 859</td> <td>01</td> <td>LOCKING CAM</td> </tr> <tr> <td></td> <td>RP 8220 EF</td> <td>01</td> <td></td> </tr> <tr> <td>9</td> <td>79 03 033 009</td> <td>04</td> <td>WASHER-NUT 6X1,00</td> </tr> <tr> <td></td> <td>RP 6934 27</td> <td>01</td> <td></td> </tr> </table>	1	95 639 671	01	FUSE-BOX		95 639 672	01	-WITH ABS BRAKES		RP 6500 12	01		2	96 035 929	01	SHUNT BOX	3	95 635 752	01	RETAINER BAR	4	95 593 200	01	FUSE BOX COVER		RP 6500 01	01		5	95 634 666	01	BOX BRACKET	6	95 639 587	01	LOCKING		RP 8221 54	01		7	26 131 869	01	PLAIN WASHER 5X20-1,5		RP 6949 10	01		8	26 131 859	01	LOCKING CAM		RP 8220 EF	01		9	79 03 033 009	04	WASHER-NUT 6X1,00		RP 6934 27	01		
1	95 639 671	01	FUSE-BOX																																																															
	95 639 672	01	-WITH ABS BRAKES																																																															
	RP 6500 12	01																																																																
2	96 035 929	01	SHUNT BOX																																																															
3	95 635 752	01	RETAINER BAR																																																															
4	95 593 200	01	FUSE BOX COVER																																																															
	RP 6500 01	01																																																																
5	95 634 666	01	BOX BRACKET																																																															
6	95 639 587	01	LOCKING																																																															
	RP 8221 54	01																																																																
7	26 131 869	01	PLAIN WASHER 5X20-1,5																																																															
	RP 6949 10	01																																																																
8	26 131 859	01	LOCKING CAM																																																															
	RP 8220 EF	01																																																																
9	79 03 033 009	04	WASHER-NUT 6X1,00																																																															
	RP 6934 27	01																																																																
<p>E6156100</p>																																																																		

Electrical Equipment *Electronic modules, dashboard*

30/01/98 GB G06 1235 05 6160 10 PAGE 1	30/06/98 BINACLE ELECTRONIC EQUIPMENT																																																		
		<table border="1"> <tr> <td>1</td> <td>95 612 267</td> <td>01</td> <td>HOUSING LEVE VITRE WINDOW LIFTER</td> </tr> <tr> <td>2</td> <td>95 604 774 RP 1306 62</td> <td>01 01</td> <td>WATER TEMP CASE WATER TEMPERATURE</td> </tr> <tr> <td>3</td> <td>92 560 507 RP 6555 F1</td> <td>01 01</td> <td>CONTROL BOX -CENTRAL LOCKING</td> </tr> <tr> <td>4</td> <td>95 630 754 RP 6555 30</td> <td>01 01</td> <td>INT LIGHT TIMER DE PLAFONNIER ROOF LAMP</td> </tr> <tr> <td>5</td> <td>95 611 294 RP 6555 44</td> <td>01 01</td> <td>BUZZER LIGHT ALERT</td> </tr> <tr> <td>6</td> <td>95 597 857</td> <td>01</td> <td>CONTROL BOX ENS - INFRAROUGE INFRARED SET</td> </tr> <tr> <td>7</td> <td>ZCT 000 020 RP 6552 LJ</td> <td>01 01</td> <td>DOOR TRANSMITTR DOOR TRANSMITTER COVER</td> </tr> <tr> <td>8</td> <td>95 658 515 RP 6552 N9</td> <td>01 01</td> <td>COVER DOOR TRANSMITTER COVER</td> </tr> <tr> <td>9</td> <td>95 635 426</td> <td>01</td> <td>RELAY BRACKET</td> </tr> <tr> <td>10</td> <td>79 03 201 129 RP 6921 38</td> <td>01 01</td> <td>CAPSCREW DIAM 5X0,80-12</td> </tr> <tr> <td>11</td> <td>79 03 058 027</td> <td>01</td> <td>SPRING WASHER 5X12X1,2</td> </tr> <tr> <td>12</td> <td>79 03 032 006 RP 6933 08</td> <td>01 01</td> <td>HEXAGONAL NUT 5X80-4</td> </tr> </table>		1	95 612 267	01	HOUSING LEVE VITRE WINDOW LIFTER	2	95 604 774 RP 1306 62	01 01	WATER TEMP CASE WATER TEMPERATURE	3	92 560 507 RP 6555 F1	01 01	CONTROL BOX -CENTRAL LOCKING	4	95 630 754 RP 6555 30	01 01	INT LIGHT TIMER DE PLAFONNIER ROOF LAMP	5	95 611 294 RP 6555 44	01 01	BUZZER LIGHT ALERT	6	95 597 857	01	CONTROL BOX ENS - INFRAROUGE INFRARED SET	7	ZCT 000 020 RP 6552 LJ	01 01	DOOR TRANSMITTR DOOR TRANSMITTER COVER	8	95 658 515 RP 6552 N9	01 01	COVER DOOR TRANSMITTER COVER	9	95 635 426	01	RELAY BRACKET	10	79 03 201 129 RP 6921 38	01 01	CAPSCREW DIAM 5X0,80-12	11	79 03 058 027	01	SPRING WASHER 5X12X1,2	12	79 03 032 006 RP 6933 08	01 01	HEXAGONAL NUT 5X80-4
1	95 612 267	01	HOUSING LEVE VITRE WINDOW LIFTER																																																
2	95 604 774 RP 1306 62	01 01	WATER TEMP CASE WATER TEMPERATURE																																																
3	92 560 507 RP 6555 F1	01 01	CONTROL BOX -CENTRAL LOCKING																																																
4	95 630 754 RP 6555 30	01 01	INT LIGHT TIMER DE PLAFONNIER ROOF LAMP																																																
5	95 611 294 RP 6555 44	01 01	BUZZER LIGHT ALERT																																																
6	95 597 857	01	CONTROL BOX ENS - INFRAROUGE INFRARED SET																																																
7	ZCT 000 020 RP 6552 LJ	01 01	DOOR TRANSMITTR DOOR TRANSMITTER COVER																																																
8	95 658 515 RP 6552 N9	01 01	COVER DOOR TRANSMITTER COVER																																																
9	95 635 426	01	RELAY BRACKET																																																
10	79 03 201 129 RP 6921 38	01 01	CAPSCREW DIAM 5X0,80-12																																																
11	79 03 058 027	01	SPRING WASHER 5X12X1,2																																																
12	79 03 032 006 RP 6933 08	01 01	HEXAGONAL NUT 5X80-4																																																
<p style="text-align: right;">[02/92] E6160100</p> <p style="text-align: right;">E6160100</p>																																																			

Electrical Equipment *Electronic modules, under hood*

30/01/98 GB G07 ↑ 30/06/98		ELECTRONIC EQUIPMENT UNDER BONNET	
1235 05 6161 10			
PAGE 1			
			
			
			
			
			
			
			
[02/92]		E616110C	
E6161100			
1	95 576 443 RP 1267 12	01	ADDIT RESISTOR MOTOR DRIVEN FAN
2	96 067 317 RP 1920 E2	01	SPEED SENSOR -16 TZI
	91 541 075 RP 1920 C3	01	-ESTATE 19 TRI
		01	-ESTATE 19 TZI
			-GTI
	91 541 027 RP 5918 80	01	-GTI 16V
3	97 517 535 RP 1306 41	01	WATER LEVEL BOX
4	96 028 243 RP 1628 H9	01	REGULATOR BOX
		01	CATALYSER OVERHEATING WARNING
5	91 517 708 RP 5920 35	01	SENSOR BRACKET
6	96 046 539	01	BOX BRACKET SURCHAUF POT CATA CATALYSER OVERHEATING WARNING
7	79 03 076 169 RP 6992 77	01	CLIP
8	79 03 009 072 RP 6913 15	02	SOCKET SCREW 6X100-12
9	79 03 201 139 RP 6915 69	02	CAPSCREW 6X100-16
10	79 03 233 002 RP 6936 91	02	NUT WITH BASE 6X100



Electrical Equipment

Aerial, statics supressor

30/01/98 GB G08 ↑		30/06/98	
1235 05 6533 10		AERIAL - SP GRILLE - STATICS SUPPRESSING	
PAGE 1			
1	97 512 672 01	AERIAL WIRE CHROME BLANC SILVER PLATED	95 631 250 FXX 01 RIGHT RP 95 631 250 XX 01 ON DASHBOARD
	97 512 685 01	CHROME NOIR SADITEL BLACK	6 95 632 532 FCH 01 LEFT AV RP 95 632 532 CH 01 ON DOOR
2	97 512 669 01	AERIAL BASE CHROME BLANC MAG SILVER PLATED	95 632 532 FLE 01 LEFT AV RP 95 632 532 LE 01 ON DOOR
	97 512 670 01	CHROMEE NOIRE BLACK	95 632 532 TR 01 LEFT AV ON DOOR
	RP 6561 10 01		95 632 532 FXX 01 LEFT AV RP 95 632 532 XX 01 ON DOOR
3	95 495 992 01	AERIAL TELESCOPIQUE	95 632 531 FCH 01 RIGHT AV RP 95 632 531 CH 01 ON DOOR
4	95 583 387 NFP 01	LDSPKR BRACKET LEFT SUR CUSTODE -SALOON ON QUARTER PANEL	95 632 531 FLE 01 RIGHT AV RP 95 632 531 LE 01 ON DOOR
	95 583 386 NFP 01	RIGHT SUR CUSTODE -SALOON ON QUARTER PANEL	95 632 531 TR 01 RIGHT AV ON DOOR
5	95 633 967 FCH 01	LOUDSPKR GRILLE LEFT	95 632 531 FXX 01 RIGHT AV RP 95 632 531 XX 01 ON DOOR
	RP 95 633 967 CH 01	ON DASHBOARD	7 95 573 744 02 ON QUARTER PANEL
	95 633 967 FLE 01	LEFT	8 95 580 019 02 LDSPEAKER PLUG ON QUARTER PANEL
	RP 95 633 967 LE 01	ON DASHBOARD	9 95 634 767 01 RADIO BRACKET AR
	95 633 967 TR 01	LEFT ON DASHBOARD	10 95 599 444 02 25W ON DASHBOARD
	95 633 967 FXX 01	LEFT	95 599 625 02 15W ON DASHBOARD
	RP 95 633 967 XX 01	ON DASHBOARD	11 95 495 389 02 -SALOON ON QUARTER PANEL
	95 631 250 FCH 01	RIGHT	95 633 172 02 20W -ESTATE ON REAR SHELF
	RP 95 631 250 CH 01	ON DASHBOARD	
	95 631 250 FLE 01	RIGHT	
	RP 95 631 250 LE 01	ON DASHBOARD	
	95 631 250 TR 01	RIGHT ON DASHBOARD	



Electrical Equipment *Aerial, statics supressor*

30/01/98	GB	G09	↑	30/06/98			
1235 05	6533	10		AERIAL - SP GRILLE - STATICS SUPPRESSING			
PAGE 2							
12	ZC 9865 887 U		01	HEADPHONE			
	NFP						
13	ZC 9865 841 U		01	HDPHONE PICK-UP POUR CASQUE ECOUTE			
	NFP						
14	95 561 136		01	CO-AXIAL CABLE LONG 3255			
15	95 588 122		02	EARTH BRAID			
16	79 03 016 150		02	TAPPING SCREW 4,2X13			
	RP 6925 54		01				
17	79 03 074 186		02	FLOOR PLUG DIAM 10 H 12			
18	5 490 966		01	CONDENSER DE BOBINE			
	NFP			IGNITION COIL			

Engine Environment and Misc Engine bracket

30/01/98 GB C02 ↑ 1235 06 1330 10 PAGE 1	30/06/98 ENGINE BRACKET	16 TZI 19 TRI 19 TZI GTI	
		1 91 517 868 RP 1846 59 + 6930 85 2 96 073 371 RP 1807 47 3 91 521 622 RP 1839 27 4 91 517 554 RP 1844 42 5 96 033 565 RP 1843 95 6 96 035 819 RP 1854 16 7 91 521 582 8 96 029 572 RP 1840 28 9 91 595 018 RP 6930 85 10 96 029 582 RP 1841 14	01 MOUNTING BRACKT 01 RIGHT INTM 03 01 RIGHT INTM INF (ASS) 01 01 RIGHT SUP 01 01 RIGHT ELASTIQUE 01 01 LEFT 01 01 SUPPORT YOKE INF 01 02 SUSPENS BUFFER 01 FIXING SPINDLE 01 03 STUD 10X150-50 01 01 PLAIN WASHER 14X48-3 01 RP 1809 -16 lower E-mount Bush.
E1330100		E1330100	

Engine Environment and Misc *Engine bracket*

30/01/98 GB C03 † 1235 06 1330 20 PAGE 1	30/06/98 ENGINE BRACKET	GTI 16V	
<p style="text-align: center;">[11/93] 01330200</p>		1 91 541 095 RP 1846 44 2 96 073 371 RP 1807 47 3 91 537 823 RP 1839 17 4 91 517 554 RP 1844 42 5 96 033 565 RP 1843 95 6 96 035 819 RP 1854 16 7 91 521 582 8 96 029 572 RP 1840 28 9 79 03 027 316 RP 6930 37 10 96 029 582 RP 1841 14	01 MOUNTING BRACKT 01 RIGHT 01 RIGHT INTM INF (ASS) 01 RIGHT SUP D 01 RIGHT ELASTIQUE 01 LEFT 01 SUPPORT YOKE INF 02 SUSPENS BUFFER 01 FIXING SPINDLE 04 FIXING STUD 10X150-50 01 PLAIN WASHER 14X48-3
E1330200			



Engine Environment and Misc *Engine bracket, securing*

30/01/98 GB C04 ↑ 1235 06 1331 10 PAGE 1	30/06/98 ENGINE BRACKET - SECURING	16 TZI 19 TRI 19 TZI GTI	
		1 79 03 201 175 RP 6922 16 2 91 595 041 RP 1803 32 3 79 03 201 645 RP 6922 96 79 03 001 917 RP 6918 93 4 79 03 001 864 RP 6917 78 5 79 03 057 100 RP 6962 11 6 91 507 329 RP 1841 05 7 79 03 053 392 RP 6947 78 8 79 03 057 005 RP 6962 13 9 79 03 033 027 RP 6936 30 10 79 03 032 017 RP 6936 80 11 79 03 034 018 12 25 322 019 13 79 03 033 007 RP 6936 80 14 79 03 232 018 RP 6932 15	CAPSCREW DIAM 10X1,50-80 12X175-65 10X125-70 DIAM 10X1,25-80 10X150-30 FLEXIBLE WASHER 10,4X21,3-0,8 SUSPENS WASHER DIAM 12 PLAIN WASHER 8,5X16-1,5 FLEXIBLE WASHER DIAM 8X14 WASHER-NUT DIAM 10X1,50 HEXAGONAL NUT HE 8X1,25 SELF LOCKG NUT 10X150-10,5 12X175-11,5-18 DIAM 8X1,25 HEXAGONAL NUT 10X150-8,3
E1331100			



Engine Environment and Misc *Engine bracket, securing*

30/01/98 GB C05 ↑ 1235 06 1331 20 PAGE 1	30/06/98 ENGINE BRACKET - SECURING	GTI 16V	
<p style="text-align: right;">11/93 01331120</p>		1 79 03 201 052 RP 6921 91 79 03 201 057 RP 6922 16 79 03 201 695 RP 5703 17 79 03 201 073 RP 6923 37 91 595 314 RP 1803 22 2 79 03 001 864 RP 6917 78 3 91 595 041 RP 1803 32 4 79 03 201 175 RP 6922 16 5 79 03 057 100 RP 6962 11 79 03 057 019 RP 6962 45 6 79 03 057 005 RP 6962 13 7 91 507 329 RP 1841 05 8 79 03 053 392 RP 6947 78 9 79 03 033 027 RP 6936 30 10 79 03 232 018 RP 6932 15	01 CAPSCREW 01 10X1,50-55 01 DIAM 10X1,50-80 01 10X150-120 01 TH 12X1,75 -85 01 SUSPENSN SCREW TH 12X1,75 - 95 04 CAPSCREW 01 10X150-30 01 12X175-65 01 DIAM 10X1,50-80 08 FLEXIBLE WASHER 01 10,4X21,3-0,8 02 DIAM 12 01 04 DIAM 8X14 01 01 SUSPENS WASHER DIAM 12 01 02 PLAIN WASHER 8,5X16-1,5 01 04 WASHER-NUT DIAM 10X1,50 01 01 HEXAGONAL NUT 10X150-8,3 01
E1331200		...J...	



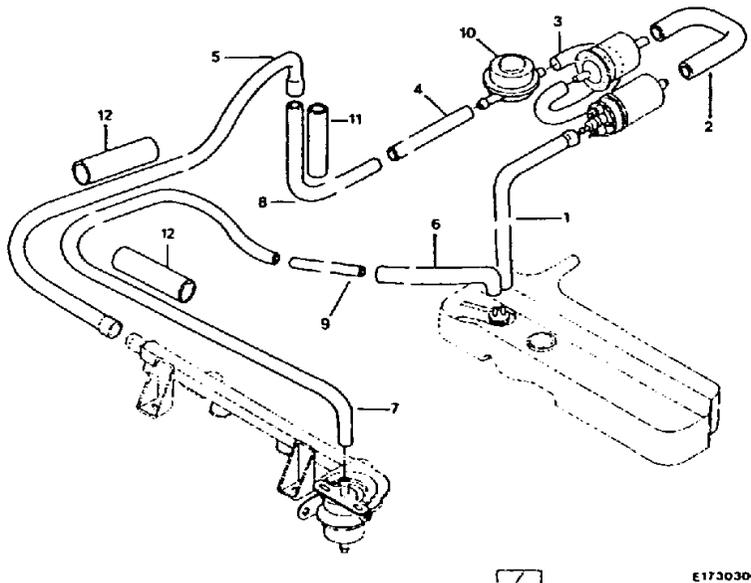
Engine Environment and Misc *Engine bracket, securing*

30/01/98 GB C06 ↑ 1235 06 1331 20 PAGE 2	30706798 ENGINE BRACKET - SECURING	GTI 16V	
<p style="text-align: center;"> 11/93 01331120 </p> <p style="text-align: right;">E1351200</p>		11 25 322 019 01 12 79 03 232 017 02 RP 6932 38 01 13 79 03 034 018 01 14 79 03 033 007 02 RP 6936 80 01	SELF LOCKG NUT 12X175-11,5-18 HEXAGONAL NUT 8X1,25-6,5 SELF LOCKG NUT 10X150-10,5 DIAM 8X1,25

Engine Environment and Misc Fuel piping

30/01/98 GB C08 ↑ 1235 06 1730 20 PAGE 1	30/08/98 FUEL PIPING	19 TRI 19 TZI GTI	
		1 95 499 102 01 2 95 603 300 01 3 95 637 268 01 4 95 499 104 01 5 95 617 111 01 6 95 655 310 02 7 95 633 801 01 8 95 594 178 01 9 91 539 325 01 RP 1563 89 01 10 79 05 026 803 01	FUEL FEED PIPE DIAM INT 9 ET 11 1570 RUBBER HOSE DIAM INT 7,5-190 DIAM INT 7,5-9,5-1130 FUEL FEED PIPE RUBBER HOSE DIAM INT 7-5000 CL FUEL FEED PIPE DIAM EXT 10-1535 RETURN PIPE DIAM EXT 8 LON 1645 PULSATN BUFFER PIPE SHEATH DIAM 27-70
E1730200			

Engine Environment and Misc Fuel piping

30/01/98 GB C09 ↑ 1235 06 1730 30 PAGE 1	30/05/98 FUEL PIPING	GTI 16V																																											
 <p style="text-align: right;">E1730300</p>		1 2 3 4 5 6 7 8 9 10 11 12	<table border="1"> <tr> <td>95 499 102</td> <td>01</td> <td>FUEL FEED PIPE DIAM INT 9 ET 11</td> </tr> <tr> <td>95 603 300</td> <td>01</td> <td></td> </tr> <tr> <td>95 637 268</td> <td>01</td> <td>RUBBER HOSE DIAM INT 7,5-190</td> </tr> <tr> <td>95 499 104</td> <td>01</td> <td>DIAM INT 7,5-9,5-1130</td> </tr> <tr> <td>96 995 009</td> <td>01</td> <td>DIAM INT 9 -1070</td> </tr> <tr> <td>RP 1577 63</td> <td>01</td> <td></td> </tr> <tr> <td>95 655 310</td> <td>01</td> <td>DIAM INT 7-5000 CL</td> </tr> <tr> <td>96 995 008</td> <td>01</td> <td>DIAM INT 7 -1310</td> </tr> <tr> <td>95 633 801</td> <td>01</td> <td>FUEL FEED PIPE DIAM EXT 10-1535</td> </tr> <tr> <td>95 594 178</td> <td>01</td> <td>RETURN PIPE DIAM EXT 8 LON 1645</td> </tr> <tr> <td>91 539 325</td> <td>01</td> <td>PULSATN BUFFER</td> </tr> <tr> <td>RP 1563 89</td> <td>01</td> <td></td> </tr> <tr> <td>79 05 026 803</td> <td>01</td> <td>PIPE SHEATH DIAM 27-70</td> </tr> <tr> <td>79 05 026 922</td> <td>01</td> <td>HARNES SHEATH</td> </tr> </table>	95 499 102	01	FUEL FEED PIPE DIAM INT 9 ET 11	95 603 300	01		95 637 268	01	RUBBER HOSE DIAM INT 7,5-190	95 499 104	01	DIAM INT 7,5-9,5-1130	96 995 009	01	DIAM INT 9 -1070	RP 1577 63	01		95 655 310	01	DIAM INT 7-5000 CL	96 995 008	01	DIAM INT 7 -1310	95 633 801	01	FUEL FEED PIPE DIAM EXT 10-1535	95 594 178	01	RETURN PIPE DIAM EXT 8 LON 1645	91 539 325	01	PULSATN BUFFER	RP 1563 89	01		79 05 026 803	01	PIPE SHEATH DIAM 27-70	79 05 026 922	01	HARNES SHEATH
95 499 102	01	FUEL FEED PIPE DIAM INT 9 ET 11																																											
95 603 300	01																																												
95 637 268	01	RUBBER HOSE DIAM INT 7,5-190																																											
95 499 104	01	DIAM INT 7,5-9,5-1130																																											
96 995 009	01	DIAM INT 9 -1070																																											
RP 1577 63	01																																												
95 655 310	01	DIAM INT 7-5000 CL																																											
96 995 008	01	DIAM INT 7 -1310																																											
95 633 801	01	FUEL FEED PIPE DIAM EXT 10-1535																																											
95 594 178	01	RETURN PIPE DIAM EXT 8 LON 1645																																											
91 539 325	01	PULSATN BUFFER																																											
RP 1563 89	01																																												
79 05 026 803	01	PIPE SHEATH DIAM 27-70																																											
79 05 026 922	01	HARNES SHEATH																																											
E1730300																																													

Engine Environment and Misc Fuel pump, filter

30/01/98 GB C10 ↑ 1235 06 1731 10 PAGE 1	30/06/98 ELECTRIC PETROL PUMP - FILTER	16 TZI	
<p>1230</p> <p>06/98</p> <p>06-1731-17</p> <p>E1731100</p>		1 96 038 893 RP 1450 92 2 95 470 530 RP 1567 79 3 95 630 062 4 95 630 058 5 95 630 064 6 96 039 110 RP 1452 15	01 PETROL PUMP 01 01 FUEL FILTER 01 01 PUMP BRACKET 01 SHIELD 01 STRAP PROTECTOR 01 PUMP SPACER DIAM 44X52-95 01

Engine Environment and Misc Fuel pump, filter

<p>30/01/98 GB C11 ↑ 1235 06 1731 20 PAGE 1</p>	<p>30/06/98 ELECTRIC PETROL PUMP - FILTER</p>	<p>19 TRI 19 TZI GTI GTI 16V</p>	
<p style="text-align: center;">03/94 E 173 1200</p>		<p>1 91 538 806 RP 1450 59</p> <p>2 95 470 530 RP 1567 79</p> <p>3 95 630 062</p> <p>4 95 630 058</p> <p>5 95 630 064</p> <p>6 95 639 807</p>	<p>01 PETROL PUMP</p> <p>01 FUEL FILTER</p> <p>01 PUMP BRACKET</p> <p>01 SHIELD</p> <p>01 STRAP PROTECTOR</p> <p>01 PROTECTOR DIAM 14X20</p>
<p>E 173 1200</p>			



Engine Environment and Misc Fuel piping, securing

30/01/98 GB C13 † 1235 06 1734 20 PAGE 1	30/06/98 FUEL PIPING - SECURING	19 TRI 19 TZI GTI	
<p style="text-align: center;">11/93 D1734120</p>	1 95 613 807 2 91 517 316 3 5 474 776 4 79 03 079 007 5 95 499 172 6 79 03 079 193 7 95 499 115 8 95 598 490 9 26 140 239 10 SRV 000 016 RP 6981 36 11 SRV 000 017 RP 6981 37 12 79 03 053 028 RP 6947 77 13 79 03 058 028 RP 6962 99 14 79 03 053 508 RP 6946 28 15 25 260 019 RP 79 03 232 016 16 95 637 241 67 91 506 208 RP 1563 98	01 PIPE BRACKET 01 PROTECT BRACKET 01 BUSHING 01 CLIP 1T 14 01 SWIVEL CLIP 2T 18-4 01 SUPPORT CLIP 2T 14-16 01 SWIVEL CLIP 4T 18-18-4-4 01 PIPE BRACKET ADJUST CLAMP 02 01 DIAM 12 A 22 LARG 9 01 08 DIAM 16 A 27 LARG 9 01 02 PLAIN WASHER 6X12-1,2 01 01 SPRING WASHER DIAM 6X14X1,4 01 01 PLAIN WASHER 12,5X24-1,5 01 01 HEXAGONAL NUT DIAM 6X1,00 01 01 FIXING NUT DIAM M 8X1,25 01 CORNER-PLATE 01	
D1734120			



Engine Environment and Misc Fuel piping, securing

30/01/98 GB C14 ↑ 1235 06 1734 30 PAGE 1	30/06/98 FUEL PIPING - SECURING	GTI 16V	
	1 95 613 807 2 95 584 926 3 5 474 776 4 79 03 079 007 5 95 499 172 6 79 03 079 193 7 95 499 115 8 26 140 239 9 SRV 000 016 RP 6981 36 10 SRV 000 017 RP 6981 37 11 79 03 201 463 RP 6922 54 12 79 03 201 129 RP 6921 38 13 79 03 053 028 RP 6947 77 14 79 03 058 028 RP 6962 99 15 79 03 053 508 RP 6946 28 16 25 260 019 RP 79 03 232 016 17 95 637 241	01 PIPE BRACKET 01 LINE BRACKET UP TO O 4676 01 SUPPORT BRACKET SINCE O 4677 01 BUSHING 01 CLIP 1T 14 01 SWIVEL CLIP 2T 18-4 01 SUPPORT CLIP 2T 14-16 01 SWIVEL CLIP 4T 18-18-4-4 ADJUST CLAMP 02 01 DIAM 12 A 22 LARG 9 01 08 DIAM 16 A 27 LARG 9 01 CAPSCREW 01 RI 6X1,00-20 01 01 DIAM 5X0,80-12 01 02 PLAIN WASHER 6X12-1,2 01 01 SPRING WASHER DIAM 6X14X1,4 01 01 PLAIN WASHER 12,5X24-1,5 01 01 HEXAGONAL NUT DIAM 6X1,00 01 01 FIXING NUT DIAM M 8X1,25	
	1230 [02/88] 6.173.18 E1734300		.../...



Engine Environment and Misc Fuel piping, securing

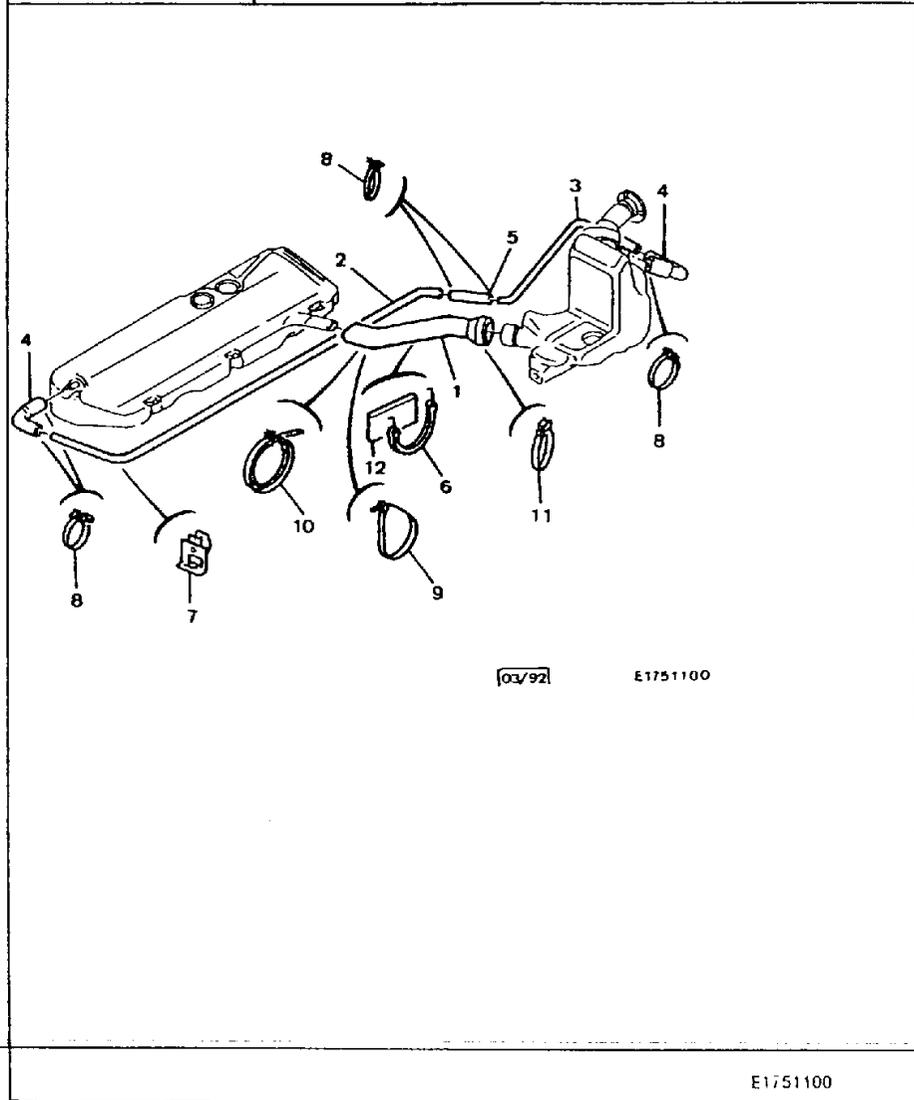
<p>30/01/98 GB C15 ↑ 30/06/98 1235 06 1734 30 PAGE 2</p>	<p>FUEL PIPING - SECURING</p>	<p>GTI 16V</p>	
<p>1230 [02/90] 6.173.16</p>	<p>18 95 623 754 RP 79 03 037 001 19 26 157 909</p>	<p>01 NUT WITH BASE DIAM 6X1,00 01 01 SPEED NUT 5X80-14,6-12,2</p>	
<p>E1734300</p>			

Engine Environment and Misc Fuel tank

30/01/98 GB D15 ↓ 1235 06 1750 10 PAGE 1	30/06/98 FUEL TANK		
<p style="text-align: center;">[02/93] E1750100</p> <p style="text-align: right;">E1750100</p>		1 95 646 197 01 FUEL TANK 2 92 552 015 01 RHEOSTAT 3 95 610 428 01 TANK RECESS 4 95 562 758*700 02 FUEL TANK RING DIAM=79.5, E=15 RP 95 562 758 XA 01 5 95 606 278 FUEL TANK SEAL RP 1528 19 6 95 577 524*700 FLOOR PLUG DIAM 120 EP 10 RP 1530 09 7 95 635 475 05 FUEL TANK SHIM CAPSCREW 8 79 03 101 602 03 RI 8X1,25-30 RP 6922 76 01 9 79 03 201 034 02 8X125-30 RP 6914 62 01 10 79 03 053 046 02 PLAIN WASHER DIAM 8X22-2,5 RP 6947 79 01 11 79 03 046 047 SPEED NUT 8X125-36-26 12 95 630 064 01 STRAP PROTECTOR	

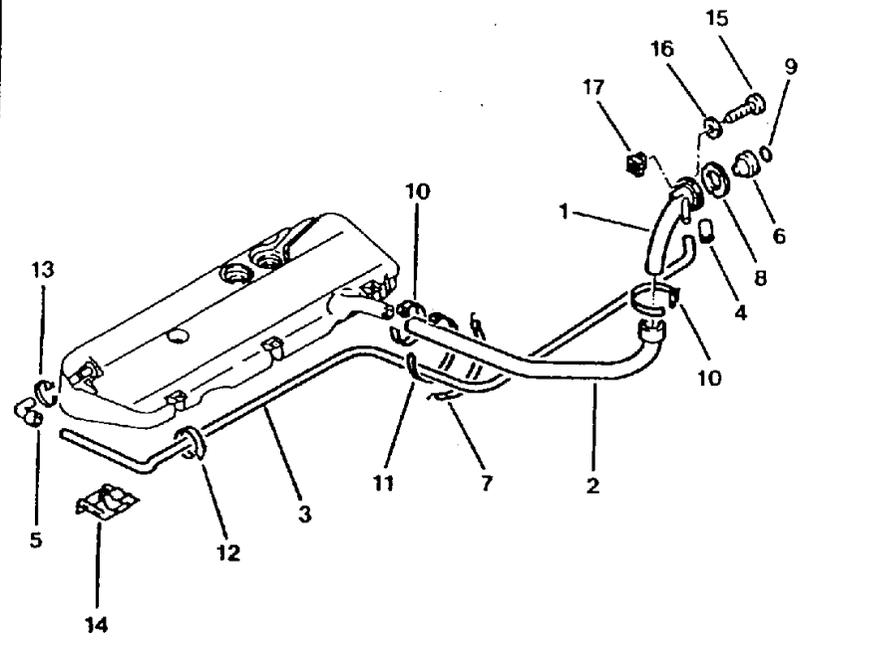


Engine Environment and Misc Fuel filling pipes and ducts

30/01/98 GB D14 1235 06 1751 10 PAGE 1	30/06/98 TANK FILLING DUCTS - PIPE	SALOON	
 <p style="text-align: center;">03/92 E1751100</p>		1 95 636 845 01 2 95 632 860 01 3 95 632 859 01 4 79 05 026 881 02 5 95 634 071 01 6 95 576 060 02 7 79 03 079 163 01 8 79 03 083 250 02 RP 1565 99 01 9 79 03 085 045 02 RP 6980 28 01 10 23 019 029 02 11 SRV 000 022 01 RP 6981 42 01 12 95 630 529 01	01 FILLER PIPE INTERM 01 DEGASSING TUBE DIAM 10X12 01 DIAM 10X12 02 01 DIAM 11X16 LON 80 C001 RUBBER 02 PIPE STRAP 01 LINE BRACKET 1T 11 PINC 1,1A1,3 02 ADJUST CLAMP LONG 580 LARG 5 01 02 STRAP LON 245 01 02 ADJUST COLLAR LONG 980 LARG 8 01 DIAM 50 A 70 LARG 9 01 01 FUEL TANK SHIM 70X45 EP 9
E1751100			



Engine Environment and Misc Fuel filling pipes and ducts

30/01/98 GB D13 1235 06 1751 20 PAGE 1	30/06/98 TANK FILLING DUCTS - PIPE	ESTATE	
 <p style="text-align: center;">03/92 E 175 1200</p> <p style="text-align: right;">E1751200</p>		1 95 631 823 RP 96 127 562 + 96 995 064 2 95 638 252 3 95 562 982 4 26 233 519 5 79 05 026 881 6 96 007 142 7 95 576 060 8 95 577 637 9 79 03 065 139 10 23 019 029 11 79 03 085 045 RP 6980 28 12 79 03 085 034 13 79 03 083 250 RP 1565 99 14 79 03 079 163 15 79 03 007 136 16 79 03 061 130 17 79 03 046 053	01 FILLER PIPE 01 AVEC REDUCTEUR 01 01 01 VENTING PIPE DIAM 10X12 LON1276,5 01 DEGASSING TUBE 01 11X18-70 01 01 LOCKING CAP 02 PIPE STRAP 01 TANK CAP SEAL DIAM INT 52 E 8 01 RING-SEAL DIAM INT 17 02 ADJUST COLLAR LONG 980 LARG 8 01 STRAP LON 245 01 01 ADJUST CLAMP 01 LONG 77 LARG 12 01 LONG 580 LARG 5 01 01 LINE BRACKET 1T 11 PINC 1,1A1,3 03 CAPSCREW 4X70-25 03 PLAIN WASHER 4,2X8-1 03 SPEED NUT 4X70-14,1-12,5



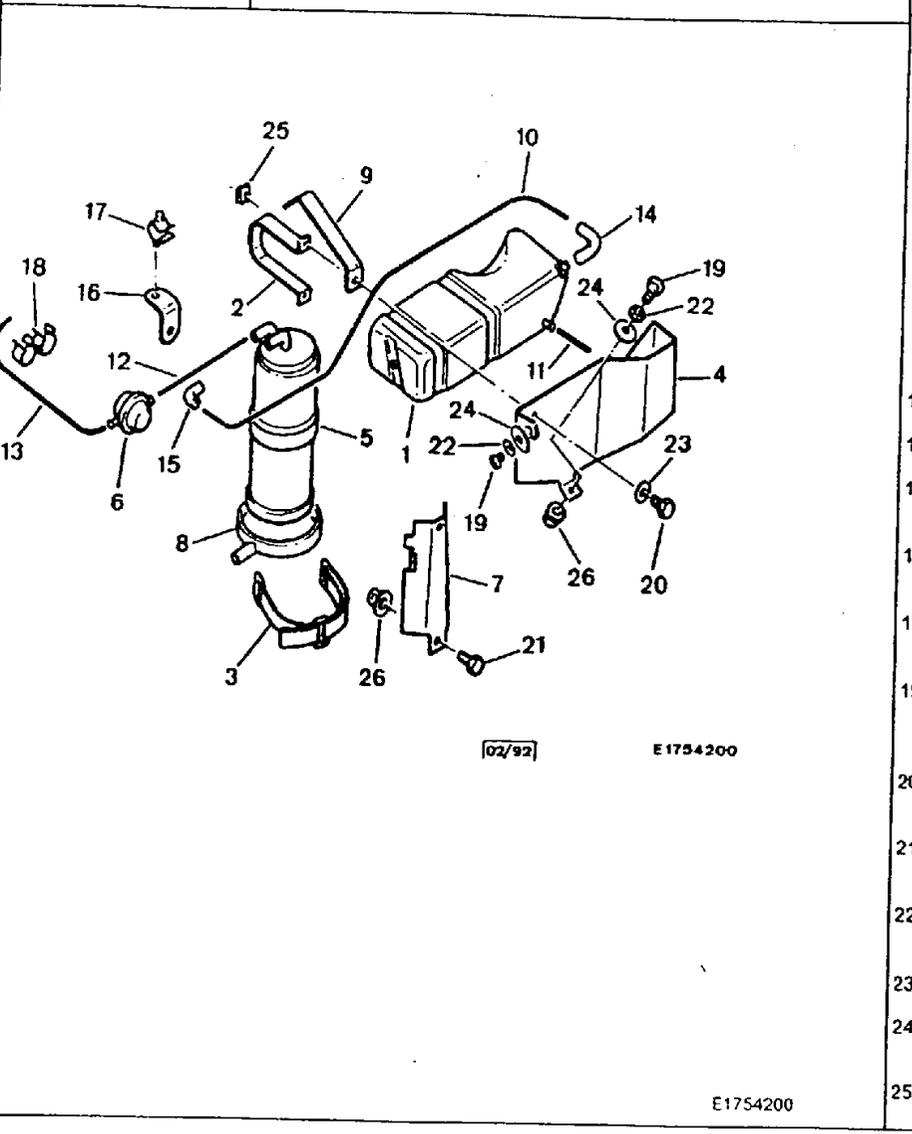
Engine Environment and Misc Fuel tank, anti-pollution

30/01/98 GB D11 1235 06 1753 20 PAGE 1	30/06/98 ANTI POLLUTION - FUEL TANK	SINCE O 5173																																	
<p style="text-align: right;">D 1753200</p>		<table border="1"> <tr> <td>1</td> <td>96 127 736</td> <td>01</td> <td>CATCHER TANK 3 PIPETTES</td> </tr> <tr> <td>2</td> <td>96 111 927 RP 1505 F4</td> <td>01 01</td> <td>ABSORBER 2 PIQUAGES</td> </tr> <tr> <td>3</td> <td>95 637 234</td> <td>01</td> <td>FILTER BRACKET</td> </tr> <tr> <td>4</td> <td>96 128 061</td> <td>01</td> <td>TANK STRAP</td> </tr> <tr> <td>5</td> <td>95 587 296 RP 1538 34</td> <td>01 01</td> <td>FIXING STRAP</td> </tr> <tr> <td>6</td> <td>96 004 115 RP 1505 75</td> <td>01 01</td> <td>TANK PROTECTOR DIAM INT 80 EP 33</td> </tr> <tr> <td>7</td> <td>79 03 201 328 RP 6922 54</td> <td>01 01</td> <td>SELF-TAP SCREWS 6X100-20</td> </tr> <tr> <td>8</td> <td>79 03 044 014 RP 6941 11</td> <td>01 01</td> <td>CAGED NUT 6X100-12-18</td> </tr> </table>	1	96 127 736	01	CATCHER TANK 3 PIPETTES	2	96 111 927 RP 1505 F4	01 01	ABSORBER 2 PIQUAGES	3	95 637 234	01	FILTER BRACKET	4	96 128 061	01	TANK STRAP	5	95 587 296 RP 1538 34	01 01	FIXING STRAP	6	96 004 115 RP 1505 75	01 01	TANK PROTECTOR DIAM INT 80 EP 33	7	79 03 201 328 RP 6922 54	01 01	SELF-TAP SCREWS 6X100-20	8	79 03 044 014 RP 6941 11	01 01	CAGED NUT 6X100-12-18	
1	96 127 736	01	CATCHER TANK 3 PIPETTES																																
2	96 111 927 RP 1505 F4	01 01	ABSORBER 2 PIQUAGES																																
3	95 637 234	01	FILTER BRACKET																																
4	96 128 061	01	TANK STRAP																																
5	95 587 296 RP 1538 34	01 01	FIXING STRAP																																
6	96 004 115 RP 1505 75	01 01	TANK PROTECTOR DIAM INT 80 EP 33																																
7	79 03 201 328 RP 6922 54	01 01	SELF-TAP SCREWS 6X100-20																																
8	79 03 044 014 RP 6941 11	01 01	CAGED NUT 6X100-12-18																																
E1753200																																			

Engine Environment and Misc Fuel tank piping, anti-pollution

<p>30/01/98 GB D10 1235 06 1754 20 PAGE 1</p>	<p>30/06/98 ANTIPOLLUTION (PIPING)</p>	<p>UP TO O 5172</p>			
<p style="text-align: center;">E1754200</p>		<p>1 5 413 837 96 091 806 2 5 482 643 96 091 809 3 95 587 296 RP 1538 34 4 95 597 959 95 640 583 5 95 639 843 RP 1502 33 6 96 035 888 RP 1628 K5 95 640 315 RP 1626 23 96 003 087 RP 1628 F0 7 95 637 234 8 96 004 115 RP 1505 75 9 95 640 584 10 79 05 026 709 11 95 655 309 RP 1573 31</p>	<p>01 CATCHER TANK UP TO O 5099 01 PAD CAPACITY 2 PIPETTES SINCE O 5100 01 TANK STRAP UP TO O 5099 01 SINCE O 5100 01 FIXING STRAP 01 TANK BRACKET -SALOON -ESTATE 01 ABSORBER 01 ELECTRO VALVE BOSCH (GRIS) -16 TZI 01 DRAIN VALVE -SALOON 19 TRI -SALOON 19 TZI 01 ELECTRO VALVE -ESTATE 19 TRI -ESTATE 19 TZI -GTI -GTI 16V 01 FILTER BRACKET 01 TANK PROTECTOR DIAM INT 80 EP 33 01 SUPPORT LUG -ESTATE 01 RUBBER HOSE DIAM 4,5X6 LON 4500 01 FUEL FEED PIPE DIAM 5 LON 5000</p>		
		<p>E1754200</p>		<p>.../...</p>	

Engine Environment and Misc Fuel tank piping, anti-pollution

30/01/98 GB D09 1235 06 1754 20 PAGE 2	30/06/98 ANTIPOLLUTION (PIPING)	UP TO O 5172	
 <p style="text-align: center;">E1754200</p>		12 96 995 756 RP 95 655 309 13 96 995 375 NFP 96 995 449 RP 95 655 310 96 995 727 RP 1505 F3 14 96 124 484 15 96 124 483 16 95 581 943 17 79 03 079 011 RP 6986 81 18 96 995 688 RP 1635 E5 19 79 03 007 054 RP 6913 76 20 79 03 007 101 RP 6920 21 21 79 03 201 021 RP 6915 69 22 75 523 898 23 79 03 058 027 24 79 03 058 028 RP 6962 99 25 26 157 909	01 CIRCUIT PIPE DIAM INT 5 - 1500 01 RUBBER HOSE 01 DIAM INT 5ET7 -16 TZI 01 DIAM INT 7-1150 01 -19 TRI 01 -19 TZI -GTI 01 DEPRESSION HOSE DIAM INT 7 01 -GTI 16V 2 WAY UNION 01 01 01 LINE BRACKET 2 DIAM 6.5 -16 TZI 01 CLIP 1T 17 01 -16 TZI 01 SWIVEL CLIP 2T 13 01 -16 TZI 03 SCREW CBX 6X100-16 01 CAPSCREW 04 5X0,80-12 01 02 6X1,00-16 01 03 PLASTIC WASHER CC SPRING WASHER 04 5X12X1,2 03 DIAM 6X14X1,4 01 04 SPEED NUT 5X80-14.6-12.2

Engine Environment and Misc Fuel tank piping, anti-pollution

<p>30/01/98 GB D08 1235 06 1754 20 PAGE 3</p>	<p>30/06/98 ANTIPOLLUTION (PIPING)</p>	<p>UP TO O 5172</p>	
<p style="text-align: center;">02/92 E1754200</p>		<p>26 79 03 044 014 RP 6941 11</p>	<p>05 CAGED NUT 6X100-12-18 01</p>
<p>E1754200</p>			

Engine Environment and Misc Fuel tank piping, anti-pollution

30/01/98 GB D07 1235 06 1754 21 PAGE 1	30/06/98 ANTIPOLLUTION (PIPING)	SINCE O 5173	
		1 95 640 315 RP 1626 23 96 035 888 RP 1628 K5 96 003 087 RP 1628 F0 2 96 115 198 RP 1628 X2 3 96 077 418 RP 1505 A8 4 95 659 533 5 96 055 205 96 128 304 6 79 05 026 709 7 96 995 727 RP 1505 F3 8 95 659 532 RP 1528 30 96 065 250 96 995 728 RP 95 655 309 9 95 571 952 RP 5270 13 10 95 499 193	01 DRAIN VALVE 01 -SALOON 19 TZI 01 ELECTRO VALVE 01 BOSCH (GRIS) 01 -16 TZI 01 -ESTATE 19 TZI 01 -GTI 01 -GTI 16V 01 TANK PRES VALVE NOIR ET VERT 01 01 3 WAY UNION 01 01 2 WAY UNION 01 DIAM INT 7 LON 2000 01 DIAM INT 7 (70X70) 01 -SALOON 01 RECYCLING UNION DIAM INT 7 01 -ESTATE 01 RUBBER HOSE DIAM 4,5X6 LON 4500 01 DEPRESSION HOSE DIAM INT 7 01 01 RUBBER HOSE DIAM INT 5 LON 2000 01 -16 TZI 01 RECYCLING UNION 01 DIAM INT 4 ET 5-2000 01 -19 TZI 01 -GTI 01 DIAM INT 5-1430 01 -GTI 16V 01 2 WAY UNION 01 -1,905L 01 RUBBER HOSE DIAM INT 4-1060 01 -1,905L
E1754210		.../...	

Engine Environment and Misc Fuel tank piping, anti-pollution

<p>30/01/98 GB D06 1235 06 1754 21 PAGE 2</p>	<p>30/06/98 ANTIPOLLUTION (PIPING)</p>	<p>SINCE O 5173</p>	
<p style="text-align: center;">[02/92] E1754210</p>		<p>11 79 05 026 705 12 96 129 429 13 26 236 399 14 95 579 762 15 79 03 079 006 RP 6995 J5 16 79 03 079 216 RP 6994 74 + 6994 91 30 SRV 000 016 RP 6981 36</p>	<p>01 PIPE SHEATH DIAM 42X46-LON 90 01 RUBBER GROMMET DIAM INT 3 EXT26E5,5 01 01 NFP 01 SWIVEL CLIP 2T 11-11 01 CLIP 2T 4,5-5,5 01 -16 TZI 02 SWIVEL CLIP 2T 8-11 01 -16 TZI 01 99 ADJUST CLAMP DIAM 12 A 22 LARG 9 01</p>
<p>E1754210</p>			

Engine Environment and Misc Exhaust silencer

30/01/98 GB D05 1235 06 1822 10 PAGE 1	30/06/98 EXHAUST - EXPANSION CHAMBER - SILENCER	16 TZI (車) 抑々車	
<p>1230 [02/88] 06.1822.16</p>		1 95 634 351 2 96 048 418 3 95 634 349 4 91 503 080 RP 1755 34 5 95 576 338 6 79 05 026 890 79 050 268 80 7 95 495 617 8 95 483 762 RP 1713 56 9 79 03 201 038 RP 6933 04 10 79 03 080 998 RP 96 120 716 11 96 995 857 RP 6936 80	01 EXHAUST DAMPER 01 EXH RR MUFFLER 01 EXHAUST PIPE EXHAUST MOUNTG 01 ELASTIQUE 02 ELASTIQUE 01 OIL RETURN HOSE DIAM INT 9 LON 80 01 SPACER 2POS-DIAM INT 8 -28 01 FIXING CLAMP DIAM INT 55 A 58 04 HALF CLAMP 01 04 CAPSCREW 8X125-50 01 01 LOCK WASHER DIAM 8 01 04 WASHER-NUT HERI 8X1,25 01
E1822100			

Engine Environment and Misc Exhaust silencer

30/01/98 GB D04 1235 06 1822 20 PAGE 1	30/06/98 EXHAUST - EXPANSION CHAMBER - SILENCER	19 TRI 19 TZI GTI GTI 16V																																																												
	1 2 3 4 5 6 7 8 9 10 11	<table border="1"> <tr> <td>95 634 351</td> <td>01</td> <td>EXHAUST DAMPER</td> </tr> <tr> <td></td> <td></td> <td>EXH RR MUFFLER</td> </tr> <tr> <td>96 048 418</td> <td>01</td> <td>-SALOON</td> </tr> <tr> <td>96 048 419</td> <td>01</td> <td>-ESTATE</td> </tr> <tr> <td>95 634 349</td> <td>01</td> <td>EXHAUST PIPE</td> </tr> <tr> <td></td> <td></td> <td>EXHAUST MOUNTG</td> </tr> <tr> <td>91 503 080</td> <td>01</td> <td>ELASTIQUE</td> </tr> <tr> <td>RP 1755 34</td> <td>01</td> <td></td> </tr> <tr> <td>95 576 338</td> <td>02</td> <td>ELASTIQUE</td> </tr> <tr> <td>79 05 026 890</td> <td>01</td> <td>OIL RETURN HOSE DIAM INT 9 LON 80</td> </tr> <tr> <td>79 050 268 80</td> <td>01</td> <td>SPACER 2POS-DIAM INT 8 -28</td> </tr> <tr> <td>95 495 617</td> <td>01</td> <td>FIXING CLAMP DIAM INT 55 A 58</td> </tr> <tr> <td>95 483 762</td> <td>04</td> <td>HALF CLAMP</td> </tr> <tr> <td>RP 1713 56</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 201 038</td> <td>04</td> <td>CAPSCREW 8X125-50</td> </tr> <tr> <td>RP 6933 04</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 080 998</td> <td>01</td> <td>LOCK WASHER DIAM 8</td> </tr> <tr> <td>RP 96 120 716</td> <td>01</td> <td></td> </tr> <tr> <td>96 995 857</td> <td>04</td> <td>WASHER-NUT HERI 8X1,25</td> </tr> <tr> <td>RP 6936 80</td> <td>01</td> <td></td> </tr> </table>	95 634 351	01	EXHAUST DAMPER			EXH RR MUFFLER	96 048 418	01	-SALOON	96 048 419	01	-ESTATE	95 634 349	01	EXHAUST PIPE			EXHAUST MOUNTG	91 503 080	01	ELASTIQUE	RP 1755 34	01		95 576 338	02	ELASTIQUE	79 05 026 890	01	OIL RETURN HOSE DIAM INT 9 LON 80	79 050 268 80	01	SPACER 2POS-DIAM INT 8 -28	95 495 617	01	FIXING CLAMP DIAM INT 55 A 58	95 483 762	04	HALF CLAMP	RP 1713 56	01		79 03 201 038	04	CAPSCREW 8X125-50	RP 6933 04	01		79 03 080 998	01	LOCK WASHER DIAM 8	RP 96 120 716	01		96 995 857	04	WASHER-NUT HERI 8X1,25	RP 6936 80	01	
95 634 351	01	EXHAUST DAMPER																																																												
		EXH RR MUFFLER																																																												
96 048 418	01	-SALOON																																																												
96 048 419	01	-ESTATE																																																												
95 634 349	01	EXHAUST PIPE																																																												
		EXHAUST MOUNTG																																																												
91 503 080	01	ELASTIQUE																																																												
RP 1755 34	01																																																													
95 576 338	02	ELASTIQUE																																																												
79 05 026 890	01	OIL RETURN HOSE DIAM INT 9 LON 80																																																												
79 050 268 80	01	SPACER 2POS-DIAM INT 8 -28																																																												
95 495 617	01	FIXING CLAMP DIAM INT 55 A 58																																																												
95 483 762	04	HALF CLAMP																																																												
RP 1713 56	01																																																													
79 03 201 038	04	CAPSCREW 8X125-50																																																												
RP 6933 04	01																																																													
79 03 080 998	01	LOCK WASHER DIAM 8																																																												
RP 96 120 716	01																																																													
96 995 857	04	WASHER-NUT HERI 8X1,25																																																												
RP 6936 80	01																																																													
E1822200																																																														



Engine Environment and Misc Exhaust heat shields

30/01/98 GB D03 1235 06 1823 10 PAGE 1	30/06/98 EXHAUST - SCREENS		
<p style="text-align: center;">03/81 01823110</p> <p style="text-align: right;">E1823100</p>		1 95 637 164 95 593 211 NFP 2 95 612 082 3 95 562 756 4 79 03 074 073 RP 7518 21 5 79 03 077 134 RP 6992 C6 6 79 03 201 463 RP 6922 54 7 79 03 015 124 RP 6984 03 8 79 03 061 122 9 79 03 053 031 10 79 03 033 009 RP 6934 27 11 79 03 044 014 RP 6941 11 12 79 03 046 076 RP 6943 23	01 HEAT SHIELD SOUS TABLIER -LEFT HAND DRIVE UNDER BULKHEAD 01 -RIGHT HAND DRIVE SOUS TABLIER 01 SOUS PLANCHER UNDER FLOOR 01 RESERVOIR CARBURANT UNDER FUEL TANK 01 PLUG DIAM 13,5 01 04 CLIP DIAM 6,6 01 04 CAPSCREW RI 6X1,00-20 01 02 CAGE SCREW 6X100-20 01 04 RUBBER WASHER 6X25-5 04 PLAIN WASHER 6X18-1,2 07 WASHER-NUT 6X1,00 01 02 CAGED NUT 6X100-12-18 01 01 SPEED NUT 6X1,00 01

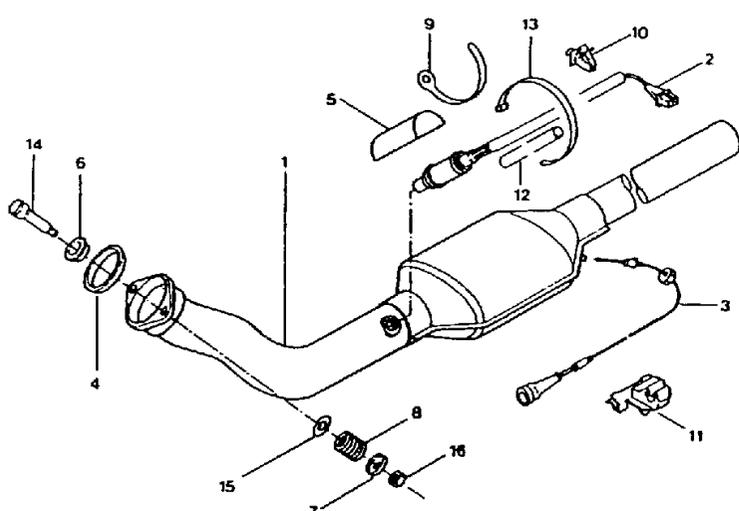
Engine Environment and Misc Catalytic converter

<p>30/01/98 GB D02 ↓ 1235 06 1832 10 PAGE 1</p>	<p>30/06/98 EXHAUST FRONT ANTIPOLLUTION</p>	<p>16 TZI</p>	
		<p>1 96 075 060 01 2 96 036 827 01 RP 1628 L4 01 3 96 123 503 01 RP 1628 X5 01 4 91 537 797 01 RP 1798 75 01 5 91 509 516 02 LISTE 9406 6 91 509 174 02 LISTE 9406 7 96 092 921 02 LISTE 9406 8 79 03 085 043 04 RP 6980 30 01 9 96 118 504 01 95 499 148 01 RP 96 118 504 01 10 96 097 060 02 LISTE 9406 11 96 039 459 02 RP 1712 28 01 12 79 03 234 016 02 RP 6935 86 01</p>	<p>01 PIPE ASS PSA K009 01 OXYGEN PROBE DIAM 18 X 1,50 01 EXH TEMP PROBE LON FAISCEAU 1125 01 EXHT PIPE BALL 02 PIPE RING DIAM 20 H 10 02 SPRING REST CUP DIAM 6X21 E 5 02 PIPE SPRING DIAM EXT 20,4 -33,5 04 STRAP DIAM 100 01 LINE BRACKET 01 1T 4,8 P INC E0,5A3 UP TO O 5684 01 1 DIAM 01 SINCE O 5685 02 PIPE FIX SCREW DIAM 6X1,00-50,1 02 PIPE WASHER DIAM 9X21 E 2,4 02 SELF LOCKG NUT 6X100</p>
<p>E1832100</p>			

Engine Environment and Misc Catalytic converter

30/01/98 GB D01 1235 06 1832 20 PAGE 1	30/06/98 EXHAUST FRONT ANTIPOLLUTION	19 TRI 19 TZI GTI GTI 16V	
<p style="text-align: right;">E18J2200</p>		1 96 047 081 2 96 036 827 RP 1628 L4 3 96 123 503 RP 1628 X5 4 91 537 797 RP 1798 75 5 96 001 488 6 91 509 516 LISTE 9406 7 91 509 174 LISTE 9406 8 91 510 245 LISTE 9406 96 092 921 LISTE 9406 9 92 529 969 10 95 580 038 11 96 118 504 12 26 230 229 13 79 03 085 043 RP 6980 30	01 PIPE ASS PSA K001 -SALOON 19 TRI -SALOON 19 TZI 01 ASS PSA K009 -GTI -ESTATE 19 TRI -ESTATE 19 TZI 01 ASS PSA K001 -GTI 16V 01 OXYGEN PROBE DIAM 18 X 1,50 01 01 EXH TEMP PROBE LON FAISCEAU 1125 01 01 EXHT PIPE BALL 01 01 HEAT SHIELD UP TO O 4729 02 PIPE RING DIAM 20 H 10 02 SPRING REST CUP DIAM 6X21 E 5 02 PIPE SPRING DIAM 20,5 LON 26,3 UP TO O 4892 02 DIAM EXT 20,4 -33,5 SINCE O 4893 01 FLANGE 01 HARNESS CLIP 1T 21 01 LINE BRACKET 1T 4,8 PINC E0,5A3 01 PROTECT SHEATH 01 STRAP DIAM 100

Engine Environment and Misc *Catalytic converter*

<p>30/01/98 GB E01 1235 06 1832 20 PAGE 2</p>	<p>30/06/98 EXHAUST FRONT ANTIPOLLUTION</p>	<p>19 TRI 19 TZI GTI GTI 16V</p>	
 <p style="text-align: right;">E 1832200</p>		<p>14 95 608 790 RP 1798 75</p> <p>96 097 060 LISTE 9406</p> <p>15 96 039 459 RP 1712 28</p> <p>16 79 03 234 016 RP 6935 86</p>	<p>02 PIPE FIX SCREW DIAM 6X100-44 01 UP TO O 4892</p> <p>02 DIAM 6X1,00-50,1 SINCE O 4893</p> <p>02 PIPE WASHER DIAM 9X21 E 2,4 01</p> <p>02 SELF LOCKG NUT 6X100 01</p>
<p>E1832200</p>			



Engine Environment and Misc *Water piping, thermostat*

30/01/88 GB E02 ↑ 1235 06 2353 10 PAGE 1	30/06/98 WATER PIPING - REGULATOR	16 TZI	
		1 79 10 016 560 RP 1338 37 96 049 156 RP 1338 11 2 79 03 065 023 RP 1339 10 97 523 016 RP 1340 30 3 96 166 936 4 96 141 192 RP 1336 H7 5 96 127 373 RP 1339 79 6 96 107 120 7 96 103 060 8 95 610 901 9 95 611 589 10 96 103 041 11 95 635 238 12 96 073 364 RP 1317 39 13 96 015 909 14 96 103 061 15 95 600 252 16 93 501 958 RP 1306 29	THERMOSTAT 01 82 DEGRES 01 01 89 DEG 01 VERNET 01 VERNET THERMOST GASKET 01 DIAM INT 53,5 01 UP TO O 5138 01 DIAM 53,5 01 SINCE O 5139 01 WATER OUTLET 01 WATER INTK TANK DIAM 32 01 01 TANK GASKET 01 A005 WITHOUT ASBESTOS 01 WTR OUTLET HOSE DIAM 32X32 01 WTR INLET HOSE 01 WATER PIPE 01 HTR WATER HOSE DIAM INT 16ET20 01 WATER PIPE DIAM 22 ET20 01 WATER HOSE 01 DIAM INT 9X14 01 01 01 WTR OUTLET HOSE DIAM INT 9,4 01 WATER PIPE DIAM INT 16 ET 20 01 HTR WATER HOSE DIAM INT 16 01 C001 RUBBER 01 DRAIN SCREW 6X100-18 01
E2353100		.../...	



Engine Environment and Misc *Water piping, thermostat*

<p>30/01/98 GB E03 ↑ 30/06/98 1235 06 2353 10 PAGE 2</p>	<p>WATER PIPING - REGULATOR</p>	<p>16 TZI</p>	
		<p>17 79 03 061 066 RP 8249 18</p> <p>18 95 576 552</p> <p>19 95 584 085 RP 1303 52</p>	<p>02 SEAL WASHER DIAM 6,5X14 E2 01</p> <p>01 PASSAGE SEAL</p> <p>01 PLUG LON 30 DIAM 23 01</p>
<p>E2353100</p>			



Engine Environment and Misc *Water piping, thermostat*

30/01/98 GB E04 ↑ 1235 06 2353 20 PAGE 1	30/06/98 WATER PIPING - REGULATOR	19 TRI 19 TZI GTI	
		1 79 10 016 560 RP 1338 37 2 79 03 065 023 RP 1339 10 3 91 514 763 RP 1337 84 4 91 535 176 5 91 518 122 RP 1628 61 6 91 535 255 RP 1340 10 1340 10 7 95 612 501 96 103 059 8 95 632 507 96 103 060 9 95 610 901 10 95 611 589 11 95 630 937 12 95 633 901 13 91 539 869 RP 1415 A1 14 91 517 975 RP 1351 04	01 THERMOSTAT 82 DEGRES 01 02 THERMOST GASKET DIAM INT 53,5 01 01 WATER OUTLET 01 01 WATER INTK TANK 2 DIAM 22 + 1 DE 36 01 01 WATER HOUSING 01 UP TO O 5138 01 TANK GASKET 01 A003 WITH ASBESTOS 01 01 A005 WITHOUT ASBESTOS 01 01 WTR OUTLET HOSE 01 DIAM INT 32 ET 36 01 UP TO O 4923 01 SINCE O 4924 01 DIAM INT 32 01 UP TO O 4923 01 WTR INLET HOSE 01 SINCE O 4924 01 WATER PIPE 01 01 HTR WATER HOSE 01 DIAM INT 16ET20 01 DIAM INT 20 ET 22 01 WATER PIPE DIAM INT 11 ET 10 01 01 WTR OUTLET HOSE DIAM 4X10 01 01 WATER PIPE DIAM INT 17,2 ET20,2 01 UP TO O 5138
E2353200		.../...	



Engine Environment and Misc *Water piping, thermostat*

30/01/98 GB E05 ↑ 1235 06 2353 20 PAGE 2	30/06/98 WATER PIPING - REGULATOR	19 TRI 19 TZI GTI	
		15 95 632 688 RP 1307 G1 96 103 061 16 95 600 252 17 75 440 236 RP 0163 50 18 93 501 958 RP 1306 29 19 79 03 062 030 RP 6988 42 20 79 03 061 066 RP 8249 18 21 95 576 552 22 22 470 009 RP 1562 51 23 91 514 549 RP 0242 46 24 95 584 085 RP 1303 52	01 CASING UNION DIAM INT 16 ET 21 01 UP TO O 5138 01 WATER PIPE DIAM INT 16 ET 20 01 SINCE O 5139 01 HTR WATER HOSE DIAM INT 16 01 CYL-BLOCK PLUG DIAM 14 X 1,50 01 01 DRAIN SCREW 6X100-18 01 01 PLUG SEAL DIAM 14,3X21-1 01 01 SEAL WASHER DIAM 6,5X14 E2 01 01 PASSAGE SEAL 01 HOUSG PLUG SEAL DIAM 12X17 01 01 TEMPERAT. PROBE DIAM 12X150- 01 01 PLUG LON 30 DIAM 23 01
E2353200			



Engine Environment and Misc *Water piping, thermostat*

30/01/98 GB E06 ↑ 1235 06 2353 30 PAGE 1	30/06/98 WATER PIPING - REGULATOR	GTI 16V	
<p style="text-align: center;">[10/93]</p> <p style="text-align: right;">E2353300</p>		1 96 020 348 RP 1338 03 2 79 03 065 023 RP 1339 10 3 91 539 886 RP 1336 G1 4 96 044 482 RP 1336 64 5 96 032 803 RP 1339 79 6 7 8 9 10 11 96 008 097 RP 1351 59 12 96 008 098 RP 1351 61 13 15 16 17 91 540 086 RP 1307 J7 18 91 537 940 RP 1351 56	01 THERMOSTAT 01 02 THERMOST GASKET DIAM INT 53,5 01 UP TO O 5138 01 WATER OUTLET 01 01 WATER INTK TANK PLASTIQUE NOIR 01 01 RING-SEAL 42,8X35,6 EP 3,6 01 01 WTR OUTLET HOSE 01 DIAM INT :32-36-16 UP TO O 5138 01 DIAM INT 32/32/14 01 WTR INLET HOSE DIAM INT 32 01 WATER PIPE METALLIQUE 01 HTR WATER HOSE 01 DIAM INT 19,2 01 DIAM 19,2X27,4 01 2 WAY UNION DIAM 19,2X27 01 01 WTR OUTLET HOSE DIAM19,2X27ET20,7X29 01 01 WATER PIPE 01 HTR WATER HOSE DIAM INT 20 ET 22 01 WTR OUTLET HOSE DIAM UNT15,2 ET 17,2 01 CASING UNION 01 01 WTR OUTLET HOSE 01 .../...



Engine Environment and Misc *Water piping, thermostat*

<p>30/01/98 GB E07 1235 06 2353 30 PAGE 2</p>	<p>30/06/98 WATER PIPING - REGULATOR</p>	<p>GTI 16V</p>	
<p style="text-align: center;">10/93</p>	<p>19 96 008 095 RP 1351 58</p> <p>20 94 01 336 658 RP 1336 65</p> <p>21 96 156 487 RP 1351 E2</p> <p>22 91 540 097 RP 1306 29</p> <p>23 93 501 958 RP 1306 29</p> <p>24 79 03 061 142 RP 1306 79</p> <p>25 79 03 061 066 RP 8249 18</p> <p>26 95 576 552</p> <p>27 95 584 085 RP 1303 52</p>	<p>01 BYPASS PIPE 01</p> <p>01 PLUG COLLECTOR AVEC JOINT 01</p> <p>01 SHEATH 01</p> <p>01 DRAIN SCREW 01</p> <p>01 6X100-18 01</p> <p>01 SEAL 01</p> <p>01 SEAL WASHER DIAM 6,5X14 E2 01</p> <p>01 PASSAGE SEAL 01</p> <p>01 PLUG LON 30 DIAM 23 01</p>	
	<p>E2353300</p>		

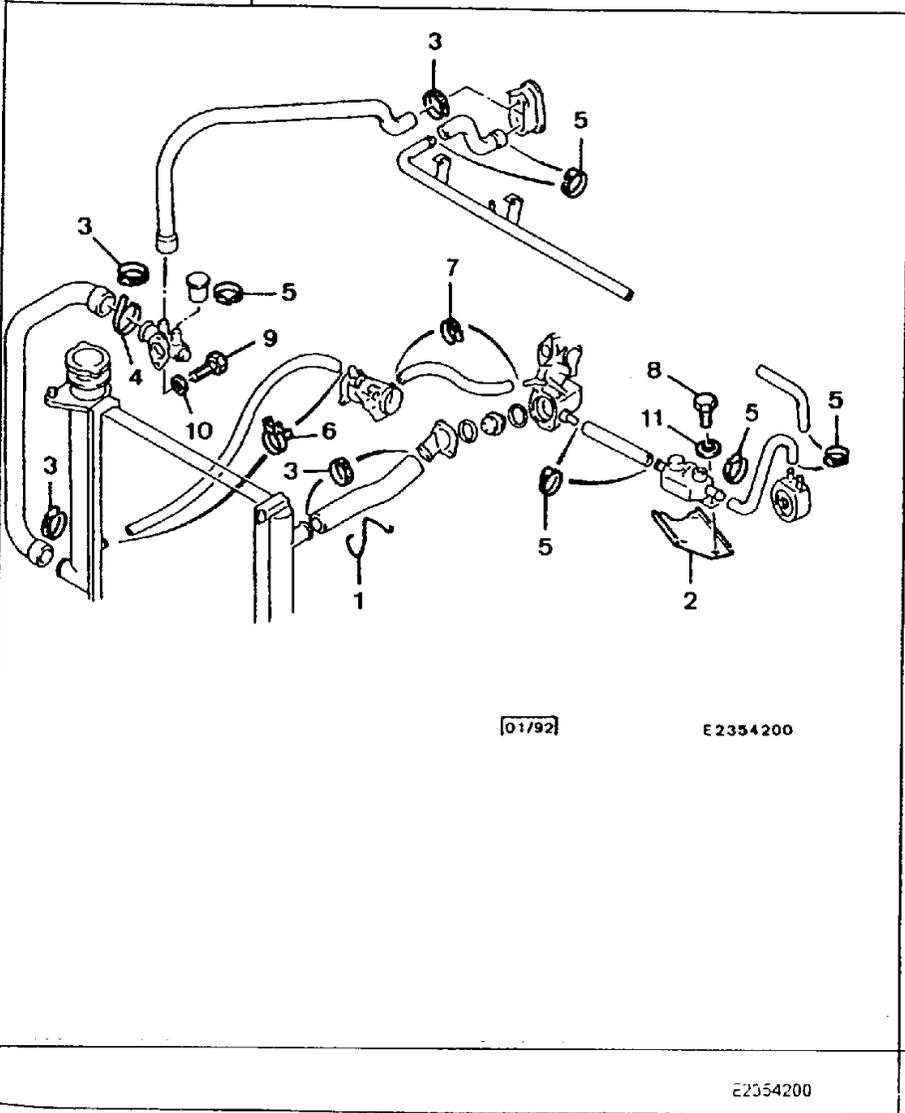


Engine Environment and Misc *Water piping, securing*

30/01/98 GB E08 ↑ 1235 06 2354 10 PAGE 1	30/06/98 WATER PIPING - SECURING	16 TZI	
	1 95 635 035 01 2 95 592 098 01 3 95 603 241 01 4 SRV 000 017 06 RP 6981 37 01 5 SRV 000 020 01 RP 6981 40 01 6 SRV 000 019 03 RP 6981 39 01 7 SRV 000 018 07 RP 6981 38 01 8 26 140 239 02 9 79 03 101 756 02 RP 6921 72 01 10 79 03 057 003 02 RP 6962 12 01	HOSE SUPPORT CONNECT BRACKET ADJUST CLAMP DIAM 16 A 27 LARG 9 DIAM 32 A 50 LARG 9 METALLIC CLAMP DIAM 25 A 47 LARG 9 DIAM 20 A 35 LARG 9 ADJUST CLAMP CAPSCREW 7X100-25 FLEXIBLE WASHER 7,4X14,2X0,8	
	E2334100		



Engine Environment and Misc *Water piping, securing*

30/01/98 GB E09 ↑ 1235 06 2354 20 PAGE 1	30/06/98 WATER PIPING - SECURING	19 TRI 19 TZI GTI	
 <p style="text-align: center;">[01/92] E2354200</p>	1 95 635 035 2 91 519 122 RP 1628 62 3 SRV 000 019 RP 6981 39 4 SRV 000 020 RP 6981 40 5 SRV 000 018 RP 6981 38 6 26 140 239 7 SRV 000 015 RP 6981 E1 8 79 03 101 392 9 79 03 101 756 RP 6921 72 10 79 03 057 003 RP 6962 12 11 79 03 057 013 RP 6962 04	01 HOSE SUPPORT 01 HOUSING BRACKET 01 05 METALLIC CLAMP DIAM 25 A 47 LARG 9 01 01 ADJUST CLAMP DIAM 32 A 50 LARG 9 01 99 METALLIC CLAMP DIAM 20 A 35 LARG 9 01 ADJUST CLAMP 02 02 DIAM 8 A 16 LARG 8 01 02 WASHER-SCREW 6X1,00-16 02 CAPSCREW 7X100-25 01 FLEXIBLE WASHER 02 7,4X14,2X0,8 01 02 6,4X12-0,5 01	
E2354200			



Engine Environment and Misc *Water piping, securing*

30/01/98 GB E10 ↑ 1235 06 2354 30 PAGE 1	30/06/98 WATER PIPING - SECURING	GTI 16V	
	1 96 021 838 01 2 96 015 828 01 3 96 015 826 01 4 96 031 590 01 5 96 016 142 01 6 91 595 320 02 7 SRV 000 018 16 RP 6981 38 01 8 SRV 000 016 01 RP 6981 36 01 9 79 03 083 005 01 RP 6981 81 01 10 SRV 000 021 02 RP 6981 41 01 11 SRV 000 019 02 RP 6981 39 01 12 79 03 009 245 02 RP 6913 93 01 13 79 03 057 003 02 RP 6962 12 01	HOSE SUPPORT CONNECT BRACKET SUPPORT LUG EP:2 RUBBER GROMMET DIAM INT 20 HOSE SUPPORT METALLIC CLAMP DIAM 20 A 35 LARG 9 ADJUST CLAMP DIAM 12 A 22 LARG 9 METALLIC CLAMP DIAM 14,5 ADJUST COLLAR DIAM 20 A 60 LARG 9 METALLIC CLAMP DIAM 25 A 47 LARG 9 SOCKET SCREW 7X100-25 FLEXIBLE WASHER 7,4X14,2X0,8	
	E2354300		

Engine Environment and Misc *Cooling radiator*

30/01/98 GB E11 ↑ 1235 06 2355 10 PAGE 1	30/06/98 COOLING RADIATOR	16 TZI	
		1 95 495 038 2 96 009 035 3 95 568 321 4 97 519 151 RP 1306 47 5 97 517 535 RP 1306 41 6 95 576 325 RP 1264 17 7 95 602 673 8 95 588 274 9 95 548 417 10 79 03 062 002 RP 0164 56 11 95 568 325 12 95 592 530 13 96 143 542 RP 1414 05 14 79 03 083 117 RP 6981 81 15 79 03 201 463 RP 6922 54 16 79 03 201 139 RP 6915 69 17 79 03 058 028 RP 6962 99	01 RADIATOR NEW 22,6 DM2 01 AIR DEFLECTOR ASS 01 FILLER PLUG 1 BAR IPRA 01 LEVEL DETECTOR 01 01 WATER LEVEL BOX 01 01 TEMPERAT SWITCH VEBE 01 DRAIN PIPE DIAM INT 8 UP TO O 5286 01 DRAIN SCREW 01 SEAL SUP VALEO (THERMIQ) 01 PLUG SEAL 22X30-2 01 01 RUBBER GROMMET DIAM INT 18 03 DIAM 12 EXT 24 01 PLUG SINCE O 5287 02 METALLIC CLAMP DIAM 12 01 05 CAPSCREW RI 6X1,00-20 01 01 6X100-16 01 01 SPRING WASHER DIAM 6X14X1,4 01
E2355100		.../...	

Engine Environment and Misc *Cooling radiator*

<p>30/01/98 GB E12 ↑ 1235 06 2355 10 PAGE 2</p>	<p>30/06/98 COOLING RADIATOR</p>	<p>16 TZI</p>	
<p>[05/93] E2355100</p>		<p>18 79 03 044 020 RP 6941 93</p>	<p>01 CAGED NUT 6X100-14-12,4-6 01</p>
<p>E2355100</p>			

Engine Environment and Misc *Cooling radiator*

30/01/98 GB E13 ↑ 1235 06 2355 20 PAGE 1	30/06/98 COOLING RADIATOR	19 TRI 19 TZI GTI	
<p style="text-align: right;">05/93 E2355200</p>		1 95 495 038 2 95 630 125 3 95 634 724 4 79 03 053 324 5 95 568 321 6 97 519 151 RP 1306 47 7 97 517 535 RP 1306 41 8 95 576 325 RP 1264 17 9 95 602 673 10 95 588 274 95 588 272 11 95 548 417 95 588 273 12 79 03 062 002 RP 0164 56 13 95 592 530 14 95 568 325 15 96 143 542 RP 1414 05 16 79 03 083 117 RP 6981 81	01 RADIATOR NEW 22,6 DM2 01 AIR DEFLECTOR SUP 01 FAN TUBE 02 PLAIN WASHER 7,5X20-5 01 FILLER PLUG 1 BAR IPRA 01 LEVEL DETECTOR 01 01 WATER LEVEL BOX 01 01 TEMPERAT SWITCH 01 V E B E 01 DRAIN PIPE DIAM INT 8 UP TO O 5286 DRAIN SCREW 01 VALEO 01 CHAUSSON SEAL 01 SUP 01 VALEO (THERMIQ) 01 VALEO 01 CHAUSSON 01 PLUG SEAL 22X30-2 01 RUBBER GROMMET 05 DIAM 12 EXT 24 01 DIAM INT 18 01 PLUG 01 SINCE O 5287 02 METALLIC CLAMP DIAM 12 01
E2355200		.../...	

Engine Environment and Misc *Cooling radiator*

<p>30/01/98 GB E14 ↑ 1235 06 2355 20 PAGE 2</p>	<p>30706798 COOLING RADIATOR</p>	<p>19 TRI 19 TZI GTI</p>	
<p>[05/93] E2355200</p> <p>E2355200</p>		<p>17 79 03 201 463 RP 6922 54</p> <p>18 79 03 201 139 RP 6915 69</p> <p>19 79 03 058 028 RP 6962 99</p> <p>20 79 03 044 020 RP 6941 93</p>	<p>05 CAPSCREW RI 6X1,00-20</p> <p>01 6X100-16</p> <p>01 SPRING WASHER DIAM 6X14X1,4</p> <p>01 CAGED NUT 6X100-14-12,4-6</p>

Engine Environment and Misc *Cooling radiator*

30/01/98 GB E15 ↑ 1235 06 2355 30 PAGE 1	30/08/98 COOLING RADIATOR	GTI 16V	
		1 95 636 832 2 96 032 254 3 96 019 305 4 95 635 732 5 97 517 535 RP 1306 41 6 95 608 918 RP 95 649 432 7 95 608 919 8 95 592 530 9 79 03 201 463 RP 6922 54 10 79 03 201 139 RP 6915 69 11 79 03 058 028 RP 6962 99 12 79 03 044 020 RP 6941 93	01 RADIATOR NEW 01 AIR DEFLECTOR ASS 01 TEMPERAT SWITCH ABS DIAM 22 -150 02 RADIATR BRACKET 01 WATER LEVEL BOX 01 01 DRAIN SCREW 01 01 SEAL 02 RUBBER GROMMET DIAM 12 EXT 24 CAPSCREW 05 RI 6X1,00-20 01 01 6X100-16 01 01 SPRING WASHER DIAM 6X14X1,4 01 01 CAGED NUT 6X100-14-12,4-6 01
E2355300			



Engine Environment and Misc *Bumper, front*

<p>30/01/98 GB F15 1235 06 6171 10 PAGE 1</p>	<p>30/06/98 FRONT BUMPER</p>	<p>16 TZI 19 TRI 19 TZI GTI</p>	
		<p>1 2 3 4 5 6 7 8 9 10 30 31 32</p>	<p>FRONT BUMPER UP TO O 4755 A PEINDRE RMP 95619105</p> <p>95 661 824 01</p> <p>95 661 825 01 -SALOON SINCE O 4756 INF A PEINDRE SUP FYB RMP 95655237</p> <p>95 661 826 01 -ESTATE SINCE O 4756 INF A PEINDRE SUP FYB RMP 95656406</p> <p>BUMPR DEFLECTOR -GTI</p> <p>95 634 257 01</p> <p>BUMPER MOULDING ENS G + D -SALOON</p> <p>95 648 529 XX 01</p> <p>95 619 721 01 RIGHT -ESTATE</p> <p>95 619 720 01 LEFT -ESTATE</p> <p>DECORATION INF</p> <p>95 635 188 01</p> <p>BLADE SET UP TO O 4755</p> <p>95 643 658 XX 01</p> <p>95 643 658 YB 01 SINCE O 4756</p> <p>95 631 043 02 BUMPER BRACKET LAT</p> <p>95 631 058 04 CLIP PINC E5 L 45X38 E 32</p> <p>95 499 128 01 MOULDING CLIP RP 7437 07 01 -SALOON</p> <p>95 635 951 04 RIVET 4,8X8</p> <p>96 093 121 06 RETAINING CLIP DIAM 6,4</p> <p>96 139 633 03 SCREW RLX 6X100-18 RP 6925 J0 01</p> <p>6921 81 04 CAPSCREW 6 X 100 - 25</p> <p>96 995 463 06 SCREW RLX 6,3-25</p>



Engine Environment and Misc *Bumper, front*

30/01/98 GB F13 ↓ 1235 06 6171 20 PAGE 1	30/06/98 FRONT BUMPER	GTI 16V	
<p style="text-align: right;">[03/94] E 6171200</p> <p style="text-align: center;">E6171200</p>		1 95 661 827 2 95 631 043 3 96 064 983 JX 4 96 077 726 JX 5 95 661 828 6 ZC 9866 208 U 7 96 093 121 30 96 995 463 31 79 03 053 372 RP 6949 29 32 79 03 046 076 RP 6943 23	01 FRONT BUMPER RMP 95653209 02 BUMPER BRACKET LAT BUMPER MOULDING 01 RIGHT 01 RIGHT 01 LEFT 01 LEFT 01 FINISH COVER A PEINDRE RMP 95656621 04 RIVET 4X16 06 RETAINING CLIP DIAM 6,4 06 SCREW RLX 6,3-25 02 PLAIN WASHER 5X16-1,5 01 04 SPEED NUT 6X1,00 01



Engine Environment and Misc *Bumper, rear*

30/01/98 GB F12 ↓ 1235 06 6172 10 PAGE 1	30/05/98 REAR BUMPER	16 TZI 19 TRI 19 TZI GTI																			
<p style="text-align: center;">[03/94] E 6172100</p>		1 2 3 4 5 30	<table border="1"> <tr> <td colspan="2" style="text-align: center;">REAR BUMPER</td> </tr> <tr> <td>95 661 829</td> <td>01 A PEINDRE RMP 95619106</td> </tr> <tr> <td>95 661 830</td> <td>01 INF A PEINDRE SUP FYB RMP 95655238</td> </tr> <tr> <td>95 648 533 XX</td> <td>01 BUMPER MOULDING ENS G+D</td> </tr> <tr> <td>95 563 861</td> <td>02 BUMPER BRACKET</td> </tr> <tr> <td>95 499 128</td> <td>16 MOULDING CLIP</td> </tr> <tr> <td>RP 7437 07</td> <td>01</td> </tr> <tr> <td>96 093 121</td> <td>02 RETAINING CLIP DIAM 6,4</td> </tr> <tr> <td>96 995 463</td> <td>06 SCREW RLX 6,3-25</td> </tr> </table>	REAR BUMPER		95 661 829	01 A PEINDRE RMP 95619106	95 661 830	01 INF A PEINDRE SUP FYB RMP 95655238	95 648 533 XX	01 BUMPER MOULDING ENS G+D	95 563 861	02 BUMPER BRACKET	95 499 128	16 MOULDING CLIP	RP 7437 07	01	96 093 121	02 RETAINING CLIP DIAM 6,4	96 995 463	06 SCREW RLX 6,3-25
REAR BUMPER																					
95 661 829	01 A PEINDRE RMP 95619106																				
95 661 830	01 INF A PEINDRE SUP FYB RMP 95655238																				
95 648 533 XX	01 BUMPER MOULDING ENS G+D																				
95 563 861	02 BUMPER BRACKET																				
95 499 128	16 MOULDING CLIP																				
RP 7437 07	01																				
96 093 121	02 RETAINING CLIP DIAM 6,4																				
96 995 463	06 SCREW RLX 6,3-25																				
E6172100																					

Engine Environment and Misc *Bumper, rear*

<p>30/01/98 GB F11 1235 06 6172 20 PAGE 1</p>	<p>30/06/98 REAR BUMPER</p>	<p>GTI 16V</p>	
<p>[03/93] E 6172200</p> <p>EG172200</p>		<p>1 95 661 833 2 95 563 861 3 96 064 984 JX 3 96 064 984 XY 4 96 093 121 30 96 995 463</p>	<p>01 REAR BUMPER RMP 95653210 01 BUMPER BRACKET BUMPER MOULDING 01 01 06 RETAINING CLIP DIAM 6,4 06 SCREW RLX 6,3-25</p>

Engine Environment and Misc *Bumper, rear*

<p>30/01/98 GB F10 1235 06 6172 30 PAGE 1</p>	<p>30/06/98 REAR BUMPER</p>	<p>ESTATE</p>	
<p style="text-align: center;">[06/92] D 6172 120</p>		<p>1 95 619 107 01 95 661 832 01 2 95 619 108 01 95 656 408 01 3 95 619 722 01 95 619 723 01 4 95 619 724 01 5 95 609 652 02 6 95 631 960 01 95 631 848 01 30 6921 81 04 31 79 03 201 139 04 RP 6915 69 01 32 96 139 633 08 RP 6925 J0 01 33 79 03 053 492 04 RP 6947 80 01 34 92 528 222 04 RP 6941 71 01 35 79 03 046 076 04 RP 6943 23 01</p>	<p>REAR BUMPER</p> <p>SUP FYB INF A PEINDRE RMP 95656407</p> <p>BUMPER MOULDING CENT INF: PAINTED - SUP: FYB</p> <p>BUMPER BRACKET LEFT RIGHT CENT</p> <p>LEFT SUP RIGHT SUP</p> <p>CAPSCREW 6 X 100 - 25</p> <p>6X100-16</p> <p>SCREW RLX 6X100-18</p> <p>PLAIN WASHER 6X18-2</p> <p>CAGED NUT 6X1,00</p> <p>SPEED NUT 6X1,00</p>
<p>E6172300</p>			

Engine Environment and Misc *Air conditioning, compressor*

<p>30/01/98 GB F09 ↓ 1235 06 6410 10 PAGE 1</p>	<p>30/06/98 AIR CONDITIONING - COMPRESOR</p>	<p>16 TZI 19 TRI 19 TZI GTI</p>	
<p style="text-align: right;">E6410100</p>		<p>1 96 043 032 RP 6453 H6</p> <p>96 079 051 RP 6453 H6</p> <p>96 118 281 RP 6453 H6</p> <p>96 133 404 RP 6453 H6</p> <p>95 659 531</p> <p>2 95 650 999 RP 6453 T7</p> <p>95 655 311 RP 6453 T7</p> <p>95 659 530 RP 6453 T7</p> <p>6453 K9</p> <p>3 91 536 229 RP 5750 H2</p> <p>4 95 634 991</p> <p>5 95 633 843</p> <p>6 95 592 534</p> <p>7 95 633 186 RP 6455 R1</p> <p>6455 R1</p>	<p>COMPRESSOR</p> <p>01 SD709 4 VES 01 UP TO O 4739</p> <p>01 5 VOIES 2 FILS 01 SANDEN INT- SINCE O 4740 UP TO O 5090</p> <p>01 5 VES 01 SANDEN INT- SINCE O 5091 UP TO O 5347</p> <p>01 5 VES 01 SANDEN INT- SINCE O 5348</p> <p>01 WITHOUT CLUTCH SD 709</p> <p>COMPRESSOR CLUT</p> <p>01 5 VES (1 FIL) 01 UP TO O 4739</p> <p>01 5 VES 01 SINCE O 4740 UP TO O 1990</p> <p>01 5 VES 2 FILS 01 SINCE O 5091 UP TO O 5347</p> <p>01 5 VES SANDEN INT- SINCE O 5348</p> <p>01 ALTERNATOR BELT 4 VOIES LON 1245 01</p> <p>01 CONDENSER CHAUSSON</p> <p>01 RADT DEFLECTOR ANTI RECYCL</p> <p>01 COWL BOX PANEL</p> <p>DRIER UNIT</p> <p>01 RANCO 01</p> <p>01 SANS PRESSOSTAT</p> <p style="text-align: right;">.../...</p>

Engine Environment and Misc *Air conditioning, compressor*

<p>30/01/98 GB F08 1235 06 6410 10 PAGE 2</p>	<p>30/06/98 AIR CONDITIONING - COMPRESOR</p>	<p>16 TZI 19 TRI 19 TZI GTI</p>	
		<p>8 9 10 11 12 13 14 15 16 17 18 19 20 21</p>	<p>95 496 899 01 DHYD PRSS SWTCH 4 VOIES MURAY 95 633 188 01 U BOLT ASS 91 511 640 01 COMPR PROTECTOR 2 DIAM 8,5 95 592 530 04 RUBBER GROMMET DIAM 12 EXT 24 95 601 818 01 RING-SEAL DIAM 9,24 X12,8 RP 6457 R0 01 95 536 897 01 PULLEY HUB SACHET FIXAT UP TO O 4739 95 651 000 01 FIXING SET SINCE O 4740 91 001 054 08 SUPPORT CUP RP 6453 54 01 79 03 067 115 05 PIN 10,6X12 RP 6968 74 01 79 03 001 623 01 CAPSCREW 8X125-30 NFP 79 03 201 039 04 8X125-55 RP 6921 42 01 UP TO O 4739 79 03 201 040 04 8X125-60 RP 6921 20 01 SINCE O 4740 79 03 201 463 03 RI 6X1,00-20 RP 6922 54 01 79 03 057 005 08 FLEXIBLE WASHER DIAM 8X14 RP 6962 13 01 79 03 053 487 03 PLAIN WASHER DIAM 8X20 EP 3,5 RP 6949 27 01 96 995 857 05 WASHER-NUT HERI 8X1,25 RP 6936 80 01</p>
<p>E6410100</p>		<p>.../...</p>	

Engine Environment and Misc *Air conditioning, compressor*

<p>30/01/98 GB F07 1235 06 6410 10 PAGE 3</p>	<p>30/06/98 AIR CONDITIONING - COMPRESOR</p>	<p>16 TZI 19 TRI 19 TZI GTI</p>	
<p style="text-align: right;">E041010K</p>		<p>22 79 03 033 009 01 RP 6934 27 01</p> <p>23 79 03 044 074 03 RP 6941 92 01</p> <p>24 6457 Y6 01</p> <p>25 6457 V1 01</p> <p>26 6457 X0 02</p> <p>27 6453 P1 01</p>	<p>WASHER-NUT 6X1,00</p> <p>CAGED NUT DIAM 6X100</p> <p>KITRECONVERSION RECONVERSION DU VEHICULE AU R 134A</p> <p>GASKET KIT RECONVERSION DU VEHICULE AU R134A</p> <p>WASHER RECONVERSION DU VEHICULE AU R134A</p> <p>WEATHERSTRIP RECONVERSION AU R134A DU COMPRESSEUR SD709MG</p>
<p>EC410100</p>			

Engine Environment and Misc *Air conditioning, compressor*

<p>30/01/98 GB F06 ↓ 1235 06 6410 20 PAGE 1</p>	<p>30/06/98 AIR CONDITIONING - COMPRESOR</p>	<p>GTI 16V</p>	
<p style="text-align: right;">E6410200</p>		<p>1 96 029 054 RP 6453 H6</p> <p>96 079 051 RP 6453 H6</p> <p>96 118 281 RP 6453 H6</p> <p>96 133 404 RP 6453 H6</p> <p>95 659 531</p> <p>2 95 650 999 RP 6453 T7</p> <p>95 655 311 RP 6453 T7</p> <p>95 659 530 RP 6453 T7</p> <p>6453 K9</p> <p>3 96 014 241</p> <p>4 95 636 459</p> <p>5 95 636 643</p> <p>6 95 633 186 RP 6455 R1</p> <p>6455 R1</p> <p>7 95 496 899</p>	<p>COMPRESSOR</p> <p>01 5 VOIES 1 FIL 01 UP TO O 4738</p> <p>01 5 VOIES 2 FILS 01 SANDEN INT- SINCE O 4739 UP TO O 5090</p> <p>01 5 VES 01 SANDEN INT- SINCE O 5091 UP TO O 5347</p> <p>01 5 VES 01 SANDEN INT- SINCE O 5348</p> <p>01 WITHOUT CLUTCH SD 709</p> <p>COMPRESSOR CLUT</p> <p>01 5 VES (1 FIL) 01 UP TO O 4738</p> <p>01 5 VES 01 SINCE O 4739 UP TO O 5090</p> <p>01 5 VES 2 FILS 01 SINCE O 5091 UP TO O 5347</p> <p>01 5 VES SANDEN INT- SINCE O 5348</p> <p>01 ALTERNATOR BELT K5 LON 1270</p> <p>01 CONDENSER CHAUSSON</p> <p>01 RECYCL PANEL</p> <p>DRIER UNIT</p> <p>01 RANCO</p> <p>01 SANS PRESSOSTAT</p> <p>01 DHYD PRSS SWITCH 4 VOIES MURAY</p>

Engine Environment and Misc *Air conditioning, compressor*

30/01/98 GB F05 ↓ 30/06/98 1235 06 6410 20 PAGE 2	AIR CONDITIONING - COMPRESOR	GTI 16V	
		8 95 633 188 01 9 96 014 527 01 RP 6453 E0 01 10 91 511 640 01 91 541 722 01 11 95 592 530 04 12 95 601 818 01 RP 6457 R0 01 13 00 56 829 300 04 RP 6453 A2 01 14 79 03 201 053 04 RP 6921 47 01 15 79 03 001 864 01 RP 6917 78 01 16 96 011 125 01 RP 5703 35 01 17 79 03 201 463 03 RP 6922 54 01 18 79 03 057 100 04 RP 6962 11 01 19 79 03 053 998 04 20 91 541 667 02 RP 6947 91 01 21 79 03 053 046 01 RP 6947 79 01 22 79 03 232 018 05 RP 6932 15 01	U BOLT ASS TENSION ROLLER LAR 23 ET 37,5 COMPR PROTECTOR 2 DIAM 8,5 UP TO O 4738 2 DIAM 10,5 ENTR 104 SINCE O 4739 RUBBER GROMMET DIAM 12 EXT 24 RING-SEAL DIAM 9,24 X12,8 COMPRESS SOCKET CAPSCREW DIAM 10X1,50-60 10X150-30 SCREW COLUMN DIAM 10X1,5 ET8X1,25 CAPSCREW RI 6X1,00-20 FLEXIBLE WASHER 10,4X21,3-0,8 SCREW WASHER DIAM 22,2X10,2X3 PLAIN WASHER 10X22-6 DIAM 8X22-2,5 HEXAGONAL NUT 10X150-8,3 .../...
E64:0200			

Engine Environment and Misc *Air conditioning, compressor*

<p>30/01/98 GB F04 ↓ 1235 06 6410 20 PAGE 3</p>	<p>30/06/98 AIR CONDITIONING - COMPRESOR</p>	<p>GTI 16V</p>	
	<p>23 79 03 232 017 01 RP 6932 38 01</p> <p>24 79 03 033 009 01 RP 6934 27 01</p> <p>25 79 03 044 074 03 RP 6941 92 01</p> <p>26 95 651 000 01</p> <p>6453 K8 01</p> <p>27 6457 Y6 01</p> <p>28 6457 V1 01</p> <p>29 6457 X0 02</p> <p>30 6453 P1 01</p>		<p>HEXAGONAL NUT 8X1,25-6,5</p> <p>WASHER-NUT 6X1,00</p> <p>CAGED NUT DIAM 6X100</p> <p>FIXING SET BAG</p> <p>POUR SD709A BAG</p> <p>KITRECONVERSION RECONVERSION DU VEHICULE AU R134A</p> <p>GASKET KIT RECONVERSION DU VEHICULE AU R 134A</p> <p>WASHER RECONVERSION DU VEHICULE AU R 134A</p> <p>WEATHERSTRIP RECONVERSION AU R134A DU COMPRESSEUR SD709MG</p>
<p>E6410200</p>			



Engine Environment and Misc *Air conditioning, circuit*

30/01/98 GB F03 ↓ 1235 06 6411 10 PAGE 1	30/06/98 AIR CONDITIONER - CIRCUIT																																																				
<p style="text-align: right;">E641110C</p> <p style="text-align: right;">E6411100</p>		1 2 3 4 5 6 7 8 9 10 11 12 13 14	<table border="1"> <tr> <td colspan="2">FREON TUBE</td> </tr> <tr> <td>95 633 185</td> <td>01 LON 1485</td> </tr> <tr> <td>95 633 182</td> <td>01 LON 1130</td> </tr> <tr> <td>6457 X6</td> <td>01 RECONVERSION DU VEHICULE AU R134A</td> </tr> <tr> <td>95 638 739</td> <td>01 LON 880 -GTI 16V</td> </tr> <tr> <td>6457 X7</td> <td>01 -GTI 16S RECONVERSION DU VEHICULE AU R134A</td> </tr> <tr> <td>95 633 183</td> <td>01 LON 380</td> </tr> <tr> <td>95 638 738</td> <td>01 LON 335 -GTI 16V</td> </tr> <tr> <td>95 633 184</td> <td>01 LON 1170</td> </tr> <tr> <td>75 527 220</td> <td>01 STOP LUG</td> </tr> <tr> <td colspan="2">RING-SEAL</td> </tr> <tr> <td>79 03 065 115</td> <td>04 DIAM INT 7,65</td> </tr> <tr> <td>RP 6457 R1</td> <td>01</td> </tr> <tr> <td>79 03 065 116</td> <td>02</td> </tr> <tr> <td>RP 6457 R3</td> <td>01</td> </tr> <tr> <td>79 03 065 117</td> <td>02 DIAM INT 10,82</td> </tr> <tr> <td>RP 6457 R2</td> <td>01</td> </tr> <tr> <td>95 604 802</td> <td>01 PROTECTOR LONG 300 P001 PVC</td> </tr> <tr> <td>79 03 058 029</td> <td>01 FLEXIBLE WASHER DIAM 7,2 X14,2X1,4</td> </tr> <tr> <td>RP 6962 70</td> <td>01</td> </tr> <tr> <td>79 03 032 036</td> <td>01 HEXAGONAL NUT DIAM 7X100</td> </tr> <tr> <td>RP 6932 05</td> <td>01</td> </tr> <tr> <td>6457 Y3</td> <td>01 CAUTION LABEL RECONVERSION DU VEHICULE AU R134A</td> </tr> <tr> <td>6457 X0</td> <td>01 WASHER RECONVERSION DU VEHICULE AU R134A</td> </tr> <tr> <td>6457 V1</td> <td>01 GASKET KIT RECONVERSION DU VEHICULE AU R134A</td> </tr> </table>	FREON TUBE		95 633 185	01 LON 1485	95 633 182	01 LON 1130	6457 X6	01 RECONVERSION DU VEHICULE AU R134A	95 638 739	01 LON 880 -GTI 16V	6457 X7	01 -GTI 16S RECONVERSION DU VEHICULE AU R134A	95 633 183	01 LON 380	95 638 738	01 LON 335 -GTI 16V	95 633 184	01 LON 1170	75 527 220	01 STOP LUG	RING-SEAL		79 03 065 115	04 DIAM INT 7,65	RP 6457 R1	01	79 03 065 116	02	RP 6457 R3	01	79 03 065 117	02 DIAM INT 10,82	RP 6457 R2	01	95 604 802	01 PROTECTOR LONG 300 P001 PVC	79 03 058 029	01 FLEXIBLE WASHER DIAM 7,2 X14,2X1,4	RP 6962 70	01	79 03 032 036	01 HEXAGONAL NUT DIAM 7X100	RP 6932 05	01	6457 Y3	01 CAUTION LABEL RECONVERSION DU VEHICULE AU R134A	6457 X0	01 WASHER RECONVERSION DU VEHICULE AU R134A	6457 V1	01 GASKET KIT RECONVERSION DU VEHICULE AU R134A
FREON TUBE																																																					
95 633 185	01 LON 1485																																																				
95 633 182	01 LON 1130																																																				
6457 X6	01 RECONVERSION DU VEHICULE AU R134A																																																				
95 638 739	01 LON 880 -GTI 16V																																																				
6457 X7	01 -GTI 16S RECONVERSION DU VEHICULE AU R134A																																																				
95 633 183	01 LON 380																																																				
95 638 738	01 LON 335 -GTI 16V																																																				
95 633 184	01 LON 1170																																																				
75 527 220	01 STOP LUG																																																				
RING-SEAL																																																					
79 03 065 115	04 DIAM INT 7,65																																																				
RP 6457 R1	01																																																				
79 03 065 116	02																																																				
RP 6457 R3	01																																																				
79 03 065 117	02 DIAM INT 10,82																																																				
RP 6457 R2	01																																																				
95 604 802	01 PROTECTOR LONG 300 P001 PVC																																																				
79 03 058 029	01 FLEXIBLE WASHER DIAM 7,2 X14,2X1,4																																																				
RP 6962 70	01																																																				
79 03 032 036	01 HEXAGONAL NUT DIAM 7X100																																																				
RP 6932 05	01																																																				
6457 Y3	01 CAUTION LABEL RECONVERSION DU VEHICULE AU R134A																																																				
6457 X0	01 WASHER RECONVERSION DU VEHICULE AU R134A																																																				
6457 V1	01 GASKET KIT RECONVERSION DU VEHICULE AU R134A																																																				



Engine Environment and Misc *Air conditioning, circuit*

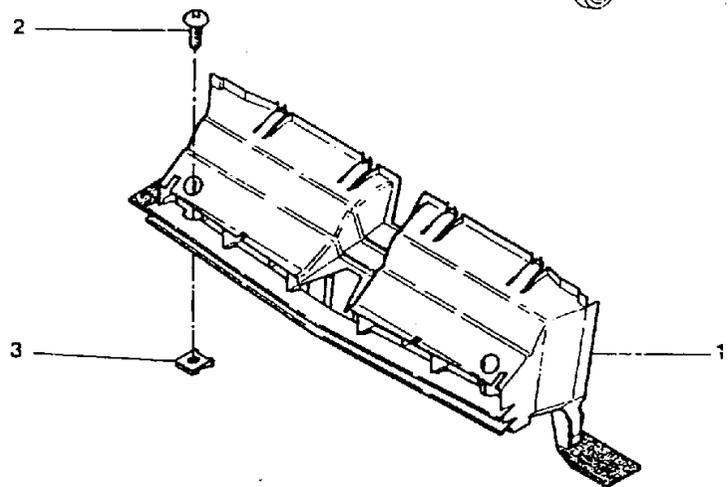
<p>30/01/98 GB F02 ↓ 1235 06 6411 10 PAGE 2</p>	<p>30/06/98 AIR CONDITIONER - CIRCUIT</p>		
<p style="text-align: center;">04/98 E641110C</p>		<p>15 95 581 409</p>	<p>01 PIPE GASKET</p>
<p style="text-align: center;">E6411100</p>			

Engine Environment and Misc *Air conditioning, blower*

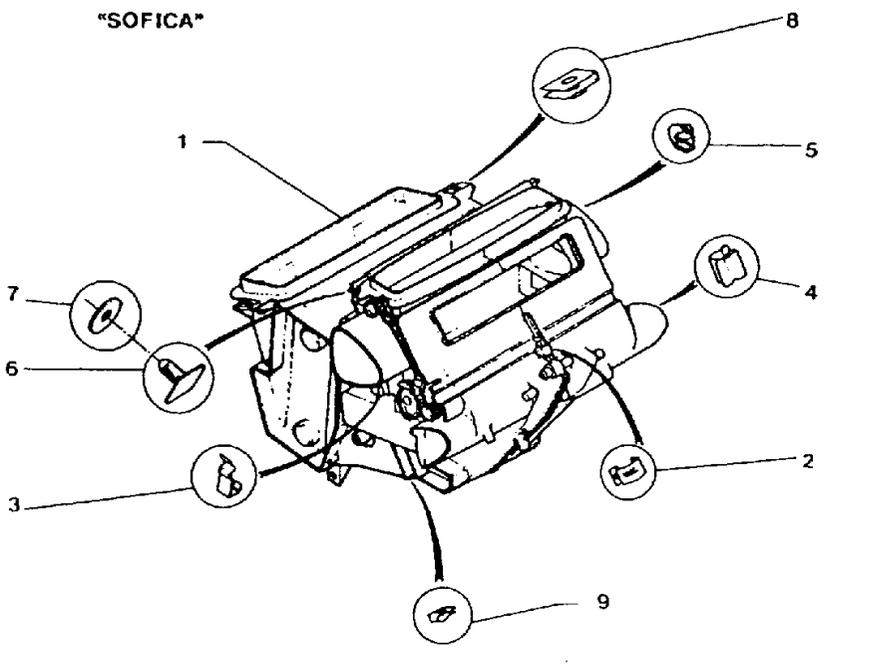
<p>30/01/98 GB F01 1235 06 6412 10 PAGE 1</p>	<p>30/06/98 AIR CONDITIONER - BLOWER UNIT</p>																																																																																																	
<p style="text-align: center;">02/92 E6412100</p> <p style="text-align: right;">E6412100</p>	<table border="1"> <tr><td>1</td><td>95 624 445</td><td>01</td></tr> <tr><td>2</td><td>95 599 382</td><td>01</td></tr> <tr><td>3</td><td>97 520 833 RP 6445 90</td><td>01</td></tr> <tr><td>4</td><td>95 538 910</td><td>02</td></tr> <tr><td>5</td><td>96 004 689</td><td>01</td></tr> <tr><td>6</td><td>GX 50 449 01A</td><td>03</td></tr> <tr><td>7</td><td>79 03 017 055 RP 6924 E4</td><td>06</td></tr> <tr><td>8</td><td>79 03 201 141 RP 6921 81</td><td>02</td></tr> <tr><td>9</td><td>79 03 053 025</td><td>02</td></tr> <tr><td>10</td><td>79 03 056 008 RP 6958 56</td><td>04</td></tr> <tr><td>11</td><td>79 03 053 031</td><td>04</td></tr> <tr><td>12</td><td>79 03 046 048</td><td>02</td></tr> <tr><td>13</td><td>79 03 046 076 RP 6943 23</td><td>02</td></tr> <tr><td>14</td><td>25 260 019 RP 79 03 232 016</td><td>02</td></tr> <tr><td>15</td><td>79 03 081 073 RP 6992 G2</td><td>01</td></tr> </table>	1	95 624 445	01	2	95 599 382	01	3	97 520 833 RP 6445 90	01	4	95 538 910	02	5	96 004 689	01	6	GX 50 449 01A	03	7	79 03 017 055 RP 6924 E4	06	8	79 03 201 141 RP 6921 81	02	9	79 03 053 025	02	10	79 03 056 008 RP 6958 56	04	11	79 03 053 031	04	12	79 03 046 048	02	13	79 03 046 076 RP 6943 23	02	14	25 260 019 RP 79 03 232 016	02	15	79 03 081 073 RP 6992 G2	01	<table border="1"> <tr><td colspan="3">BLOWER HOUSING</td></tr> <tr><td></td><td></td><td>LEFT</td></tr> <tr><td></td><td></td><td>RIGHT</td></tr> <tr><td></td><td></td><td>CONTROL MODULE</td></tr> <tr><td></td><td></td><td>PLUG</td></tr> <tr><td></td><td></td><td>FIXING BRACKET</td></tr> <tr><td></td><td></td><td>CLIP L 19X12 E 8</td></tr> <tr><td></td><td></td><td>MATERIAL SCREW TCBLZ 4-15</td></tr> <tr><td></td><td></td><td>CAPSCREW DIAM 6X1,00-25</td></tr> <tr><td></td><td></td><td>PLAIN WASHER 5X10-1</td></tr> <tr><td></td><td></td><td>SPRING WASHER 6,3X11</td></tr> <tr><td></td><td></td><td>PLAIN WASHER 6X18-1,2</td></tr> <tr><td></td><td></td><td>SPEED NUT</td></tr> <tr><td></td><td></td><td>4,2X11,8-9</td></tr> <tr><td></td><td></td><td>6X1,00</td></tr> <tr><td></td><td></td><td>HEXAGONAL NUT DIAM 6X1,00</td></tr> <tr><td></td><td></td><td>RETAINING CLIP DIAM 4,2</td></tr> </table>	BLOWER HOUSING					LEFT			RIGHT			CONTROL MODULE			PLUG			FIXING BRACKET			CLIP L 19X12 E 8			MATERIAL SCREW TCBLZ 4-15			CAPSCREW DIAM 6X1,00-25			PLAIN WASHER 5X10-1			SPRING WASHER 6,3X11			PLAIN WASHER 6X18-1,2			SPEED NUT			4,2X11,8-9			6X1,00			HEXAGONAL NUT DIAM 6X1,00			RETAINING CLIP DIAM 4,2
1	95 624 445	01																																																																																																
2	95 599 382	01																																																																																																
3	97 520 833 RP 6445 90	01																																																																																																
4	95 538 910	02																																																																																																
5	96 004 689	01																																																																																																
6	GX 50 449 01A	03																																																																																																
7	79 03 017 055 RP 6924 E4	06																																																																																																
8	79 03 201 141 RP 6921 81	02																																																																																																
9	79 03 053 025	02																																																																																																
10	79 03 056 008 RP 6958 56	04																																																																																																
11	79 03 053 031	04																																																																																																
12	79 03 046 048	02																																																																																																
13	79 03 046 076 RP 6943 23	02																																																																																																
14	25 260 019 RP 79 03 232 016	02																																																																																																
15	79 03 081 073 RP 6992 G2	01																																																																																																
BLOWER HOUSING																																																																																																		
		LEFT																																																																																																
		RIGHT																																																																																																
		CONTROL MODULE																																																																																																
		PLUG																																																																																																
		FIXING BRACKET																																																																																																
		CLIP L 19X12 E 8																																																																																																
		MATERIAL SCREW TCBLZ 4-15																																																																																																
		CAPSCREW DIAM 6X1,00-25																																																																																																
		PLAIN WASHER 5X10-1																																																																																																
		SPRING WASHER 6,3X11																																																																																																
		PLAIN WASHER 6X18-1,2																																																																																																
		SPEED NUT																																																																																																
		4,2X11,8-9																																																																																																
		6X1,00																																																																																																
		HEXAGONAL NUT DIAM 6X1,00																																																																																																
		RETAINING CLIP DIAM 4,2																																																																																																



Engine Environment and Misc *Bumper, radiator grille*

30/01/98 GB G02 ↑ 30/06/98 1235 06 6421 10 PAGE 1	HOOD AIR CHANEL													
														
		<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; text-align: center;">1</td> <td style="width: 60%;">95 595 734</td> <td style="width: 5%; text-align: center;">01</td> <td style="width: 30%;">HOOD AIR CHANNL</td> </tr> <tr> <td style="text-align: center;">2</td> <td>95 610 329 RP 6925 J0</td> <td style="text-align: center;">03 01</td> <td>BUMPER SCREW DIAM 6X 100-18</td> </tr> <tr> <td style="text-align: center;">3</td> <td>79 03 046 076 RP 6943 23</td> <td style="text-align: center;">03 01</td> <td>SPEED NUT 6X1,00</td> </tr> </table>	1	95 595 734	01	HOOD AIR CHANNL	2	95 610 329 RP 6925 J0	03 01	BUMPER SCREW DIAM 6X 100-18	3	79 03 046 076 RP 6943 23	03 01	SPEED NUT 6X1,00
1	95 595 734	01	HOOD AIR CHANNL											
2	95 610 329 RP 6925 J0	03 01	BUMPER SCREW DIAM 6X 100-18											
3	79 03 046 076 RP 6943 23	03 01	SPEED NUT 6X1,00											
1230	02/88 6-642-10	E6421100												

Engine Environment and Misc Heater unit

30/01/98 GB G03 ↑ 1235 06 6423 10 PAGE 1	30/06/98 HEATER UNIT	VALEO (THERMIQ)	
<p style="text-align: center;">"SOFICA"</p>  <p>1 230 [02/88] 6 642 2C</p>	1 95 619 489 2 GX 50 449 01A 3 79 03 076 124 4 ZC 9619 892 U 5 26 199 239 6 95 571 340 7 AM 644 69 8 79 03 046 054 NFP 9 79 03 046 048	01 HOUSINGS CLIP 11 L 19X12 E 8 02 L 25X10118 01 1T 9,5 PINC E1,5 01 1T 3 TROU 6 02 TAPPED PLATE 02 PLAIN WASHER DIAM 6,5 X 20-1,8 SPEED NUT 02 6X100-24,3-16,4 02 4,2X11,8-9	
E6423100			

Engine Environment and Misc *Heater unit, radiator*

30/01/98 GB G04 ↑ 1235 06 6425 10 PAGE 1	30/06/98 HEATER UNIT - RADIATOR																																																																							
<p style="text-align: center;">[01/92] E6 4 25 100</p> <p style="text-align: right;">E6425100</p>		1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	<table border="1"> <tr> <td>95 495 316</td> <td>01</td> <td>HEATER VALEO (THERMIQ)</td> </tr> <tr> <td>95 576 548</td> <td>01</td> <td>HEATER VALVE</td> </tr> <tr> <td>95 568 632</td> <td>01</td> <td>HTR WATER HOSE</td> </tr> <tr> <td>95 610 724</td> <td>01</td> <td>GASKET KIT ENS-DIAM 20X24 E 3.3</td> </tr> <tr> <td>95 568 633</td> <td>01</td> <td>HOUSING SEAL</td> </tr> <tr> <td>95 568 068</td> <td>01</td> <td>TOOTHED SECTION</td> </tr> <tr> <td>79 03 016 195</td> <td>02</td> <td>TAPPING SCREW DIAM 4,2X16</td> </tr> <tr> <td>RP 6910 89</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td></td> <td>CAPSCREW</td> </tr> <tr> <td>79 03 201 024</td> <td>01</td> <td>6X1,00-30</td> </tr> <tr> <td>RP 6922 03</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 001 666</td> <td>04</td> <td>4X70-48</td> </tr> <tr> <td>79 03 053 536</td> <td>04</td> <td>PLAIN WASHER 4X16-1</td> </tr> <tr> <td>RP 6947 89</td> <td>01</td> <td></td> </tr> <tr> <td></td> <td></td> <td>SPRING WASHER</td> </tr> <tr> <td>79 03 056 003</td> <td>04</td> <td>4,2X8-0,5</td> </tr> <tr> <td>RP 6958 54</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 056 008</td> <td>01</td> <td>6,3X11</td> </tr> <tr> <td>RP 6958 56</td> <td>01</td> <td></td> </tr> <tr> <td>79 03 053 031</td> <td>01</td> <td>PLAIN WASHER 6X18-1,2</td> </tr> <tr> <td>79 03 041 038</td> <td>04</td> <td>SQUARE NUT 4X70-4,5-10</td> </tr> <tr> <td>79 03 046 076</td> <td>01</td> <td>SPEED NUT 6X1,00</td> </tr> <tr> <td>RP 6943 23</td> <td>01</td> <td></td> </tr> </table>	95 495 316	01	HEATER VALEO (THERMIQ)	95 576 548	01	HEATER VALVE	95 568 632	01	HTR WATER HOSE	95 610 724	01	GASKET KIT ENS-DIAM 20X24 E 3.3	95 568 633	01	HOUSING SEAL	95 568 068	01	TOOTHED SECTION	79 03 016 195	02	TAPPING SCREW DIAM 4,2X16	RP 6910 89	01				CAPSCREW	79 03 201 024	01	6X1,00-30	RP 6922 03	01		79 03 001 666	04	4X70-48	79 03 053 536	04	PLAIN WASHER 4X16-1	RP 6947 89	01				SPRING WASHER	79 03 056 003	04	4,2X8-0,5	RP 6958 54	01		79 03 056 008	01	6,3X11	RP 6958 56	01		79 03 053 031	01	PLAIN WASHER 6X18-1,2	79 03 041 038	04	SQUARE NUT 4X70-4,5-10	79 03 046 076	01	SPEED NUT 6X1,00	RP 6943 23	01	
95 495 316	01	HEATER VALEO (THERMIQ)																																																																						
95 576 548	01	HEATER VALVE																																																																						
95 568 632	01	HTR WATER HOSE																																																																						
95 610 724	01	GASKET KIT ENS-DIAM 20X24 E 3.3																																																																						
95 568 633	01	HOUSING SEAL																																																																						
95 568 068	01	TOOTHED SECTION																																																																						
79 03 016 195	02	TAPPING SCREW DIAM 4,2X16																																																																						
RP 6910 89	01																																																																							
		CAPSCREW																																																																						
79 03 201 024	01	6X1,00-30																																																																						
RP 6922 03	01																																																																							
79 03 001 666	04	4X70-48																																																																						
79 03 053 536	04	PLAIN WASHER 4X16-1																																																																						
RP 6947 89	01																																																																							
		SPRING WASHER																																																																						
79 03 056 003	04	4,2X8-0,5																																																																						
RP 6958 54	01																																																																							
79 03 056 008	01	6,3X11																																																																						
RP 6958 56	01																																																																							
79 03 053 031	01	PLAIN WASHER 6X18-1,2																																																																						
79 03 041 038	04	SQUARE NUT 4X70-4,5-10																																																																						
79 03 046 076	01	SPEED NUT 6X1,00																																																																						
RP 6943 23	01																																																																							

Engine Environment and Misc Heating and ventilation control

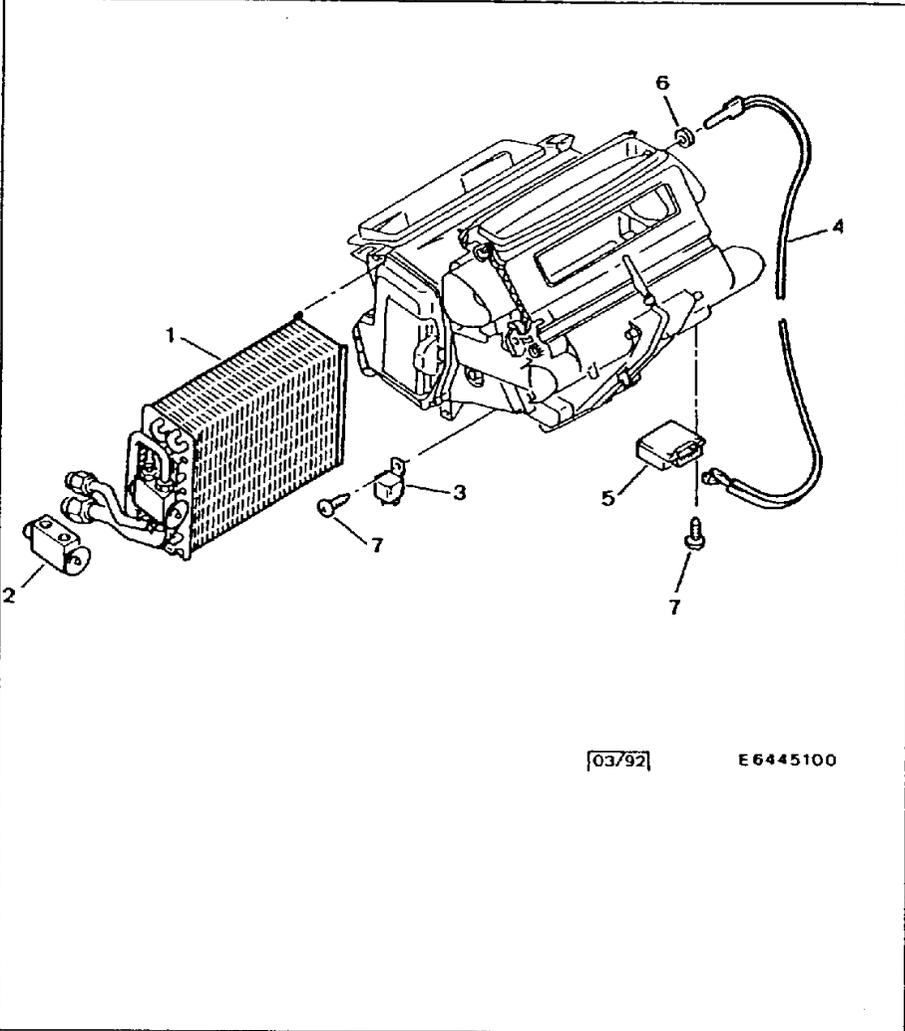
<p>30/01/98 GB G05 ↑ 1235 06 6431 10 PAGE 1</p>	<p>30/06/98 HEATING AND VENTILATION CONTROL</p>		
<p style="text-align: center;">[03/92] E6431100</p>		<p>1 95 646 314 01 2 95 619 540 LE 01 95 619 540 FTR 01 RP 95 619 540 TR 01 95 619 540 CH 01 95 619 540 FXX 01 RP 95 619 540 XX 01 3 95 631 882 LE 03 95 631 882 FTR 03 RP 6451 Z7 01 95 631 882 CH 03 95 631 882 FXX 03 RP 6451 Z8 01 4 95 624 499 01 5 95 631 880 LE 02 95 631 880 FTR 02 RP 95 631 880 TR 01 95 631 880 CH 02 95 631 880 FXX 02 RP 95 631 880 XX 01 6 95 631 881 02 7 95 631 879 01 8 95 577 256 01 9 95 581 846 02 10 96 019 777 01</p>	<p>01 CONTROL PLATE 01 CONTROL FACIA UP TO O 5618 01 01 01 01 01 01 03 CONTROL BUTTON UP TO O 5618 03 01 03 03 01 01 CABLE ASSEMBLY VALEO (THERMIQ) 02 CONTROL BUTTON UP TO O 5618 02 01 02 02 02 02 02 SPRING 01 HEATER RHEOSTAT 01 MICRO BREAKER LAR 6,35 LON 19,8 02 LAR 12,7 LON 19,8 01 COMPRESSOR POTNT LON 69 E 13</p>

Engine Environment and Misc Heating and ventilation control

<p>30/01/98 GB G06 1235 06 6431 10 PAGE 2</p>	<p>30/06/98 HEATING AND VENTILATION CONTROL</p>		
<p>[03/92] E6431100</p> <p>E6431100</p>		<p>11 96 995 038 RP 95 637 000</p> <p>12 79 03 097 003 RP 6216 48</p> <p>13 75 467 140</p> <p>14 75 522 624</p> <p>15 79 03 016 184 RP 6924 34</p> <p>16 79 03 017 055 RP 6924 E4</p>	<p>03 STOP CLIP 2 POS 01</p> <p>02 LAMP 01</p> <p>02 BOLS-HOLDER 02</p> <p>02 BRACKET 02</p> <p>02 TAPPING SCREW 4,2-9,5 01</p> <p>03 MATERIAL SCREW TCBLZ 4-15 01</p>



Engine Environment and Misc *Evaporator, pressure relief valve*

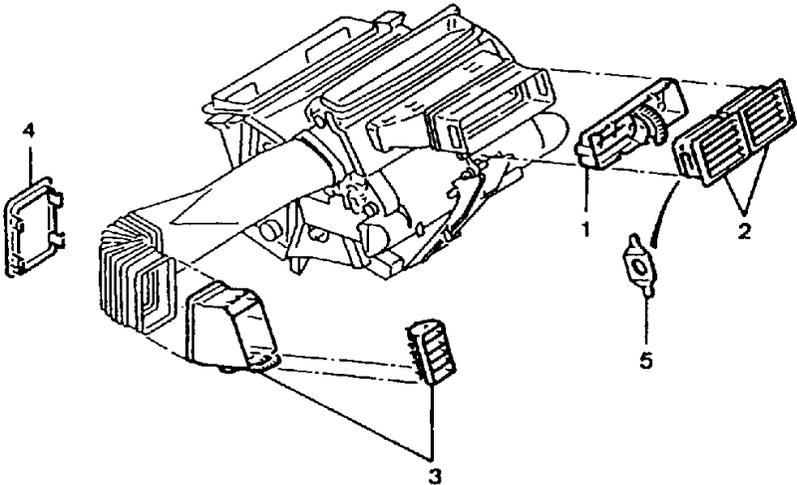
30/01/98 GB G07 ↑ 1235 06 6445 10 PAGE 1	30/06/98 EVAPORATOR - PRESSURE REDUCING VALVE	VALEO (THERMIQ)	
 <p style="text-align: center;">[03/92] E 6445100</p>		1 2 3 4 5 6 7	96 122 541 01 95 568 630 01 97 521 579 03 RP 6555 88 01 92 527 277 01 92 521 060 01 RP 6451 75 01 95 538 909 01 79 03 016 186 03 RP 6912 60 01 01 EVAPORATOR AVEC CHROMATATION 01 PRESS REL VALVE 03 ELECTRIC RELAY 01 01 VALVE PROBE 01 THERMOSTAT MARQUAGE JAUNE 01 01 GROMMET 03 TAPPING SCREW DIAM 4,2X16 01
E6445100			

Engine Environment and Misc *Ventilation ducts and nozzles*

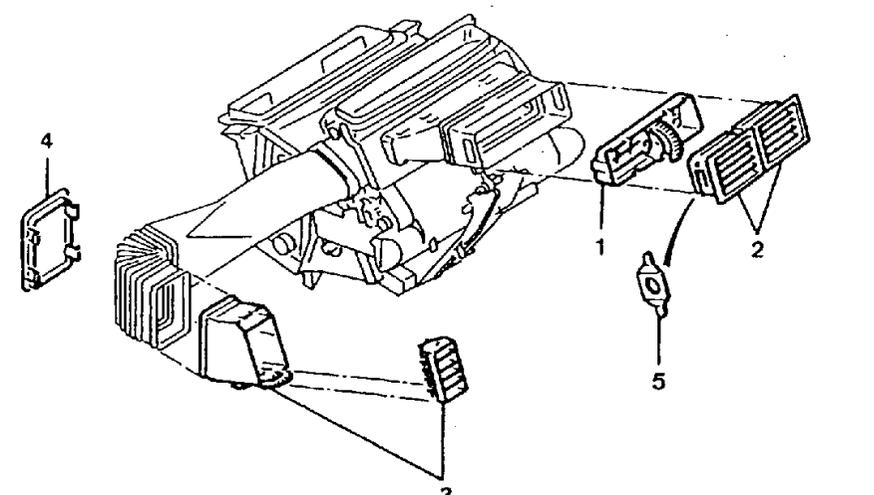
30/01/98 GB G08 ↑ 1235 06 6470 10 PAGE 1	30/06/98 VENTILATION DUCT AND NOZZLE		
		1 95 574 982 01 2 95 631 246 01 3 95 631 224 01 4 95 603 489 01 5 95 562 921 01 6 26 131 869 01 RP 6949 10 01	LOUVER CHANNEL LEFT LAT RIGHT LAT -LEFT HAND DRIVE RIGHT LAT -RIGHT HAND DRIVE CENT DEFROSTER NOZZL NOZZLE SEAL PLAIN WASHER 5X20-1,5
E6470100			



Engine Environment and Misc Ventilation box and ducts

30/01/98 GB G09 ↑ 30/06/98 1235 06 6482 10 PAGE 1	VENTILATION BOX AND DUCT		
 <p style="text-align: center;">10 93 D6482100</p>		1 95 631 225 FLE RP 95 631 225 LE 95 631 225 FTR RP 95 631 225 TR 95 631 225 CH 95 631 225 FXX RP 95 631 225 XX 2 95 631 226 FLE RP 95 631 226 LE 95 631 226 FTR RP 95 631 226 TR 95 631 226 CH 95 631 226 FXX RP 95 631 226 XX 3 95 634 775 FLE 95 634 775 FTL RP 95 634 775 TL 95 634 775 FCH NFP 95 634 775 FXX RP 95 634 775 XX 95 634 775 TR 95 631 251 FLE RP 95 631 251 LE 95 631 251 FTL RP 95 631 251 TL 95 631 251 FCH RP 95 631 251 CH	LOUVER BOX 01 CENT 01 UP TO O 5618 01 CENT 01 CENT 01 CENT 01 CENT 01 AIR DISTRIBUT 02 CENT 01 UP TO O 5618 02 CENT 01 02 CENT 02 CENT 01 01 LEFT LAT UP TO O 5618 01 LEFT LAT 01 01 LEFT LAT 01 LEFT LAT 01 01 LEFT LAT 01 RIGHT LAT 01 UP TO O 5618 01 RIGHT LAT 01 01 RIGHT LAT 01
L6482100		.../...	

Engine Environment and Misc *Ventilation box and ducts*

<p>30/01/98 GB G10 ↑ 1235 06 6482 10 PAGE 2</p>	<p>30/06/98 VENTILATION BOX AND DUCT</p>		
 <p style="text-align: center;">10 93 D6482100</p> <p style="text-align: right;">E6482100</p>		<p>3 95 631 251 FXX 01 RP 95 631 251 XX 01</p> <p>4 95 631 251 TR 01</p> <p>5 95 576 300 02</p> <p>75 513 108 99</p>	<p>AIR DISTRIBUT RIGHT LAT</p> <p>RIGHT LAT</p> <p>BULKHEAD PLUG</p> <p>CLIP DIAM 8</p>

Engine Environment and Misc Air inlets

30/01/98 GB G11 ↑ 1235 06 6486 10 PAGE 1	30/06/98 AIR INLET BOXES		
<p>1230</p> <p>02/88</p> <p>6 643-30</p>	1 2 3 4 5 6	AIR PULLER 02 -SALOON 02 -ESTATE COVERING 02 -SALOON 02 -ESTATE AIR PULLER SEAL 02 309X78 EP 12 -SALOON 02 426X56 EP 12 -ESTATE 04 SCREW CBLX DIAM 4,8 - 16 01 -SALOON 04 WASHER-SCREW TH6X1,00-25 01 -ESTATE 04 PLAIN WASHER 5X16-1,5 01 -SALOON 04 PLASTIC WASHER -ESTATE 04 SPEED NUT 5X14,8-9,4 -SALOON	
E6486100			


Appendix *Vehicle type*

VEHICLE TYPE

BX												'90 model year	
MODEL	SILHOUETTE	FINISH	LEVEL	MOTOR	CUBIC CAPACITY	GEARBOX	TYPE	STEERING	TYRES	BRAKES Front	BRAKES Rear	A.B.R.	
19 TRI	5 door saloon		4	XU9J1/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	
19 TZI	5 door saloon		4	XU9J1/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	
GTI	5 door saloon		5	XU9JA/Z	1905	Automatic	4HP14	Assisted	185/60 R14	Ventilated Disc	Disc	Option	
16 VALVE	5 door saloon		5	XU9J4/Z	1905	Mechanical	BE3	Assisted	195/60 R14	Ventilated Disc	Disc	Series	
19 TRI	5 door estate		4	XU9JA/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	
19 TZI	5 door estate		4	XU9JA/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	

BX												'91 model year	
MODEL	SILHOUETTE	FINISH	LEVEL	MOTOR	CUBIC CAPACITY	GEARBOX	TYPE	STEERING	TYRES	BRAKES Front	BRAKES Rear	A.B.R.	
16 TZI	5 door saloon		4	XU5M3/Z	1580	Automatic	4HP14	Assisted	165/70 R14	Ventilated Disc	Disc		
19 TZI	5 door saloon		4	XU9J1/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	
GTI	5 door saloon		5	XU9JA/Z	1905	Automatic	4HP14	Assisted	185/60 R14	Ventilated Disc	Disc	Option	
16 VALVE	5 door saloon		5	XU9J4/Z	1905	Mechanical	BE3	Assisted	195/60 R14	Ventilated Disc	Disc	Series	
19 TZI	5 door estate		4	XU9JA/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	

BX												'92 model year	
MODEL	SILHOUETTE	FINISH	LEVEL	MOTOR	CUBIC CAPACITY	GEARBOX	TYPE	STEERING	TYRES	BRAKES Front	BRAKES Rear	A.B.R.	
16 TZI	5 door saloon		4	XU5M3/Z	1580	Automatic	4HP14	Assisted	165/70 R14	Ventilated Disc	Disc		
19 TZI	5 door saloon		4	XU9J1/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	
GTI	5 door saloon		5	XU9JA/Z	1905	Automatic	4HP14	Assisted	185/60 R14	Ventilated Disc	Disc	Option	
16 VALVE	5 door saloon		5	XU9J4/Z	1905	Mechanical	BE3	Assisted	195/60 R14	Ventilated Disc	Disc	Series	
19 TZI	5 door estate		4	XU9JA/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	

BX												'93 model year	
MODEL	SILHOUETTE	FINISH	LEVEL	MOTOR	CUBIC CAPACITY	GEARBOX	TYPE	STEERING	TYRES	BRAKES Front	BRAKES Rear	A.B.R.	
16 TZI	5 door saloon		4	XU5M3/Z	1580	Automatic	4HP14	Assisted	165/70 R14	Ventilated Disc	Disc	Option	
19 TZI	5 door saloon		4	XU9J1/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	
GTI	5 door saloon		5	XU9JA/Z	1905	Automatic	4HP14	Assisted	185/60 R14	Ventilated Disc	Disc	Series	
16 VALVE	5 door saloon		5	XU9J4/Z	1905	Mechanical	BE3	Assisted	195/60 R14	Ventilated Disc	Disc	Series	
19 TZI	5 door estate		4	XU9JA/Z	1905	Automatic	4HP14	Assisted	175/65 R14	Ventilated Disc	Disc	Option	


Appendix *Paint colors*

1235 COLOUR CODIFYING GB		FYF	GREY	200	RED		
CODE	DESCRIPTION OF COLOUR	GR	GREY	700	BLACK		
		JN	YELLOW				
		JX	FURIO RED				
BA	WHITE	LD	MEDIUM SODALITE BLUE				
BE	BLUE	LE	DARK SODALITE BLUE				
CD	FAIR TOBACCO	LG	SODALITE BLUE				
CH	HAVANE BEIGE	MA	MED. SODAL. BLUE + DARK SODAL. BLUE				
CT	MAFIA BEIGE	MR	MAROON				
CU	FAIR TOBACCO + HAVANE BEIGE	NR	BLACK				
FCD	FAIR TOBACCO	RG	RED				
FCG	VIRGINIA BEIGE	TD	BLUISH GREY				
FCH	HAVANA BEIGE	TL	ASPHALT MEDIUM GREY				
FED	MAROON	TR	BITUMEN GREY				
FKT	RED	TS	MACADAM LIGHT GREY				
FLD	MEDIUM SODALITE BLUE	VE	GREEN				
FLE	DARK SODALITE BLUE	VV	ASPHALT MEDIUM GREY + BITUMEN GREY				
FLG	SODALITE BLUE	XL	BLACK + GREY				
FTD	BLUISH GREY	XX	BLACK				
FTH	ANTHRACITE GREY	XY	ONYX BLACK				
FTL	ASPHALT MEDIUM GREY	YB	TORNADO GREY				
FTR	BITUMEN GREY	YD	DARK GREY				
FTS	LIGHT GREY	YX	MEDIUM GREY				
FXX	BLACK	ZN	GREY				



Appendix Symbols

1235 SYMBOLS USED IN THE TEXT GB		E	THICKNESS	NFP	NO LONGER SUPPLIED
1 POS	FIRST POSSIBILITY	ECH	EXHAUST	OPTION	OPTIONAL
1E-2E	FIRST-SECOND GEAR	ELAS	FLEXIBLE WASHER	PORCOU	PORTE LATERALE COULISSANTE
A	AMPERE	ENS	PARTS SET	PORTLAT	PORTE LATERALE BATTANTE
ADM	INLET	ENT	DISTANCE BETWEEN CENTRES	PRETI	PRESTIGE
AH	AMPERE HOUR	EXT	EXTERNAL	PT	PRESTIGE
AR	REAR	FHC	COUNTERSUNK HEAD WITH HEX. GROOVE	Q	SQUARE NUT
ASS	ASSEMBLY	GLACE	EQUIPMENT WITH GLAZED SIDE PANELS	RAPVOL	VOLUMETRIC RATIO
AV	FRONT	GW	GROWER RING	REP	MARKING
BV	GEARBOX	H	HEIGHT	REPERE	ID. REF
BVA	AUTOMATIC GEARBOX	HC	HEX. GROOVE SCREW W/O HEAD	RMP	REPLACES PREVIOUS MODELS
BVM	GEARBOX (MANUAL CONTROL)	HE	HEXAGONAL	RP	SUPERSEDED BY
C	TWO-GEAR SET	HEF	SELF LOCKING NUT	SAUF	EXCEPT
CAGE	CAGE NUT	HEK	CASTELLATED NUT	SUP	UPPER
CAN	SPLINES	HEMB	NUT WITH LARGE BASE	TA	THREADCUTTER SCREW
CC	RUBBER	HERI	NUT WITH WASHER	TCA	SQUARE HEAD SCREW
GDE	CONTROL	HRDL	HEXAGONAL HEAD WITH WASHER	TCB	ROUNDED CYLINDRICAL HEAD
CENT	CENTRAL	INF	LOWER	TCF	SLOTTED CYLINDRICAL HEAD
CHC	SCREW WITH HEXAGON GROOVE	INT	INTERNAL	TF	COUNTERSUNK HEAD
CO	SHAKE-PROOF WASHER	INTM	INTERMEDIATE	TFB	ROUDED COUNTERSUNK HEAD
COL	SHOULDERED SCREW	KIT PRO	PARTS SET	TH	HEXAGONAL HEAD
CR	TOOTHED WASHER	LAR	WIDTH	THEMB	SCREW WITH LARGE HEAD
CU	COPPER	LAT	LATERAL	THRI	SCREW WITH WASHER
DENT	TEETH OR NOTCHES	LIM	LIMOUSINE	TO	RING SEAL
DEO	ORDER IN ADDITION	LIMOU	LIMOUSINE	TOLE	EQUIPMENT WITH UNGLAZED SIDE PANELS
DIAM	DIAMETER	LON	LEIGHT	TPB	SCREW WITH ROUNDED HEAD
		M.AR	REVERSE		



Appendix Symbols

1235 SYMBOLS USED IN THE TEXT					
GB					
TR	ROUND HEAD				
TT	ALL TYPES				
TU	TURBO				
TU2	TURBO 2				
V	VOLT				
W	WATT				



Appendix *Cross reference, Engine and gearbox*

30/01/98 GB B04 ↑ 1235 PAGE 1			30/06/98			INDEX								
NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP
22 363 019	01-2410-20	14	91 504 836	01-1210-30	05	91 508 955	01-2255-15	01	91 517 722	01-1230-30	05	91 538 612	01-1120-30	02
22 470 009	01-1123-20	05	91 504 836	01-1210-40	06	91 508 955	01-2255-20	01	91 517 722	01-1230-20	05	91 538 612	01-1120-20	02
23 746 509	01-1140-20	26	91 504 836	01-1210-20	05	91 509 680	01-2255-10	03	91 517 760	01-1241-20	05	91 538 721	01-1210-40	01
23 746 509	01-1140-30	26	91 505 554	01-2221-30	14	91 509 682	01-1230-30	10	91 517 760	01-1241-10	05	91 538 722	01-1230-40	05
23 746 509	01-1140-40	27	91 505 554	01-2221-20	11	91 509 682	01-1230-20	10	91 517 964	01-1123-10	09	91 538 906	01-1122-30	04
23 752 019	01-1123-10	16	91 506 597	01-2221-20	04	91 509 685	01-1140-40	10	91 518 899	01-1210-30	01	91 538 925	01-1230-40	06
23 795 019	01-1210-40	16	91 506 597	01-2221-30	05	91 509 685	01-1140-30	10	91 518 971	01-1241-20	01	91 538 926	01-1230-40	07
25 260 019	01-1147-20	12	91 506 834	01-2221-30	11	91 509 685	01-1140-20	10	91 518 972	01-1241-20	02	91 539 063	01-1122-30	07
25 260 019	01-1145-10	79	91 506 834	01-2221-20	09	91 509 921	01-1242-10	01	91 519 594	01-1230-30	01	91 539 064	01-1122-30	08
25 260 019	01-2255-10	14	91 507 124	01-1140-20	03	91 509 922	01-1242-10	01	91 520 152	01-1140-20	05	91 539 066	01-1122-30	09
25 260 019	01-2255-15	16	91 507 124	01-1140-30	03	91 509 923	01-1242-10	01	91 520 243	01-1210-20	01	91 539 067	01-1122-30	10
25 260 019	01-2410-20	15	91 507 124	01-1140-40	03	91 509 924	01-1242-10	01	91 521 113	01-1140-20	11	91 539 129	01-1440-20	01
25 260 019	01-3357-20	12	91 507 345	01-1230-30	08	91 509 925	01-1242-10	01	91 521 113	01-1140-30	11	91 539 404	01-2255-15	07
26 158 199	01-1441-10	06	91 507 345	01-1230-20	08	91 509 926	01-1242-10	01	91 521 113	01-1140-40	11	91 539 406	01-1145-20	03
75 413 621	01-1120-20	04	91 507 487	01-1242-10	01	91 509 927	01-1242-10	01	91 535 017	01-1241-20	01	91 539 582	01-1140-40	08
75 413 621	01-1120-30	04	91 507 489	01-1242-10	01	91 509 928	01-1242-10	01	91 535 017	01-1241-10	01	91 539 711	01-1145-20	01
75 415 836	01-1120-30	03	91 507 489	01-1242-10	01	91 510 890	01-1210-20	08	91 535 019	01-1241-10	02	91 539 750	01-1123-20	01
75 415 836	01-1120-20	03	91 507 490	01-1242-10	01	91 510 590	01-1210-30	08	91 535 019	01-1241-20	02	91 539 867	01-2255-20	03
75 527 220	01-3357-20	04	91 507 491	01-1242-10	01	91 510 743	01-1140-20	08	91 535 610	01-1140-30	05	91 539 899	01-1145-20	02
91 000 370	01-1147-20	07	91 507 492	01-1242-10	01	91 510 743	01-1140-30	08	91 535 630	01-1140-30	07	91 540 028	01-1120-40	05
91 000 370	01-1210-20	10	91 507 493	01-1242-10	01	91 510 753	01-1145-10	75	91 535 630	01-1140-20	07	91 540 097	01-1123-10	11
91 000 370	01-1210-40	12	91 507 494	01-1242-10	01	91 511 288	01-1145-10	73	91 535 896	01-1241-20	04	91 540 236	01-1122-30	02
91 000 370	01-1210-30	10	91 507 495	01-1242-10	01	91 511 858	01-1120-30	05	91 535 896	01-1241-10	04	91 540 259	01-2255-15	04
91 000 374	01-1140-20	18	91 507 496	01-1242-10	01	91 511 858	01-1120-20	05	91 535 997	01-1242-10	01	91 540 298	01-1147-30	03
91 000 374	01-1140-30	18	91 507 497	01-1242-10	01	91 511 897	01-1123-10	08	91 535 998	01-1242-10	01	91 540 384	01-1210-40	11
91 000 632	01-1140-30	22	91 507 498	01-1242-10	01	91 512 174	01-1210-30	09	91 535 999	01-1242-10	01	91 540 503	01-1122-30	06
91 000 632	01-1140-20	22	91 507 499	01-1242-10	01	91 512 174	01-1210-20	09	91 536 000	01-1242-10	01	91 540 509	01-1122-30	03
91 000 632	01-1140-40	20	91 507 500	01-1242-10	01	91 512 734	01-1145-10	07	91 536 001	01-1242-10	01	91 540 644	01-1121-10	07
91 000 754	01-1120-20	06	91 507 501	01-1242-10	01	91 512 751	01-3357-10	07	91 536 002	01-1242-10	01	91 540 748	01-1241-30	01
91 000 754	01-1120-30	06	91 507 502	01-1242-10	01	91 512 793	01-1145-10	06	91 536 003	01-1242-10	01	91 540 782	01-1241-30	02
91 000 760	01-1123-10	17	91 507 503	01-1242-10	01	91 513 214	01-1440-10	04	91 536 004	01-1242-10	01	91 540 792	01-1121-10	05
91 000 760	01-1147-30	07	91 507 504	01-1242-10	01	91 513 214	01-1440-20	04	91 536 005	01-1242-10	01	91 540 843	01-1210-40	08
91 000 854	01-1230-20	09	91 507 505	01-1242-10	01	91 513 983	01-1241-10	08	91 536 006	01-1242-10	01	91 540 844	01-2221-30	06
91 000 854	01-1230-30	09	91 507 506	01-1242-10	01	91 513 983	01-1241-20	08	91 536 007	01-1242-10	01	91 540 905	01-1440-10	05
91 001 032	01-1140-40	22	91 507 507	01-1242-10	01	91 514 549	01-1123-20	03	91 536 008	01-1242-10	01	91 540 905	01-1440-20	05
91 001 032	01-1140-30	24	91 507 508	01-1242-10	01	91 515 138	01-1230-20	02	91 536 009	01-1242-10	01	91 540 905	01-1122-30	05
91 001 032	01-1140-20	24	91 507 509	01-1242-10	01	91 515 138	01-1230-30	02	91 536 154	01-1441-20	01	91 540 946	01-1145-10	03
91 001 034	01-1140-20	31	91 507 510	01-1242-10	01	91 515 386	01-1230-20	01	91 536 802	01-1440-10	04	91 540 947	01-1145-10	05
91 001 034	01-1140-30	33	91 507 511	01-1242-10	01	91 515 824	01-1145-10	10	91 537 031	01-3330-10	22	91 540 948	01-1145-10	04
91 001 034	01-1140-40	30	91 507 512	01-1242-10	01	91 515 824	01-1145-11	04	91 537 785	01-1230-30	01	91 541 013	01-1140-40	05
91 501 789	01-2255-15	02	91 507 513	01-1242-10	01	91 516 208	01-1230-20	03	91 538 271	01-1122-20	01	91 541 228	01-1241-30	07
91 501 789	01-2255-10	02	91 507 514	01-1242-10	01	91 516 208	01-1230-30	03	91 538 412	01-2255-10	04	91 541 229	01-1241-30	04
91 503 585	01-1210-20	07	91 507 515	01-1242-10	01	91 516 679	01-1440-10	01	91 538 412	01-2255-15	04	91 541 318	01-1230-40	02
91 503 585	01-1210-30	07	91 507 516	01-1242-10	01	91 516 731	01-1120-20	10	91 538 413	01-2255-15	05	91 541 324	01-2255-20	04
91 503 587	01-2221-20	05	91 507 517	01-1242-10	01	91 516 731	01-1120-30	10	91 538 413	01-2255-10	05	91 541 346	01-2255-20	09
91 504 095	01-1140-40	09	91 507 518	01-1242-10	01	91 517 101	01-1147-20	04	91 538 414	01-2255-15	06	91 541 347	01-1210-40	09
91 504 095	01-1140-30	09	91 507 518	01-1123-10	02	91 517 257	01-1120-30	11	91 538 416	01-2255-15	03	91 541 348	01-1210-40	10
91 504 095	01-1140-20	09	91 508 050	01-1230-20	07	91 517 257	01-1120-40	08	91 538 489	01-2255-15	13	91 541 478	01-1241-30	08
91 504 124	01-2221-20	06	91 508 050	01-1230-30	07	91 517 257	01-1120-20	11	91 538 611	01-1120-20	02	91 541 546	01-1215-30	06
91 504 124	01-2221-30	07	91 508 054	01-1122-20	02	91 517 339	01-1145-10	02	91 538 611	01-1120-30	02	91 541 547	01-1215-30	06
91 504 811	01-1241-10	06	91 508 955	01-2255-10	01	91 517 417	01-1145-10	02	91 538 611	01-1120-40	02	91 541 556	01-2255-20	06



Appendix *Cross reference, Engine and gearbox*

30/01/98 GB B05 ↑ 1235 PAGE 2			30/06/98			INDEX								
NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP
91 541 566	01-2221-30	08	95 567 239	01-3357-10	08	95 611 526	01-3357-20	08	95 636 664	01-2410-30	01	96 002 933	01-2221-20	02
91 541 566	01-2221-20	07	95 567 915	01-2410-20	06	95 611 985	01-3330-10	02	95 637 209	01-1441-30	02	96 003 302	01-3351-20	03
91 541 567	01-1145-10	09	95 572 129	01-1140-20	06	95 611 986	01-3330-10	08	95 637 747	01-3330-10	20	96 003 339	01-3351-20	08
91 541 648	01-1230-40	04	95 572 129	01-1140-30	06	95 611 987	01-3330-10	10	95 638 556	01-1123-20	09	96 004 150	01-1230-40	08
91 541 776	01-1145-20	08	95 572 129	01-1140-40	07	95 614 470	01-3330-10	16	95 638 747	01-2221-20	02	96 005 534	01-2255-15	03
91 541 777	01-1145-20	09	95 579 254	01-3358-10	10	95 614 471	01-3330-10	13	95 638 747	01-2221-30	02	96 005 606	01-1140-40	06
91 541 778	01-1145-20	04	95 579 683	01-1123-10	06	95 614 471	01-3331-10	10	95 639 045	01-3357-20	01	96 005 977	01-1120-20	13
91 595 257	01-1140-40	24	95 579 684	01-1123-20	06	95 614 472	01-3330-10	06	95 640 493	01-1123-10	07	96 005 977	01-1120-40	03
91 595 257	01-1140-30	28	95 579 684	01-1123-10	07	95 614 473	01-3330-10	07	95 641 125	01-1120-30	01	96 005 977	01-1120-30	13
91 595 264	01-1140-40	16	95 585 178	01-1122-20	03	95 614 474	01-3330-10	05	95 641 142	01-1215-10	01	96 005 978	01-1120-40	04
91 595 277	01-1230-40	11	95 585 433	01-2410-20	02	95 614 474	01-3331-10	06	95 641 147	01-1215-20	04	96 005 979	01-1120-20	15
91 595 279	01-1121-10	08	95 585 433	01-2410-30	07	95 614 476	01-3330-10	11	95 641 147	01-1215-30	03	96 005 979	01-1120-30	15
91 595 280	01-1140-40	19	95 587 296	01-1441-20	03	95 614 477	01-3330-10	15	95 641 147	01-1215-10	04	96 006 555	01-2255-15	06
91 595 295	01-1121-10	13	95 591 751	01-2410-30	05	95 614 478	01-3330-10	14	95 641 150	01-1123-10	01	96 007 553	01-1120-30	12
91 595 319	01-1230-30	11	95 591 751	01-2410-20	04	95 614 479	01-3330-10	17	95 641 483	01-1215-20	01	96 007 553	01-1120-40	06
91 595 319	01-1230-20	11	95 592 505	01-3358-10	07	95 614 480	01-3331-10	03	95 643 801	01-1140-40	01	96 007 553	01-1120-20	12
91 595 319	01-1230-40	15	95 592 530	01-2410-20	05	95 614 481	01-3331-10	09	95 643 806	01-1140-30	01	96 008 217	01-1440-10	02
91 595 336	01-1145-10	80	95 592 530	01-2410-30	09	95 614 483	01-3330-10	12	95 643 806	01-1140-20	01	96 008 837	01-3330-10	23
93 010 170	01-1123-10	10	95 593 547	01-2410-30	03	95 614 484	01-3331-10	02	95 643 847	01-1120-30	01	96 010 857	01-2221-30	10
93 010 240	01-1147-20A	05	95 593 548	01-2410-30	04	95 614 485	01-3331-10	07	95 643 847	01-1120-20	01	96 011 198	01-1140-40	25
93 501 323	01-2221-30	03	95 593 786	01-2410-20	07	95 614 486	01-3331-10	08	95 643 926	01-1123-10	01	96 012 197	01-2255-20	05
93 501 359	01-2221-30	04	95 597 355	01-3357-20	02	95 614 597	01-0010-30	02	95 643 946	01-1215-20	03	96 012 394	01-1241-30	05
93 501 368	01-2221-30	12	95 599 645	01-3357-20	03	95 614 597	01-0010-20	02	95 643 946	01-1215-10	03	96 012 462	01-3357-10	06
93 501 368	01-3330-10	09	95 601 148	01-3358-20	02	95 614 598	01-0010-20	03	95 644 132	01-1215-10	03	96 012 463	01-3357-10	04
93 501 396	01-1123-10	05	95 601 151	01-3358-20	11	95 614 598	01-0010-30	03	95 644 355	01-1140-20	01	96 012 603	01-2255-20	02
93 501 496	01-1230-40	19	95 601 159	01-3358-20	05	95 614 684	01-1440-20	06	95 644 355	01-1140-30	01	96 012 834	01-3351-20	09
93 501 496	01-1230-20	36	95 601 160	01-3358-20	03	95 614 684	01-1440-10	06	95 646 306	01-0010-40	01	96 012 927	01-1441-30	01
93 501 496	01-1230-30	36	95 601 164	01-3358-20	08	95 614 867	01-1215-20	01	95 646 307	01-1140-40	02	96 012 928	01-1441-20	01
93 501 565	01-1147-20	03	95 601 166	01-3357-20	06	95 614 874	01-3331-10	13	95 648 516	01-1140-30	02	96 013 227	01-3310-20	11
93 501 696	01-1123-10	12	95 601 820	01-2410-20	06	95 618 928	01-1120-40	01	95 650 883	01-0010-30	01	96 013 401	01-1147-20	01
93 501 722	01-2221-20	03	95 601 821	01-2410-20	07	95 619 442	01-3330-10	19	95 653 036	01-3351-20	01	96 014 376	01-3344-70	07
93 501 958	01-1123-20	02	95 603 164	01-2410-20	01	95 619 527	01-0010-30	01	95 654 057	01-1140-30	02	96 014 452	01-1140-40	08
93 501 985	01-1140-30	04	95 604 595	01-3358-20	01	95 619 640	01-3330-10	04	95 654 057	01-1140-20	02	96 014 452	01-1140-30	08
93 502 063	01-1140-30	16	95 606 688	01-3358-20	12	95 622 325	01-1122-30	01	95 654 088	01-0010-20	01	96 015 473	01-1230-40	09
93 502 063	01-1140-20	16	95 607 615	01-1241-20	06	95 624 091	01-2221-20	01	95 655 360	01-3330-10	03	96 015 476	01-1230-40	10
93 502 063	01-1147-30	04	95 608 293	01-2410-20	03	95 624 091	01-2221-30	01	95 656 566	01-2310-20	01	96 017 206	01-3357-10	10
93 502 226	01-1147-30	02	95 608 293	01-2410-30	06	95 624 942	01-1215-30	04	95 656 567	01-2310-30	01	96 017 606	01-3360-10	01
93 502 228	01-1123-20	04	95 609 084	01-3358-20	13	95 624 943	01-1215-30	01	95 656 567	01-2310-20	01	96 017 828	01-3430-40	09
93 502 228	01-1123-10	03	95 609 755	01-3357-20	05	95 625 018	01-0010-40	02	95 658 508	01-1140-20	02	96 018 108	01-3310-20	09
93 510 261	01-1147-20A	04	95 609 755	01-3330-10	29	95 625 019	01-0010-40	03	95 659 545	01-3330-10	03	96 019 896	01-3430-40	03
93 510 910	01-1210-20	02	95 609 905	01-3357-10	11	95 630 788	01-3358-20	09	95 659 546	01-3331-10	01	96 020 342	01-1215-30	05
93 510 910	01-1210-40	05	95 609 906	01-3358-10	05	95 631 202	01-3358-10	04	95 659 650	01-0010-20	01	96 020 369	01-3351-20	31
93 510 910	01-1210-30	04	95 609 908	01-3358-10	08	95 632 820	01-1441-20	02	95 662 976	01-0010-20	01	96 020 450	01-1121-10	06
95 020 518	01-3331-10	04	95 609 910	01-3358-10	06	95 633 789	01-3330-10	18	95 662 977	01-0010-30	01	96 020 713	01-1230-20	04
95 496 925	01-3330-10	01	95 610 656	01-3358-20	10	95 635 353	01-3310-20	08	95 662 978	01-0010-30	01	96 020 713	01-1230-30	04
95 544 138	01-3358-20	07	95 610 657	01-3358-20	14	95 635 573	01-1147-30	06	96 002 074	01-1145-20	05	96 020 742	01-1215-30	07
95 562 332	01-3358-20	06	95 610 719	01-3330-10	02	95 635 573	01-1147-20	13	96 002 516	01-1121-10	11	96 021 820	01-1147-30	01
95 562 698	01-3360-10	02	95 610 720	01-3330-10	08	95 635 681	01-3330-10	25	96 002 928	01-1140-20	19	96 022 323	01-1241-30	06
95 565 950	01-3331-10	11	95 610 721	01-3330-10	09	95 635 732	01-2410-30	08	96 002 928	01-1140-30	19	96 024 241	01-3430-40	02
95 567 217	01-3358-10	01	95 610 722	01-3330-10	10	95 636 441	01-3330-10	26	96 002 928	01-1140-40	17	96 024 627	01-3430-40	07
95 567 221	01-3358-10	03	95 610 799	01-3358-10	09	95 636 643	01-2410-30	02	96 002 928	01-2221-30	02	96 026 883	01-1230-40	03



Appendix *Cross reference, Engine and gearbox*

30/01/98 GB B06 ↑ 1235 PAGE 3			30/06/98			INDEX								
NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP
96 027 111	01-1441-30	01	96 064 444	01-1145-11	03	96 150 127	01-1210-30	14	97 532 121	01-3351-20	29	6962 50	01-1147-30A	07
96 029 207	01-1121-10	03	96 064 445	01-1145-11	02	96 150 128	01-1210-30	14	97 532 122	01-3351-20	13	77 03 009 016	01-1147-20	09
96 029 208	01-1121-10	04	96 065 786	01-3331-10	04	96 150 128	01-1210-20	14	97 532 278	01-3310-20	02	77 03 062 062	01-1140-30	13
96 030 532	01-3351-20	05	96 067 758	01-1120-30	10	96 150 128	01-1120-40	20	97 533 997	01-3430-40	04	78 01 015 000	01-1140-20	04
96 030 535	01-3351-20	06	96 069 933	01-1123-10	08	96 150 129	01-1210-40	20	97 534 314	01-3344-70	02	78 01 015 000	01-1140-40	04
96 030 539	01-3351-20	07	96 069 936	01-1123-10	09	96 150 129	01-1210-20	14	97 535 399	01-3346-40	02	78 30 197 000	01-1147-20	05
96 030 983	01-3300-10	01	96 071 597	01-3357-10	02	96 150 129	01-1210-30	14	97 535 402	01-3344-70	04	79 03 001 043	01-1145-10	71
96 031 464	01-1145-10	04	96 076 815	01-2255-10	07	96 150 130	01-1210-30	13	97 535 403	01-3344-70	05	79 03 001 081	01-2310-20	03
96 031 465	01-1145-10	05	96 076 918	01-2255-10	06	96 150 130	01-1210-20	13	97 599 108	01-1230-40	17	79 03 001 081	01-2310-30	03
96 031 466	01-1145-10	03	96 077 209	01-3346-40	14	96 150 130	01-1210-40	19	97 599 108	01-1145-20	06	79 03 001 126	01-2221-30	15
96 032 825	01-3346-40	01	96 077 252	01-3310-20	03	96 154 874	01-2221-30	04	97 599 211	01-1140-20	21	79 03 001 126	01-2221-20	12
96 032 965	01-3346-40	05	96 079 333	01-3300-10	01	96 158 120	01-1147-30	10	97 599 221	01-1210-40	15	79 03 001 427	01-1210-40	14
96 035 074	01-1241-20	07	96 080 792	01-3324-10	05	96 159 009	01-1122-30	02	97 599 221	01-1210-20	11	79 03 001 535	01-1123-10	18
96 035 074	01-1241-10	07	96 080 792	01-3430-40	11	96 160 145	01-1230-30	01	97 599 221	01-1210-30	11	79 03 001 603	01-1123-10	15
96 035 199	01-3351-20	16	96 080 793	01-3430-40	10	96 160 146	01-1230-20	01	97 599 241	01-3351-20	26	79 03 001 623	01-3324-10	13
96 035 199	01-3310-20	05	96 080 981	01-1123-10	01	96 995 075	01-3357-10	05	97 599 251	01-3351-20	22	79 03 001 657	01-3310-20	14
96 035 244	01-3351-20	18	96 081 724	01-3300-10	01	96 995 092	01-1145-10	70	SRV 000 017	01-2255-20	07	79 03 001 707	01-3324-10	11
96 035 536	01-1145-10	08	96 084 261	01-1441-10	02	96 995 797	01-1123-10	04	SRV 000 019	01-2255-20	07	79 03 001 708	01-1147-20	09
96 035 618	01-3330-10	27	96 086 334	01-1230-30	04	97 500 122	01-3310-20	04	SRV 000 019	01-2255-15	11	79 03 001 844	01-1140-20	28
96 037 671	01-3357-10	01	96 088 592	01-1123-20	08	97 500 132	01-3344-70	08	SRV 000 019	01-2255-10	08	79 03 001 851	01-1230-40	16
96 039 985	01-3351-20	11	96 089 138	01-1123-10	06	97 500 211	01-3324-10	02	ZF 04 351 552	01-2410-20	08	79 03 001 894	01-2410-30	12
96 042 101	01-1120-20	09	96 092 841	01-3324-10	09	97 500 278	01-3346-40	12	ZF 05 934 435	01-2410-20	12	79 03 001 894	01-2410-20	11
96 042 101	01-1120-30	09	96 097 701	01-2255-15	08	97 500 325	01-3346-40	09	00 42 790 300	01-1123-20	07	79 03 001 898	01-3314-10	07
96 042 653	01-1147-20	02	96 097 702	01-2255-15	10	97 500 328	01-3351-20	14	00 80 624 600	01-3351-20	27	79 03 001 920	01-1147-30	07
96 042 811	01-3346-40	08	96 100 168	01-1230-30	05	97 500 365	01-3324-10	02	00 80 624 600	01-3344-70	14	79 03 005 026	01-2410-30	13
96 042 956	01-2310-30	02	96 100 168	01-1230-20	05	97 500 373	01-3324-10	01	00 81 508 500	01-3346-40	16	79 03 008 012	01-1230-40	18
96 042 956	01-2310-20	02	96 100 346	01-2255-15	09	97 500 648	01-3430-40	01	01 0010 20	01-0010-20	03	79 03 009 002	01-3314-10	03
96 045 041	01-3331-10	05	96 100 415	01-3330-10	24	97 500 651	01-3430-40	01	0197 H6	01-0010-30	03	79 03 009 130	01-1123-20	11
96 045 186	01-1440-10	02	96 111 595	01-1441-10	01	97 500 652	01-3430-40	01	0197 H7	01-0010-30	02	79 03 009 256	01-1147-20	09
96 045 186	01-1440-20	02	96 117 376	01-3351-20	05	97 504 694	01-3324-10	04	0197 H7	01-0010-20	02	79 03 009 256	01-1230-30	31
96 045 254	01-3331-10	05	96 124 795	01-3358-20	10	97 504 707	01-1241-10	03	0197 J2	01-0010-40	03	79 03 009 256	01-1230-20	31
96 045 490	01-1140-40	26	96 124 994	01-1140-40	08	97 504 707	01-1241-20	03	0197 J3	01-0010-40	02	79 03 016 076	01-3358-20	17
96 045 640	01-1230-40	01	96 124 994	01-1140-30	08	97 504 735	01-3324-10	03	0209 L3	01-1120-20	02	79 03 016 150	01-1441-10	03
96 045 641	01-1230-40	01	96 124 994	01-1140-20	08	97 504 923	01-3344-70	13	0209 L3	01-1120-30	02	79 03 016 150	01-1441-20	05
96 049 753	01-3357-10	03	96 125 130	01-1145-11	05	97 505 109	01-3310-20	12	0242 81	01-1147-30A	05	79 03 016 150	01-1441-30	03
96 050 712	01-1440-20	03	96 127 435	01-1140-20	10	97 511 466	01-3344-70	09	0242 81	01-1147-20A	11	79 03 017 014	01-3358-20	15
96 050 712	01-1440-10	03	96 127 435	01-1140-30	10	97 511 920	01-3430-40	08	0301 F4	01-1147-20A	01	79 03 020 002	01-2410-30	11
96 051 895	01-1210-40	04	96 130 791	01-1140-30	12	97 511 946	01-3314-10	09	0301 F5	01-1147-30A	01	79 03 025 003	01-1122-30	11
96 052 662	01-1230-30	07	96 130 791	01-1140-20	12	97 512 501	01-3310-20	07	0301 F5	01-1147-30A	08	79 03 027 028	01-1121-10	12
96 052 662	01-1230-20	07	96 130 791	01-1140-40	12	97 512 714	01-3324-10	02	0311 18	01-1147-30A	03	79 03 027 047	01-1123-10	14
96 054 608	01-1441-10	01	96 134 237	01-3300-10	01	97 517 580	01-3351-20	10	0313 27	01-1147-30A	04	79 03 027 060	01-1230-20	30
96 054 867	01-1120-20	06	96 136 790	01-1145-11	06	97 517 612	01-3310-20	06	0323 15	01-1147-30A	02	79 03 027 060	01-1230-30	30
96 058 053	01-3351-20	12	96 146 748	01-1215-30	05	97 518 121	01-3430-40	05	05 22 395 100	01-3324-10	10	79 03 027 211	01-1120-30	08
96 058 681	01-1230-20	06	96 146 865	01-1147-20A	03	97 518 191	01-3324-10	04	1103 E5	01-2221-30	03	79 03 027 211	01-1120-20	08
96 058 681	01-1230-30	06	96 147 128	01-1147-20A	04	97 518 193	01-3324-10	03	3115 A8	01-3430-40	06	79 03 027 279	01-1147-20	08
96 058 681	01-1230-40	14	96 148 071	01-1147-20A	10	97 518 408	01-1140-40	12	6923 06	01-1147-20A	31	79 03 027 282	01-1120-20	07
96 059 593	01-1145-11	01	96 150 122	01-1210-30	14	97 518 408	01-1140-20	12	6923 09	01-3314-10	05	79 03 027 282	01-1120-30	07
96 059 593	01-1145-10	02	96 150 122	01-1210-20	14	97 518 408	01-1140-30	12	6928 02	01-1147-20A	30	79 03 027 298	01-3314-10	06
96 059 996	01-3357-20	07	96 150 122	01-1210-40	20	97 520 820	01-3351-20	21	6928 05	01-1147-30A	06	79 03 027 312	01-1122-20	04
96 060 896	01-1145-10	11	96 150 127	01-1210-40	20	97 521 729	01-1230-20	01	6932 15	01-1230-20	37	79 03 027 996	01-1123-10	13
96 060 935	01-1230-30	01	96 150 127	01-1210-20	14	97 531 278	01-1241-30	03	6932 15	01-1230-30	37	79 03 032 006	01-1145-10	78



Appendix *Cross reference, Engine and gearbox*

30/01/98 GB B07 ↑
1235
PAGE 4

30/06/98

INDEX

NUMERO	PAGE	REP												
79 03 032 017	01-1123-10	21	79 03 057 003	01-3314-10	08	79 03 067 023	01-1140-30	21	79 03 201 020	01-1145-10	72	94 00 117 790	01-1210-40	03
79 03 032 036	01-1120-20	18	79 03 057 003	01-3310-20	15	79 03 067 023	01-1140-20	21	79 03 201 020	01-1123-20	10	94 00 606 990	01-1215-20	02
79 03 032 036	01-1230-30	18	79 03 057 003	01-3324-10	14	79 03 067 023	01-1140-40	19	79 03 201 021	01-2255-10	12	94 02 209 318	01-3330-10	07
79 03 032 036	01-1230-20	38	79 03 057 005	01-3324-10	15	79 03 067 029	01-1123-10	22	79 03 201 021	01-2255-20	10	94 02 214 118	01-3331-10	09
79 03 032 109	01-1215-30	08	79 03 057 005	01-1120-20	17	79 03 067 033	01-3314-10	01	79 03 201 021	01-2255-15	14	94 02 221 178	01-3330-10	21
79 03 032 109	01-1215-20	05	79 03 057 005	01-1120-30	17	79 03 067 037	01-3351-20	24	79 03 201 023	01-2221-30	13	94 02 221 320	01-3310-20	10
79 03 032 109	01-1215-10	05	79 03 057 005	01-1121-10	17	79 03 067 038	01-3351-20	25	79 03 201 023	01-2221-20	10	94 02 228 108	01-3324-10	02
79 03 033 009	01-3358-20	21	79 03 057 005	01-1140-30	32	79 03 067 051	01-1121-10	09	79 03 201 039	01-3324-10	12	94 02 316 710	01-3344-70	01
79 03 034 004	01-3357-20	13	79 03 057 013	01-1145-10	76	79 03 067 051	01-1120-40	07	79 03 201 048	01-1230-30	32	94 02 323 660	01-3344-70	06
79 03 034 004	01-3358-10	18	79 03 057 013	01-1145-10	76	79 03 067 051	01-1120-40	07	79 03 201 048	01-1230-20	32	94 02 332 040	01-3346-40	03
79 03 034 070	01-3358-20	20	79 03 057 013	01-1123-20	12	79 03 067 063	01-3351-20	20	79 03 201 052	01-3357-10	09	94 02 333 120	01-3346-40	04
79 03 040 029	01-3344-70	10	79 03 057 013	01-1147-20	10	79 03 067 074	01-3351-20	23	79 03 201 054	01-3314-10	05	94 02 335 410	01-3344-70	03
79 03 040 029	01-3346-40	10	79 03 057 013	01-2221-30	16	79 03 067 104	01-3346-40	11	79 03 201 140	01-2410-20	10	94 02 353 310	01-3346-40	07
79 03 044 020	01-2410-30	15	79 03 057 013	01-2255-10	13	79 03 067 107	01-3358-20	04	79 03 201 140	01-2221-20	10	94 02 353 340	01-3346-40	06
79 03 044 020	01-2410-20	16	79 03 057 013	01-2255-20	11	79 03 067 116	01-1121-10	10	79 03 201 140	01-2221-30	13	94 02 519 450	01-3351-20	02
79 03 046 009	01-3358-20	19	79 03 057 013	01-2255-15	15	79 03 070 002	01-1230-40	13	79 03 201 140	01-1145-11	72	94 02 558 110	01-3351-20	04
79 03 053 028	01-3358-10	17	79 03 057 013	01-2221-20	13	79 03 070 005	01-1230-40	12	79 03 201 150	01-1121-10	15	94 02 570 370	01-3331-10	01
79 03 053 028	01-1122-20	05	79 03 057 013	01-1121-10	16	79 03 070 005	01-1210-40	07	79 03 201 150	01-3357-20	09	94 02 570 570	01-3331-10	01
79 03 053 043	01-3357-20	11	79 03 057 019	01-3358-10	16	79 03 070 005	01-1210-30	06	79 03 201 265	01-1145-20	70	94 02 570 758	01-3331-10	01
79 03 053 390	01-1120-30	16	79 03 057 021	01-1123-10	19	79 03 070 005	01-1210-20	06	79 03 201 265	01-2410-30	10	94 02 571 108	01-3330-10	28
79 03 053 390	01-1120-20	16	79 03 057 044	01-1147-20	11	79 03 075 007	01-1121-10	01	79 03 201 272	01-1145-11	70	94 02 579 488	01-3331-10	12
79 03 053 394	01-3357-10	12	79 03 057 044	01-1147-30	09	79 03 075 018	01-1121-10	02	79 03 201 747	01-1145-11	71	94 05 953 068	01-1440-10	05
79 03 053 425	01-3344-70	15	79 03 057 100	01-1230-20	33	79 03 075 066	01-1140-20	19	79 03 201 747	01-3324-10	11	94 557 379 80	01-3300-30	01
79 03 053 425	01-3351-20	28	79 03 057 100	01-1230-30	33	79 03 075 067	01-1140-20	19	79 03 201 758	01-1145-10	74	94 56 000 541	01-1210-30	03
79 03 053 430	01-3430-40	12	79 03 058 019	01-1210-40	18	79 03 075 067	01-1140-30	19	79 03 201 758	01-1140-30	29	94 56 000 541	01-1210-20	03
79 03 053 431	01-3430-40	12	79 03 058 028	01-1123-20	13	79 03 075 067	01-1140-30	19	79 03 201 781	01-3314-10	02	94 56 001 305	01-1241-10	09
79 03 053 432	01-3430-40	12	79 03 058 028	01-3357-20	10	79 03 075 099	01-1140-30	20	79 03 201 872	01-3314-10	04	94 56 001 305	01-1241-20	09
79 03 053 439	01-3346-40	13	79 03 058 057	01-1145-11	73	79 03 075 099	01-1140-40	18	79 03 233 002	01-1441-30	04	94 56 001 305	01-1241-30	09
79 03 053 442	01-3346-40	13	79 03 062 001	01-1140-20	14	79 03 079 095	01-2255-10	11	79 030 090 80	01-1147-30	08	94 56 001 306	01-1241-30	09
79 03 053 443	01-3346-40	13	79 03 062 001	01-1140-30	14	79 03 081 073	01-1441-10	07	79 030 090 80	01-1121-10	14	94 56 001 306	01-1241-20	09
79 03 053 444	01-3346-40	13	79 03 062 001	01-1140-40	14	79 03 081 073	01-1441-30	05	79 10 005 487	01-3358-10	12	94 56 001 306	01-1241-10	09
79 03 053 445	01-3346-40	13	79 03 062 002	01-1140-30	15	79 03 081 073	01-1441-20	04	79 10 017 318	01-1140-40	21	94 56 001 308	01-1241-10	10
79 03 053 446	01-3346-40	13	79 03 062 002	01-1140-20	15	79 03 085 044	01-2410-20	17	79 10 017 318	01-1140-30	23	94 56 001 308	01-1241-20	10
79 03 053 481	01-1230-20	35	79 03 062 003	01-1140-20	13	79 03 087 095	01-3324-10	09	79 10 017 318	01-1140-20	23	94 56 001 308	01-1241-30	10
79 03 053 481	01-1230-30	35	79 03 062 003	01-1140-40	13	79 03 090 022	01-3351-20	15	79 10 019 504	01-1210-20	12	94 56 001 309	01-1241-30	10
79 03 053 508	01-3358-10	15	79 03 062 003	01-1147-20	06	79 03 101 154	01-1120-20	14	79 10 019 504	01-1210-30	12	94 56 001 309	01-1241-20	10
79 03 053 514	01-1140-30	30	79 03 062 003	01-1147-30	05	79 03 101 154	01-1120-30	14	79 10 019 504	01-1210-40	17	94 56 001 309	01-1241-10	10
79 03 053 514	01-1140-20	29	79 03 062 014	01-3351-20	30	79 03 101 307	01-3346-40	15	79 10 023 759	01-3358-10	11	94 56 001 419	01-1241-10	11
79 03 053 515	01-3358-20	18	79 03 062 030	01-3310-20	13	79 03 101 392	01-1440-20	07	79 10 026 432	01-1140-20	25	94 56 001 419	01-1241-20	11
79 03 056 003	01-1145-10	77	79 03 065 008	01-3351-20	19	79 03 101 392	01-1440-10	07	79 10 026 432	01-1140-30	25	94 56 001 419	01-1241-30	11
79 03 056 008	01-2410-20	13	79 03 065 065	01-2255-15	12	79 03 101 393	01-3358-10	13	79 10 026 432	01-1140-40	23	94 56 001 422	01-1241-30	12
79 03 056 054	01-2410-30	14	79 03 065 065	01-2255-10	08	79 03 101 403	01-3358-10	14	79 10 034 230	01-2255-10	10	94 56 001 422	01-1241-20	12
79 03 057 002	01-2221-20	14	79 03 065 065	01-2255-10	09	79 03 101 473	01-2410-20	09	79 10 034 230	01-2255-15	13	94 56 001 422	01-1241-10	12
79 03 057 002	01-2221-30	17	79 03 065 130	01-3324-10	07	79 03 101 767	01-2221-20	12	79 32 584 061	01-1140-30	17	94 56 001 426	01-1215-10	02
79 03 057 003	01-1230-30	34	79 03 065 134	01-3324-10	08	79 03 101 767	01-2221-30	15	79 32 584 061	01-1140-40	15	94 56 001 561	01-1215-20	02
79 03 057 003	01-1230-20	34	79 03 066 095	01-3351-20	11	79 03 101 805	01-1140-30	27	79 32 584 061	01-1140-20	17	94 56 001 561	01-1215-30	02
79 03 057 003	01-1140-40	29	79 03 066 124	01-3344-70	17	79 03 101 805	01-1140-30	27	94 00 113 910	01-1210-40	02	94 560 033 80	01-1210-30	02
79 03 057 003	01-1140-30	31	79 03 066 197	01-3344-70	12	79 03 101 805	01-1140-20	27	94 00 113 910	01-1210-30	02	94 560 033 80	01-1210-20	02
79 03 057 003	01-1140-20	30	79 03 066 197	01-3344-70	12	79 03 101 805	01-1140-20	27	94 00 113 910	01-1210-20	02	94 560 033 80	01-1210-20	02
79 03 057 003	01-1147-20	11	79 03 067 009	01-1140-30	20	79 03 201 010	01-3358-20	16	94 00 117 790	01-1210-20	03	94 560 051 80	01-1120-40	02
			79 03 067 013	01-1210-40	13	79 03 201 011	01-1441-10	05	94 00 117 790	01-1210-30	03	94 560 051 80	01-1120-40	02
						79 03 201 013	01-1441-10	04						



Appendix *Cross reference, Engine equipment*

30/01/98 GB B04 ↑ 1235 PAGE 1			30/06/98			INDEX								
NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP
5 472 019	02-1419-40	03	91 541 738	02-1711-20	04	95 599 763	02-5320-10	01	95 636 700	02-1711-40	05	96 009 090	02-2120-10	03
5 472 019	02-1419-20	02	91 541 738	02-1711-40	04	95 602 185	02-2112-20	04	95 636 923	02-1711-40	06	96 009 090	02-2120-31	03
5 472 019	02-1419-30	03	91 541 740	02-1726-20	01	95 602 185	02-2112-21	04	95 638 397	02-1711-20	06	96 009 090	02-2120-20	03
25 223 019	02-1419-20	74	91 541 839	02-1810-30	01	95 602 188	02-2112-20	13	95 638 660	02-1726-30	03	96 009 090	02-2120-11	03
25 260 019	02-1716-10	06	91 595 090	02-1810-20	03	95 602 188	02-2112-21	12	95 638 661	02-1726-30	05	96 009 090	02-2120-30	03
26 162 899	02-1416-20	70	91 595 090	02-1416-20	15	95 602 227	02-3220-20	05	95 638 876	02-1419-30	02	96 010 113	02-1419-40	02
75 491 922	02-1710-10	05	91 595 090	02-1410-10	11	95 602 227	02-3220-11	05	95 640 497	02-1410-11	03	96 011 124	02-5324-30	02
75 528 989	02-5332-40	05	91 595 290	02-1810-20	05	95 602 227	02-3220-10	05	95 640 976	02-1416-40	07	96 011 847	02-1710-10	01
91 005 031	02-1716-10	01	91 595 290	02-1810-10	05	95 604 818	02-3220-10	02	95 643 991	02-1439-25	02	96 013 114	02-2120-10	02
91 005 281	02-1716-10	02	91 595 290	02-1810-30	05	95 604 818	02-3220-11	02	95 643 991	02-1439-30	02	96 014 184	02-5330-10	01
91 505 539	02-5331-20	01	92 528 222	02-1710-10	08	95 604 818	02-3220-20	02	95 643 991	02-1439-20	02	96 014 241	02-5324-30	01
91 508 644	02-5330-10	02	95 011 190	02-3220-20	04	95 608 785	02-5320-10	01	95 644 026	02-1439-20	03	96 015 940	02-1416-20	08
91 508 644	02-5330-20	01	95 011 190	02-3220-11	04	95 611 814	02-2120-31	06	95 644 027	02-1439-20	05	96 015 940	02-1416-40	04
91 510 845	02-5324-20	04	95 011 190	02-3220-10	04	95 611 814	02-2120-30	06	95 644 027	02-1439-25	05	96 015 959	02-1711-20	05
91 510 845	02-5324-30	05	95 568 777	02-3220-10	06	95 611 814	02-2120-10	05	95 644 027	02-1439-30	05	96 018 889	02-1416-20	07
91 512 913	02-1419-20	05	95 568 777	02-3220-11	06	95 616 038	02-3220-11	01	95 644 481	02-1439-30	03	96 021 053	02-2120-40	06
91 512 913	02-1419-30	08	95 568 777	02-3220-20	06	95 616 038	02-3220-10	01	95 644 483	02-1439-25	03	96 023 978	02-1716-11	02
91 514 613	02-1410-10	07	95 572 896	02-5332-30	04	95 616 724	02-5325-40	15	95 644 484	02-1439-30	06	96 024 614	02-2120-10	03
91 514 613	02-1410-11	08	95 572 905	02-5332-30	15	95 616 841	02-5332-30	13	95 650 879	02-1416-40	12	96 024 614	02-2120-30	03
91 516 814	02-1416-20	06	95 572 915	02-5332-30	08	95 618 183	02-5332-40	08	95 651 019	02-2118-10	03	96 024 614	02-2120-11	03
91 516 978	02-1416-20	13	95 581 543	02-5324-20	02	95 618 194	02-5332-40	07	95 651 019	02-2118-30	03	96 024 614	02-2120-20	03
91 516 979	02-1416-20	14	95 586 879	02-2120-40	05	95 618 200	02-5332-40	04	95 651 019	02-2112-30	03	96 024 614	02-2120-31	03
91 516 981	02-1416-20	12	95 586 920	02-2120-40	06	95 618 207	02-5332-40	06	95 653 086	02-3220-20	01	96 026 983	02-1439-20	01
91 517 208	02-1711-40	09	95 589 939	02-5332-40	02	95 618 396	02-2112-30	02	95 656 504	02-2112-30	04	96 028 464	02-1810-10	02
91 517 208	02-1711-20	08	95 589 941	02-5332-30	03	95 618 397	02-2112-30	06	95 656 572	02-5325-40	04	96 028 464	02-1810-20	02
91 518 232	02-2120-20	06	95 589 942	02-5332-30	01	95 618 786	02-1710-10	02	95 658 554	02-1439-30	04	96 028 466	02-1416-40	06
91 518 351	02-1419-30	06	95 589 943	02-5332-30	05	95 618 786	02-1711-20	02	95 658 554	02-1439-25	04	96 032 945	02-1419-40	04
91 518 593	02-1724-10	04	95 589 944	02-5332-30	06	95 618 786	02-1711-40	02	95 659 459	02-2112-21	02	96 035 027	02-2120-31	05
91 520 416	02-1810-20	01	95 589 945	02-5332-30	07	95 618 794	02-2112-20	11	95 659 459	02-2112-20	02	96 035 027	02-2120-30	05
91 535 633	02-2120-30	01	95 589 946	02-5332-30	09	95 618 795	02-2112-20	06	95 661 856	02-1416-20	11	96 035 027	02-2120-20	04
91 535 633	02-2120-20	01	95 589 947	02-5332-30	11	95 618 796	02-2112-20	07	96 000 783	02-5324-30	03	96 035 354	02-1416-20	05
91 536 077	02-1726-20	01	95 589 948	02-5332-30	12	95 619 492	02-2112-21	06	96 000 795	02-5324-30	04	96 035 354	02-1410-11	06
91 536 229	02-5324-20	01	95 589 949	02-5332-30	10	95 619 493	02-2112-21	07	96 000 971	02-3220-20	07	96 035 354	02-1410-10	05
91 536 682	02-1711-20	01	95 589 950	02-5332-30	14	95 619 498	02-2112-21	08	96 000 971	02-3120-40	07	96 035 470	02-1416-40	03
91 536 682	02-1711-40	01	95 589 951	02-5332-30	19	95 623 754	02-2120-10	09	96 002 516	02-1810-30	03	96 037 048	02-2120-30	02
91 536 807	02-1711-40	08	95 589 952	02-5332-30	16	95 623 754	02-1726-10	10	96 002 712	02-1416-40	01	96 038 183	02-2118-40	01
91 536 808	02-1711-40	10	95 589 953	02-5332-30	17	95 623 754	02-1716-11	05	96 003 087	02-1416-40	08	96 038 185	02-2118-40	03
91 538 083	02-1711-40	07	95 589 955	02-5332-30	02	95 623 754	02-2120-20	10	96 003 087	02-1416-20	10	96 038 953	02-1726-10	05
91 538 083	02-1711-20	07	95 590 351	02-5324-20	03	95 623 754	02-2120-11	07	96 003 907	02-1410-11	09	96 039 962	02-2120-40	03
91 538 218	02-1810-30	02	95 593 854	02-1419-30	01	95 623 754	02-2120-30	10	96 003 907	02-1410-10	08	96 040 166	02-3220-20	03
91 538 275	02-1724-11	04	95 593 854	02-1419-40	01	95 623 754	02-2120-31	15	96 004 440	02-1419-40	02	96 040 762	02-5331-20	01
91 538 877	02-1711-20	04	95 593 854	02-1419-20	01	95 623 758	02-1711-40	16	96 005 611	02-1726-30	02	96 040 824	02-2120-11	03
91 538 999	02-2118-40	02	95 596 207	02-1419-20	01	95 623 758	02-1711-20	14	96 005 700	02-1410-10	12	96 041 373	02-2118-30	01
91 539 050	02-1416-40	05	95 596 207	02-1419-40	01	95 624 501	02-3220-20	01	96 005 934	02-1724-10	02	96 041 737	02-1710-10	04
91 539 847	02-1416-20	01	95 596 207	02-1419-30	01	95 624 952	02-2112-30	05	96 006 109	02-1724-10	01	96 041 879	02-3220-20	09
91 540 299	02-1726-30	04	95 599 319	02-3220-20	10	95 624 985	02-2118-30	02	96 006 109	02-1724-11	01	96 041 879	02-3220-11	09
91 540 797	02-1726-30	01	95 599 319	02-3220-11	11	95 624 985	02-2118-10	02	96 006 110	02-1716-11	03	96 041 879	02-3220-10	09
91 540 972	02-1419-30	05	95 599 319	02-3220-10	10	95 632 508	02-1726-20	03	96 006 110	02-1716-10	03	96 042 439	02-2118-30	06
91 541 557	02-1726-30	08	95 599 406	02-3220-10	08	95 632 509	02-1726-20	02	96 007 707	02-1410-11	05	96 043 570	02-1416-20	07
91 541 568	02-1726-30	08	95 599 406	02-3220-11	08	95 633 026	02-1726-30	07	96 007 707	02-1410-10	04	96 044 923	02-1724-10	03
91 541 600	02-1416-40	02	95 599 406	02-3220-20	08	95 635 261	02-2120-10	04	96 008 857	02-1419-30	04	96 048 039	02-1726-10	01



Appendix *Cross reference, Engine equipment*

30/01/98 GB B05 ↑ 1235 PAGE 2			30/06/88			INDEX								
NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP
96 049 353	02-1410-10	01	96 111 900	02-1726-20	03	74 01 266 026	02-1416-20	11	79 03 053 372	02-5331-20	05	79 03 083 271	02-1711-40	14
96 052 160	02-3120-40	02	96 123 906	02-2120-40	03	77 03 032 095	02-1419-30	74	79 03 053 372	02-5331-10	03	79 03 083 271	02-1711-20	12
96 052 214	02-3120-40	10	96 127 996	02-1439-25	01	78 10 177 000	02-1416-20	18	79 03 053 392	02-5324-30	71	79 03 085 043	02-1416-40	13
96 053 199	02-1439-20	04	96 128 703	02-1439-30	01	78 10 177 000	02-1410-10	10	79 03 053 392	02-1810-30	04	79 03 085 045	02-1419-40	72
96 054 475	02-3220-10	03	96 134 097	02-1724-11	03	79 03 001 823	02-5324-20	05	79 03 053 392	02-1810-10	04	79 03 101 393	02-3120-40	08
96 054 475	02-3220-11	03	96 139 508	02-1724-11	02	79 03 001 708	02-2118-10	05	79 03 053 392	02-1810-20	04	79 03 101 758	02-1416-20	71
96 054 475	02-3220-20	03	96 146 090	02-1416-20	07	79 03 001 708	02-2118-30	07	79 03 053 510	02-1419-30	73	79 03 101 758	02-5331-20	04
96 054 867	02-1410-11	12	96 153 979	02-3120-40	02	79 03 001 885	02-1724-11	08	79 03 053 510	02-1419-20	72	79 03 201 002	02-1416-20	72
96 054 867	02-1810-20	03	96 995 449	02-1416-20	09	79 03 001 885	02-1724-10	07	79 03 053 510	02-1419-40	70	79 03 201 002	02-1416-40	16
96 054 867	02-1810-10	03	96 995 727	02-1416-40	09	79 03 006 015	02-2120-31	13	79 03 056 003	02-1416-40	20	79 03 201 020	02-2120-40	08
96 059 366	02-1710-10	03	97 500 379	02-3220-10	07	79 03 007 062	02-2120-40	09	79 03 056 064	02-1726-10	11	79 03 201 023	02-2118-40	70
96 059 366	02-1711-20	03	97 500 379	02-3220-11	07	79 03 007 062	02-2120-31	11	79 03 057 003	02-1416-20	74	79 03 201 032	02-5324-20	06
96 059 366	02-1711-40	03	97 500 379	02-3220-20	07	79 03 007 062	02-2120-30	07	79 03 057 005	02-1416-20	73	79 03 201 139	02-1711-20	13
96 081 368	02-1418-20	01	97 522 876	02-2120-20	04	79 03 007 062	02-2120-20	07	79 03 057 005	02-1410-11	16	79 03 201 139	02-1710-10	07
96 062 192	02-1439-30	07	97 530 780	02-2120-31	01	79 03 009 001	02-1416-40	17	79 03 057 005	02-1410-10	15	79 03 201 139	02-1711-40	15
96 062 192	02-1439-25	06	97 531 206	02-2120-10	01	79 03 009 014	02-1416-40	15	79 03 057 005	02-1419-30	72	79 03 201 140	02-1410-11	15
96 064 614	02-1439-20	06	97 531 206	02-2120-10	01	79 03 009 081	02-1416-40	14	79 03 057 100	02-5331-10	04	79 03 201 140	02-1410-10	14
96 065 088	02-1711-40	05	97 532 100	02-3120-40	05	79 03 009 248	02-5331-20	03	79 03 058 011	02-2118-30	08	79 03 201 149	02-1410-10	13
96 068 715	02-1726-10	02	97 532 831	02-2120-40	04	79 03 009 248	02-5331-10	02	79 03 058 028	02-2118-40	71	79 03 201 271	02-2120-11	05
96 068 986	02-1419-20	75	97 532 831	02-2120-31	04	79 03 027 006	02-2112-30	70	79 03 058 028	02-2118-10	06	79 03 201 271	02-1419-20	71
96 070 972	02-2120-31	07	97 532 831	02-2120-20	04	79 03 027 006	02-2112-21	17	79 03 058 028	02-1716-10	07	79 03 201 272	02-5324-30	70
96 070 994	02-2120-31	02	97 532 831	02-2120-30	04	79 03 027 006	02-2112-20	70	79 03 058 030	02-1410-10	16	79 03 201 747	02-3220-11	10
96 073 224	02-1726-10	06	97 533 794	02-2112-21	01	79 03 027 028	02-1416-40	11	79 03 058 030	02-1416-40	18	79 03 201 757	02-1410-11	14
96 073 225	02-1726-10	07	97 533 794	02-2112-30	01	79 03 027 312	02-2120-20	08	79 03 058 087	02-1419-20	73	79 03 201 759	02-2120-10	07
96 073 227	02-1726-10	04	97 533 794	02-2112-20	01	79 03 027 312	02-2120-31	12	79 03 061 122	02-2120-40	11	79 03 232 017	02-1416-40	21
96 074 054	02-2120-11	01	97 534 955	02-2120-20	02	79 03 027 312	02-2120-30	08	79 03 065 016	02-2112-21	14	79 03 232 017	02-1410-11	17
96 076 441	02-1726-10	03	97 535 465	02-2120-40	02	79 03 027 312	02-2120-10	06	79 03 065 016	02-2112-30	07	79 03 232 017	02-1416-20	75
96 076 821	02-1419-40	02	97 535 800	02-2118-10	01	79 03 032 006	02-5331-10	05	79 03 065 016	02-2112-20	15	79 03 232 017	02-1410-10	17
96 076 852	02-1419-30	02	97 599 140	02-1726-20	05	79 03 032 006	02-5331-20	07	79 03 065 122	02-1416-20	05	79 03 233 002	02-2120-10	10
96 080 658	02-1410-10	03	97 599 219	02-2120-31	10	79 03 032 017	02-5324-20	09	79 03 066 234	02-1419-30	71	79 03 233 014	02-1410-10	18
96 080 658	02-1410-11	04	97 599 241	02-3120-40	09	79 03 032 036	02-1416-20	76	79 03 066 995	02-1419-20	70	79 03 233 014	02-1410-11	18
96 081 767	02-1419-20	03	SRV 000 017	02-1726-30	09	79 03 033 009	02-2120-40	10	79 03 066 995	02-1419-40	71	79 10 011 595	02-1410-11	07
96 082 150	02-1419-20	03	SRV 000 018	02-1726-10	09	79 03 037 005	02-2112-30	71	79 03 067 034	02-5331-20	02	79 10 011 595	02-1416-20	03
96 084 499	02-2120-11	04	SRV 000 019	02-1726-30	10	79 03 037 005	02-2112-20	71	79 03 067 034	02-5331-10	01	79 10 011 595	02-1410-10	06
96 084 912	02-1419-20	06	SRV 000 021	02-1724-11	07	79 03 037 005	02-2112-21	18	79 03 067 051	02-1416-40	10	79 10 027 593	02-1416-20	17
96 085 306	02-3120-40	01	SRV 000 021	02-1724-10	06	79 03 037 010	02-5324-30	73	79 03 073 103	02-1419-40	06	79 10 032 930	02-2118-30	05
96 085 941	02-1716-11	04	SRV 000 023	02-1724-10	05	79 03 044 020	02-1711-40	17	79 03 073 103	02-1419-20	04	79 10 032 930	02-2112-30	09
96 085 941	02-1724-11	06	SRV 000 023	02-1716-10	04	79 03 044 020	02-1710-10	08	79 03 073 103	02-1419-30	07	79 10 032 930	02-2112-20	17
96 088 268	02-1410-11	13	SRV 000 023	02-1724-11	05	79 03 044 020	02-1711-20	15	79 03 073 147	02-1711-40	11	79 10 032 930	02-2112-21	16
96 088 270	02-1716-11	01	SRV 000 024	02-1711-40	12	79 03 044 050	02-1410-11	19	79 03 073 147	02-1711-20	09	91 514 880 80	02-2120-40	07
96 089 220	02-2120-11	03	SRV 000 024	02-1711-20	10	79 03 044 050	02-1410-10	19	79 03 073 147	02-1710-10	06	94 02 115 150	02-3120-40	04
96 090 882	02-3120-40	03	SRV 000 027	02-1716-10	05	79 03 053 012	02-5324-30	72	79 03 075 007	02-1416-20	02	94 05 720 678	02-5325-40	06
96 092 693	02-1410-10	02	0348 G4	02-1416-40	05	79 03 053 028	02-2120-31	14	79 03 075 018	02-1410-11	10	94 05 724 888	02-5325-40	05
96 094 933	02-2120-11	02	0349 E8	02-1810-30	02	79 03 053 028	02-2120-30	09	79 03 075 018	02-1410-10	09	94 05 724 888	02-5325-20	05
96 098 305	02-3120-40	02	0361 79	02-1416-20	01	79 03 053 028	02-2120-20	09	79 03 079 004	02-1410-11	11	94 05 725 888	02-5325-20	03
96 099 454	02-1810-10	01	1635 77	02-1416-20	07	79 03 053 039	02-2120-20	16	79 03 079 007	02-1419-30	70	94 05 725 888	02-5325-40	04
96 099 454	02-1810-20	01	1925 31	02-1711-40	07	79 03 053 039	02-5331-20	06	79 03 079 018	02-1726-20	04	94 05 725 908	02-5325-40	01
96 099 833	02-1410-11	01	1925 31	02-1711-20	07	79 03 053 041	02-5324-20	07	79 03 079 045	02-1726-10	08	94 05 725 908	02-5325-20	04
96 099 923	02-1410-11	02	5962 50	02-2120-11	03	79 03 053 046	02-2120-10	08	79 03 079 097	02-1419-40	05	94 05 727 368	02-5325-20	01
96 102 312	02-2120-11	06	73 65 052 000	02-2120-31	09	79 03 053 087	02-1416-40	19	79 03 083 208	02-1711-20	11	94 05 728 458	02-5325-20	11
96 111 899	02-1726-20	02	73 66 627 000	02-2120-31	08	79 03 053 122	02-5324-20	10	79 03 083 208	02-1711-40	13	94 05 728 458	02-5325-40	12



Appendix *Cross reference, Engine equipment*

30/01/98 GB B06 ↑ 1235 PAGE 3			30/06/98											
INDEX														
NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP
94 05 730 068	02-5325-40	13												
94 05 730 068	02-5325-20	12												
94 05 733 698	02-5325-20	07												
94 05 733 698	02-5325-40	08												
94 05 734 418	02-5325-40	16												
94 05 744 428	02-5325-40	09												
94 05 744 428	02-5325-20	08												
94 05 744 438	02-5325-20	09												
94 05 744 438	02-5325-40	10												
94 05 744 968	02-5325-40	07												
94 05 744 968	02-5325-20	06												
94 05 746 418	02-5325-40	14												
94 05 761 608	02-5325-40	11												
94 05 761 608	02-5325-20	10												
94 05 807 228	02-5332-40	01												
94 05 816 118	02-5332-40	09												
94 05 817 018	02-5332-20	01												
94 05 817 028	02-5332-21	01												
94 05 827 818	02-5332-20	06												
94 05 827 818	02-5332-21	06												
94 05 828 888	02-5332-20	05												
94 05 828 898	02-5332-21	05												
94 05 833 358	02-5332-30	18												
94 05 835 568	02-5332-40	03												
94 05 835 968	02-5332-20	03												
94 05 836 448	02-5332-20	02												
94 05 836 498	02-5332-21	02												
94 05 855 778	02-5332-21	04												
94 05 855 778	02-5332-20	04												
94 05 904 188	02-2112-21	09												
94 05 904 188	02-2112-20	09												
94 05 911 138	02-2112-20	10												
94 05 911 328	02-2112-20	08												
94 05 926 088	02-2112-20	14												
94 05 926 088	02-2112-21	13												
94 05 933 478	02-2112-21	05												
94 05 933 478	02-2112-20	05												
94 05 940 358	02-2118-10	04												
94 05 940 358	02-2118-30	04												
94 05 941 328	02-2112-21	03												
94 05 941 328	02-2112-20	03												
94 05 942 308	02-2112-20	12												
94 05 942 308	02-2112-21	11												
94 05 951 768	02-2112-21	10												
94 05 953 068	02-2112-20	16												
94 05 953 068	02-2112-21	15												
94 05 953 068	02-2112-30	08												
97 90 260 608	02-5325-40	02												
97 90 260 608	02-5325-20	02												
97 90 260 708	02-5332-21	03												



Appendix *Cross reference, Hydraulics and running gear*

30/01/98 GB B03 ↑ 1235 PAGE 1			30/06/98			INDEX											
NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP	NUMERO	PAGE	REP			
5 410 179	03-3921-10	06	5 508 766	03-4163-20	07	75 522 920	03-4163-20	07	95 499 137	03-3945-10	11	95 573 142	03-3944-10	12			
5 410 402	03-4351-10	14	5 508 768	03-4163-20	07	75 522 921	03-4163-20	07	95 499 138	03-3945-10	22	95 573 142	03-3944-12	12			
5 410 403	03-4351-10	12	5 508 770	03-4163-20	07	75 529 889	03-4425-11	08	95 499 139	03-3945-10	07	95 574 124	03-4345-10	08			
5 410 404	03-4351-10	10	21 073 009	03-3947-10	09	75 531 823	03-3930-10	03	95 499 140	03-3945-10	16	95 575 448	03-3946-10	17			
5 410 405	03-4351-10	09	21 889 009	03-3947-10	18	75 532 224	03-4221-10	04	95 499 148	03-3945-10	24	95 575 641	03-4370-10	10			
5 410 406	03-4351-10	08	22 707 009	03-3916-10	14	91 500 053	03-4220-10	14	95 499 149	03-3945-11	04	95 576 879	03-4345-10	15			
5 410 407	03-4351-10	07	22 709 009	03-3916-10	13	91 501 057	03-4220-10	10	95 499 196	03-3945-10	26	95 577 323	03-4347-10	08			
5 410 408	03-4351-10	06	23 452 319	03-3916-10	22	91 501 058	03-4220-10	10	95 534 068	03-4428-10	03	95 577 400	03-3946-10	04			
5 410 732	03-4351-10	11	23 746 509	03-4428-10	04	91 501 059	03-4220-10	10	95 536 696	03-3930-10	06	95 577 401	03-3946-10	05			
5 411 956	03-3947-10	14	24 826 009	03-4345-10	06	91 501 060	03-4220-10	10	95 558 565	03-4420-11	11	95 577 402	03-3946-10	14			
5 412 538	03-3916-10	10	24 826 009	03-4346-10	06	91 501 061	03-4220-10	10	95 559 360	03-4220-10	06	95 578 248	03-4351-10	03			
5 412 539	03-3916-10	08	24 831 009	03-3921-10	08	91 501 062	03-4220-10	10	95 563 031	03-4347-10	01	95 579 468	03-4345-10	11			
5 412 540	03-3916-10	06	24 880 009	03-3916-10	17	91 501 063	03-4220-10	10	95 563 033	03-4347-10	05	95 579 470	03-4345-10	12			
5 412 543	03-3916-10	15	24 881 009	03-3916-10	18	91 501 064	03-4220-10	10	95 563 385	03-4131-10	04	95 579 689	03-3944-12	10			
5 412 797	03-3916-10	09	24 887 009	03-3921-10	07	91 501 065	03-4220-10	10	95 563 922	03-4345-10	14	95 579 689	03-3944-10	10			
5 412 798	03-3916-10	07	24 890 009	03-3916-10	19	91 501 066	03-4220-10	13	95 563 928	03-4345-10	13	95 581 337	03-3946-10	06			
5 412 801	03-3916-10	12	25 355 019	03-4221-10	11	91 502 315	03-4220-10	08	95 564 975	03-4347-10	02	95 581 339	03-3946-10	08			
5 413 090	03-3946-10	01	25 358 019	03-4352-10	14	91 504 593	03-4352-10	07	95 565 790	03-4352-10	09	95 581 943	03-3946-10	10			
5 415 508	03-3921-10	05	26 140 919	03-4347-10	09	91 504 873	03-4221-10	03	95 565 794	03-4220-10	05	95 582 490	03-3946-10	11			
5 415 510	03-3921-10	03	26 141 629	03-3947-10	03	91 506 516	03-4426-10	08	95 565 801	03-4221-10	06	95 582 491	03-3946-10	12			
5 416 868	03-3916-10	11	26 141 639	03-3947-10	04	91 507 342	03-4420-11	09	95 565 802	03-4221-10	07	95 582 858	03-4347-10	07			
5 417 660	03-3942-10	19	26 158 339	03-4370-10	18	91 507 343	03-4420-11	05	95 566 391	03-4352-10	08	95 582 859	03-4347-10	06			
5 420 595	03-3916-10	06	26 189 549	03-3947-10	08	91 507 609	03-4163-20	07	95 566 392	03-4352-10	08	95 584 324	03-4163-20	07			
5 420 596	03-3916-10	05	26 192 359	03-4370-10	17	91 507 997	03-4220-10	12	95 566 393	03-4352-10	08	95 584 325	03-4163-20	07			
5 426 325	03-4370-10	03	26 197 759	03-4351-10	05	91 513 608	03-4425-11	07	95 566 394	03-4352-10	08	95 584 326	03-4163-20	07			
5 438 353	03-3941-10	15	26 197 909	03-3946-11	01	91 513 609	03-4425-11	06	95 566 395	03-4352-10	08	95 584 327	03-4163-20	07			
5 438 353	03-3943-10	12	26 197 999	03-3946-11	02	91 536 303	03-3912-10	04	95 566 649	03-4345-10	04	95 584 424	03-4420-11	06			
5 439 023	03-3946-10	02	26 198 259	03-3946-11	03	91 540 474	03-4161-11	06	95 566 652	03-4345-10	07	95 584 926	03-3946-10	13			
5 444 869	03-3945-10	01	26 199 449	03-3945-10	06	91 540 476	03-4161-11	06	95 567 065	03-4351-10	15	95 585 707	03-4412-10	11			
5 445 464	03-3930-10	08	26 199 569	03-3945-10	14	91 540 478	03-4161-11	06	95 567 065	03-3944-12	24	95 588 632	03-4220-10	04			
5 447 189	03-3941-10	17	26 199 999	03-3945-10	21	91 540 480	03-4161-11	06	95 567 065	03-3944-10	25	95 588 682	03-3916-10	01			
5 447 189	03-3942-10	21	26 208 089	03-3947-10	10	91 540 482	03-4161-11	06	95 567 431	03-3941-10	05	95 589 173	03-4370-10	02			
5 450 795	03-4351-10	04	26 208 159	03-3947-10	11	91 540 484	03-4161-11	06	95 567 435	03-3941-10	08	95 589 236	03-3912-10	01			
5 451 210	03-3944-12	22	26 208 169	03-3947-10	12	95 035 532	03-4220-10	03	95 567 450	03-3942-10	14	95 589 765	03-4428-10	01			
5 451 210	03-3944-10	23	26 212 599	03-4370-10	11	95 050 061	03-3921-10	04	95 567 450	03-3943-10	08	95 589 766	03-4425-11	03			
5 451 213	03-3944-10	24	26 212 819	03-3916-10	23	95 050 064	03-3921-10	01	95 567 451	03-3943-10	07	95 590 023	03-4131-10	02			
5 451 213	03-3944-12	23	26 213 549	03-4426-10	11	95 412 542	03-3916-10	04	95 567 451	03-3942-10	13	95 590 353	03-3913-10	02			
5 451 376	03-3916-10	02	26 214 429	03-3916-10	20	95 488 446	03-3930-10	11	95 567 452	03-3944-10	18	95 591 142	03-3944-10	26			
5 458 682	03-4163-20	04	26 230 579	03-3947-10	17	95 494 867	03-4163-20	06	95 567 472	03-3943-10	13	95 591 142	03-3944-12	25			
5 461 058	03-3930-10	13	26 235 579	03-3944-12	11	95 494 963	03-3921-10	09	95 568 520	03-4370-10	09	95 591 820	03-4420-11	19			
5 461 317	03-3930-10	12	26 235 579	03-3944-10	11	95 495 439	03-4420-11	03	95 568 521	03-4370-10	06	95 591 953	03-4163-20	02			
5 464 978	03-3930-10	04	75 413 089	03-3947-10	13	95 495 440	03-4420-11	03	95 568 525	03-4370-10	05	95 592 155	03-4425-11	05			
5 464 979	03-3930-10	09	75 426 224	03-3947-10	15	95 496 044	03-4420-11	02	95 568 527	03-4370-10	08	95 593 571	03-4425-11	02			
5 474 836	03-3942-10	20	75 426 224	03-3944-10	28	95 496 045	03-4420-11	02	95 568 737	03-4347-10	04	95 593 572	03-4425-11	02			
5 483 959	03-3930-10	02	75 438 350	03-3946-10	03	95 496 072	03-4420-11	04	95 568 748	03-4370-10	04	95 593 573	03-4425-11	10			
5 488 129	03-3930-10	10	75 472 408	03-4220-10	09	95 496 146	03-4220-10	03	95 571 695	03-4220-10	01	95 593 577	03-4412-10	09			
5 488 788	03-3930-10	05	75 491 339	03-4163-20	05	95 496 583	03-4161-11	01	95 571 696	03-4220-10	01	95 595 410	03-4420-11	10			
5 491 085	03-3930-10	01	75 491 339	03-4161-11	04	95 496 828	03-3941-10	14	95 572 354	03-4131-10	11	95 595 605	03-3943-10	17			
5 503 515	03-4161-11	03	75 515 788	03-3941-10	16	95 499 059	03-3945-10	27	95 572 462	03-3946-10	15	95 595 605	03-3942-10	26			
5 508 681	03-3930-10	07	75 518 905	03-3912-10	02	95 499 060	03-3945-10	02	95 572 463	03-3946-10	16	95 595 609	03-3944-10	06			
5 508 765	03-4163-20	06	75 522 918	03-4163-20	07	95 499 136	03-3945-10	12	95 572 469	03-3921-10	10	95 595 609	03-3944-12	06			